

CHEFREE AFW20

CHEFREE AFW20 Dual Air Fryer User Manual

Model: AFW20 | Brand: CHEFREE

INTRODUCTION

Thank you for choosing the CHEFREE AFW20 Dual Air Fryer. This 8L family-sized appliance is designed to simplify your cooking with its dual nonstick viewing window drawers and 8-in-1 smart multicooker functions. It allows for roasting, grilling, baking, dehydrating, and air frying with less oil, promoting healthier meals. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- The appliance features an auto shutoff protection upon basket removal for enhanced safety.

PRODUCT COMPONENTS

The CHEFREE AFW20 Dual Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Control Panel:** Full touch screen LED display for selecting functions, time, and temperature.
- **Dual Cooking Drawers (2x 4L):** Two independent nonstick drawers for cooking different foods simultaneously.
- **Viewing Windows:** Transparent windows on each drawer to monitor cooking progress without opening.
- **Crisper Trays:** Removable nonstick trays placed inside the drawers for optimal air circulation and crisping.
- **Power Cord:** For connecting the appliance to an electrical outlet.



Image: Front view of the CHEFREE AFW20 Dual Air Fryer, showcasing its two independent cooking drawers with food visible through the viewing windows.

Watch Amazing Happen

With ViewCook window, check in on your meals without losing heat.



Image: Angled front view of the CHEFREE AFW20 Dual Air Fryer, highlighting its sleek design and dual drawer configuration.



Full Touch LED Big-size Screen

8 functions for Air Fry, Roast, Bake, Broil, etc.
Explore more possibilities by saving your preferred time and temperature easily

Image: Side view of the CHEFFREE AFW20 Dual Air Fryer, showing its compact footprint.

SETUP AND FIRST USE

- Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
- Clean Components:** Wash the cooking drawers and crisper trays with hot, soapy water. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth.
- Placement:** Place the main unit on a stable, flat, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 15cm (6 inches) of space on all sides.
- Insert Trays:** Place the crisper trays inside the cooking drawers.
- Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated.
- Cool Down:** Allow the appliance to cool completely before its first actual cooking use.

OPERATING INSTRUCTIONS

Control Panel Overview

The CHEFREE AFW20 features a full touch screen LED display for intuitive control. The panel allows you to select cooking functions, adjust time and temperature, and utilize smart programs.



Image: Close-up of the CHEFREE AFW20's touch control panel, showing various function icons and digital displays for time and temperature.

Basic Operation

- Prepare Food:** Place your ingredients into one or both cooking drawers, ensuring not to overfill.
- Insert Drawers:** Slide the drawers firmly into the main unit until they click into place.
- Power On:** Press the Power button on the control panel.
- Select Function:** Choose one of the 8 pre-set cooking functions (Air Fry, Broil, Bake, Roast, Air Crisp, Dehydrate, Reheat, Grill) by tapping the corresponding icon.
- Adjust Settings:** Use the temperature and time adjustment buttons to set your desired cooking parameters. The LED display will show the current settings.
- Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
- Monitor Progress:** Utilize the transparent viewing windows and internal light to check on your food without opening the drawers.
- Shake Reminder:** Some programs may prompt a "Shake" reminder. Carefully remove the drawer, shake the contents, and reinsert to resume cooking.
- End of Cycle:** The air fryer will beep when the cooking cycle is complete. Carefully remove the drawers and transfer food to a serving dish.

Dual Zone Features

The CHEFREE AFW20 allows you to cook two different foods at different temperatures and times simultaneously, or to synchronize their finish times.

- Dual Cook:** Select different functions, temperatures, and times for the Left (L) and Right (R) drawers

independently.

- **Sync Finish:** This feature allows two different cooking programs to finish at the same time. Set the desired programs and times for both drawers, then press the "Sync Finish" button. The air fryer will automatically adjust the start time of the shorter program to ensure both finish together.



Image: The CHEFREE AFW20 demonstrating its dual cooking capability, with different foods (zucchini and chicken wings) being prepared in each basket with separate settings.

Using the CHEFREE App

Enhance your cooking experience by downloading the CHEFREE App. The app provides access to over 100 free online recipes, seasonal delights, and expert tips, helping you explore new culinary possibilities.



Image: A user interacting with the CHEFREE mobile application, which displays various recipes and cooking categories, demonstrating the app's utility for meal preparation.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your CHEFREE AFW20 Air Fryer. Always unplug

the appliance and allow it to cool completely before cleaning.

- Cooking Drawers & Crisper Trays:** Both the nonstick cooking drawers and crisper trays are dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Interior:** If the interior of the main unit needs cleaning, wipe it with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Heating Element:** Clean the heating element with a dry brush to remove any food residue.
- Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Image: A person placing a cooking basket from the CHEFREE AFW20 Air Fryer into a dishwasher, illustrating the ease of cleaning for its components.

TROUBLESHOOTING GUIDE

If you encounter any issues with your CHEFREE AFW20 Dual Air Fryer, please refer to the following common

problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; drawer not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking drawers are fully closed and clicked into place.
Food is not cooked evenly.	Overcrowding the basket; not shaking/flipping food.	Do not overcrowd the baskets. Cook in smaller batches if necessary. Shake or flip food halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the baskets and crisper trays thoroughly after each use. For high-fat foods, consider draining excess fat during cooking or adding a small amount of water to the bottom of the drawer to prevent smoke.
Food is not crispy.	Too much moisture; not enough oil (for certain foods).	Pat food dry before air frying. For some foods, a light spray of oil can help achieve crispiness. Ensure crisper tray is in place.
Appliance emits a burning smell.	Food residue on heating element; new appliance smell.	Unplug and allow to cool. Clean the heating element. If it's a new appliance, the smell should dissipate after a few uses. Ensure proper ventilation.

If the problem persists after trying these solutions, please contact CHEFREE customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	CHEFREE
Model Number	AFW20
Colour	Black
Product Dimensions	31.5 x 30.5 x 38 cm
Item Weight	7.8 kg
Capacity	8 litres (2 x 4L drawers)
Power / Wattage	2400 watts
Voltage	220 Volts
Material	Plastic, Aluminium

Feature	Detail
Auto Shutoff	Yes
Noise Level	50 dB
Special Features	Dual Zone Features, ViewCook Window, Energy Saving, 8-in-1 Smart Programmes

WARRANTY AND SUPPORT

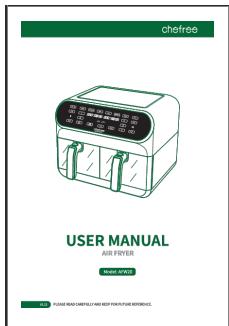
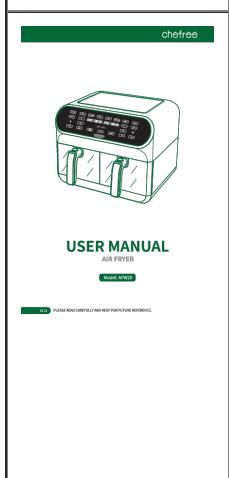
Your CHEFREE AFW20 Dual Air Fryer comes with a **2-Year Guarantee**. This warranty includes comprehensive repair services and free replacement for any broken parts, ensuring peace of mind and reliability.

For further assistance, troubleshooting, or to register your product, please visit the official CHEFREE website or contact their customer support. You can also find additional resources and recipes through the CHEFREE App.

Online Resources:

- CHEFREE Official Store: [Visit CHEFREE Store on Amazon](#)
- CHEFREE App: Download for recipes and tips.

Related Documents - AFW20

	<p>Chefree Air Fryer AFW20 User Manual Comprehensive user manual for the Chefree AFW20 dual-basket air fryer, covering safety precautions, operation, cooking functions, and cleaning.</p>
	<p>Chefree AFW20 User Manual: Your Guide to Dual Basket Air Frying Explore the Chefree AFW20 User Manual for detailed instructions on using your dual basket air fryer. Learn about cooking programs, safety, cleaning, and maintenance for optimal results.</p>



[Chefree AFG01 Air Fryer Grill User Manual](#)

Comprehensive user manual for the Cheffree AFG01 Air Fryer Grill. This guide provides detailed instructions on operating the appliance for various cooking functions including Air Fry, Roast, Air Broil, Bake, Fries, Beef, and Air Grill. It also covers important safety precautions, parts identification, display panel functions, cleaning procedures, and a troubleshooting guide. Learn how to maximize your cooking experience with this versatile kitchen appliance.