

Byserten B0BY1WDHS2

Byserten Handheld Game Instruction Manual

MODEL: B0BY1WDHS2

1. Introduction

The Byserten Handheld Game is an interactive electronic sensory toy designed to engage users in various challenges. It combines classic bubble-popping mechanics with electronic game modes, promoting positive thinking, hand-eye coordination, and memory skills. This manual provides detailed instructions for setup, operation, and maintenance of your device.

2. Features

- **Upgraded Educational Toy:** Combines classic press bubble game with fast electronic challenges. Engages users in positive thinking, hand-eye coordination, and brain training with lights and sounds.
- **4 Fun Game Modes:**
 - **Breakthrough Mode:** Remember randomly lit bubbles and press them quickly and correctly to pass each level.
 - **Memory Mode:** Observe the sequence of lit bubbles and press them in the same order.
 - **Scoring Mode:** Timed challenge to achieve the highest score.
 - **Multiplayer Mode:** Supports competitive play (level PK) with friends or family.
- **Interactive Fidget Toy:** Designed to keep users entertained, reduce screen time, and help focus. Acts as a stress reliever.
- **Safe Material & Excellent Design:** Made of high-quality silicone material. Features an ergonomic grip for comfortable holding. Portable size for on-the-go play. Adjustable volume with mute option.

Challenge Your Speed ⚡

Press the lighted bubble faster to break through the level



**Hand-eye
coordination**




**Response
capability**

Image: The game challenges speed, enhancing hand-eye coordination and response capability.

Memory Training

Observe the lit bubbles and press them in sequence

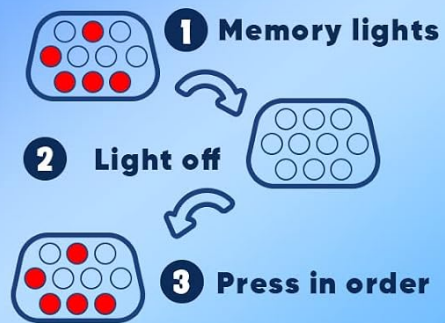

**Enhance
memory**



**Focus &
Concentration**



Image: Memory training mode, where users observe and press lit bubbles in sequence to enhance memory and concentration.



Brain Training

Improve your reaction speed
and memory, cultivate
concentration



Reduce Screen Time

Get hooked on challenges
keep you away from
your phone



Stress Reliever

Works great in reducing
Anxiety & Pressure.

Image: This educational toy aids in brain training, helps reduce screen time, and acts as a stress reliever.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment on the back of the device.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 AAA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image: The device requires 3 AAA batteries, which are not included. The battery compartment is located on the back.

3.2 Power On/Off

Press the **Power Button** (usually marked with a circle and a vertical line) located at the top center of the device to turn it on or off.

3.3 Volume Adjustment

Press the **Volume Button** (usually marked with a speaker icon) to cycle through different volume levels or to mute the sound.

4. Operating Instructions

4.1 Selecting a Game Mode

After powering on the device, press the **Mode Button** (usually marked with three horizontal lines) to cycle through the four available game modes: Breakthrough, Memory, Scoring, and Multiplayer. The device will announce the selected mode.

4.2 How to Play

1. Once a game mode is selected, the bubbles on the device will light up according to the game's instructions.
2. Press the lit bubbles as quickly and accurately as possible.
3. After successfully pressing the required bubbles, push the back cover of the device (the large panel on the back) to reset the bubbles and advance to the next level or round.
4. Continue playing until the game ends or you wish to switch modes.

How to Play?

Achieve challenge success by accurately pressing the lit bubbles as fast as possible



Quickly press lit bubble



Push back cover (enter next level challenges)

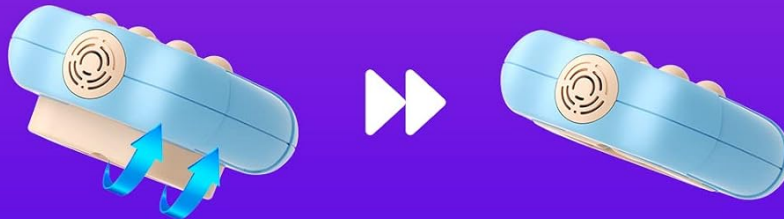


Image: Instructions on how to play, demonstrating pressing lit bubbles and then pushing the back cover to progress.

Come on, start the challenge!

Breakout Mode ⚡



Constantly challenge
your speed



Memory Mode 🧠



Sequentially extinguish
lit bubbles



Scoring Mode 🏆



Timed Challenge,
record scores



Multiplayer Mode 🏆



Take turns with other
partners for level PK



Image: Overview of the four game modes: Breakout, Memory, Scoring, and Multiplayer, each offering unique challenges.

5. Maintenance

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid submerging the device in water.

5.2 Storage

Store the game in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5.3 Battery Replacement

If the device's performance degrades (e.g., dim lights, distorted sound, unresponsive buttons), replace all 3 AAA batteries with new ones, following the installation steps in Section 3.1.

6. Troubleshooting

- **Device not turning on:** Ensure batteries are correctly installed and are not depleted. Replace with fresh batteries if necessary.
- **Buttons not responding:** Make sure you are pressing the lit bubbles firmly. Check battery levels.
- **No sound or low sound:** Adjust the volume using the Volume Button. Check battery levels.
- **Game freezes or behaves erratically:** Turn the device off and then on again. If the issue persists, replace the

batteries.

7. Specifications

Feature	Detail
Brand	Byserten
Model Number	B0BY1WDHS2
Color	Blue
Material Type	Plastic
Item Dimensions	4.9 x 2.16 x 3.93 inches
Item Weight	0.17 Kilograms
Age Range Description	Kid, Teens, Adult (Manufacturer Minimum Age: 36 months, Maximum Age: 144 months)
Educational Objective	Sensory
Power Source	3 AAA Batteries (not included)

8. Safety Information

- Adult supervision is recommended, especially for younger children.
- Keep small parts (like batteries) out of reach of young children to prevent choking hazards.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.
- Avoid dropping or subjecting the device to strong impacts.

9. Warranty and Support

For any questions, concerns, or support regarding your Byserten Handheld Game, please refer to the retailer's return policy or contact Byserten customer service through their official channels. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BY1WDHS2>

More documents and user manuals: <https://manuals.plus/>