

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Yabano](#) /

> [Yabano 3-in-1 Sandwich, Waffle, and Panini Maker Instruction Manual](#)

Yabano B0BY23TG57

Yabano 3-in-1 Sandwich, Waffle, and Panini Maker Instruction Manual

Model: B0BY23TG57

INTRODUCTION

Thank you for choosing the Yabano 3-in-1 Sandwich, Waffle, and Panini Maker. This versatile appliance is designed to simplify your meal preparation, offering three distinct cooking functions in one compact unit. With its interchangeable non-stick plates, you can easily prepare delicious sandwiches, fluffy waffles, or perfectly grilled paninis and other foods. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.
- There is no on/off switch; the unit must be unplugged when not in use.

- When cooking, pay attention to the temperature to prevent scalding.

PRODUCT OVERVIEW

The Yabano 3-in-1 appliance features a compact design with interchangeable plates for various cooking needs.



Image 1: The Yabano 3-in-1 Sandwich Maker, showcasing the main unit and the three types of interchangeable cooking plates: waffle, sandwich, and grill.

Key Components:


- **Main Unit:** Houses the heating elements and controls.
- **Indicator Lights:** Red light indicates power on, green light indicates preheating complete/ready to cook.
- **Cool-Touch Locking Handle:** Ensures safe handling and even heat distribution during cooking.
- **Temperature Control Dial:** Adjustable settings from 0 to 5 for desired cooking temperature.
- **Removable Non-Stick Plates:**

- **Sandwich Plates:** Designed to seal and cut sandwiches into triangles.
- **Waffle Plates:** For making classic waffles.
- **Grill Plates:** Ideal for grilling paninis, meats, or vegetables.

3 SETS OF DETACHABLE HEATING PLATES



For steak,
chicken, etc

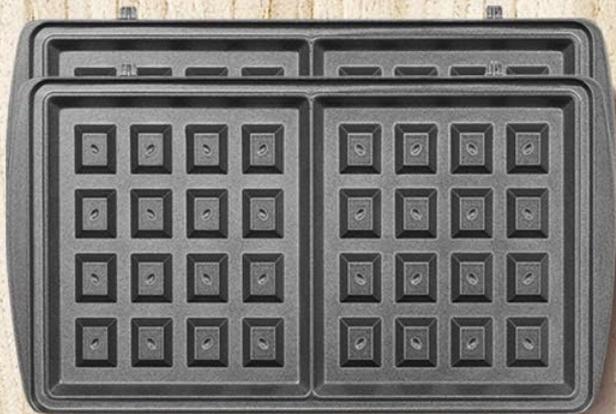

For waffle



For sandwich

Image 2: A visual representation of the three distinct sets of detachable heating plates: sandwich, waffle, and grill, each designed for specific food preparation.

800W

HIGH EFFICIENCY DOUBLE TUBE FEVER

—

This 800-watt sandwich maker makes it heat up faster and makes sandwiches much faster, takes only 3 minutes to reach 392 °F, save your time!



Image 3: Detailed view of the 800-watt high-efficiency double tube heating elements, illustrating the rapid heating capability of the appliance.

SETUP AND PLATE INSTALLATION

The appliance features easily detachable plates for quick changes between cooking functions.

1. Ensure the appliance is unplugged and cool before handling plates.
2. To remove plates: Locate the release buttons on the side of the unit (Image 4). Press the buttons and gently lift the plates out.
3. To install plates: Align the tabs on the plates with the slots in the main unit. Gently press down until the plates click securely into place. Ensure both top and bottom plates are correctly installed for the desired function.



01

DETACHABLE PLATE

Press the button on the lid,
you can

02

INDICATOR LIGHT

Power on and preheat
lights let you know when it's
time to cook.



Image 4: Shows the mechanism for detaching plates and the location of the indicator lights (power and ready) on the appliance.

Your browser does not support the video tag.

Video 1: This video demonstrates the process of changing the interchangeable plates on a 3-in-1 multi-maker, showing how to remove and install different plate types for various cooking functions.

OPERATING INSTRUCTIONS

- 1. Preheating:** Plug the appliance into a 110-120V power outlet. The red indicator light will illuminate, signaling that the unit is powered on. Allow the appliance to preheat until the green indicator light illuminates, indicating it is ready for cooking.
- 2. Temperature Control:** Use the dial on the front of the unit to select a temperature setting from 0 (off) to 5 (highest). Adjust according to your recipe and desired browning.
- 3. Cooking:**
 - Lightly grease the non-stick plates with cooking spray or butter if desired, though the non-stick coating generally prevents sticking.
 - Place your food (sandwich, waffle batter, meat, etc.) onto the bottom plate.
 - Close the lid and secure the cool-touch locking handle.
 - Cook for the recommended time or until desired doneness is achieved. The green light may cycle on and off during cooking to maintain temperature.
- 4. After Cooking:** Carefully open the lid using the cool-touch handle. Use a heat-resistant, non-metallic utensil to remove your cooked food.



Image 5: The sandwich maker in action, demonstrating the preparation of a toasted sandwich using the specialized sandwich plates.

GRIDDLE PLATE

Yabano 3 in 1 waffle maker

Comes with griddle plate
You can use it to make break-
fast, lunch and full dinner
Dont' need extra panini press
grill. Save your place



Image 6: The appliance configured with grill plates, illustrating its use for grilling items such as meat and shrimp.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Yabano 3-in-1 maker.

1. **Always unplug the appliance** and allow it to cool completely before cleaning.
2. **Cleaning Plates:** The non-stick plates are removable and can be easily cleaned. Wipe off any residue with a damp cloth or sponge. For stubborn food particles, soak the plates in warm, soapy water before cleaning. The plates are also dishwasher safe for convenience.
3. **Cleaning Main Unit:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Cord Storage:** The appliance features a convenient cord wrap on the underside for tidy storage (Image 7).



Image 7: Illustrates the compact and portable design of the sandwich maker, highlighting its ability to be stored upright with integrated cord storage.

TROUBLESHOOTING

- **Appliance not heating:** Ensure the unit is properly plugged into a working power outlet. Check if the red indicator light is on.
- **Food sticking to plates:** Ensure plates are clean and lightly greased before use. The non-stick coating may wear over time with heavy use; consider applying a thin layer of cooking oil or butter.
- **Uneven cooking:** Ensure the plates are correctly installed and the lid is fully closed and latched. Allow sufficient preheating time until the green light illuminates.

SPECIFICATIONS

- **Brand:** Yabano
- **Model:** B0BY23TG57
- **Special Feature:** Cool Touch, Non-Stick Coating, Removable Surface
- **Material:** Stainless Steel
- **Product Dimensions:** 10.35"D x 12.2"W x 5.35"H
- **Wattage:** 800 watts
- **Voltage:** 110-120 Volts
- **Number of Settings:** 3 (for plate types)
- **Item Weight:** 4.8 pounds

WARRANTY AND SUPPORT

This Yabano appliance comes with a limited warranty. Please refer to the product packaging or contact Yabano customer support for detailed warranty information and assistance.

Related Documents - B0BY23TG57

 <p>INSTRUCTION MANUAL Water Kettle MODEL KE4012</p>  <p><small>Please refer to the manual of the coffee maker. Please read the user manual for the coffee maker and keep it in a convenient place for future reference.</small></p>	<p>Yabano KE4012 Water Kettle Instruction Manual - User Guide</p> <p>Official instruction manual for the Yabano KE4012 Water Kettle. Learn how to safely operate, clean, and maintain your gooseneck kettle for perfect brewing.</p>
 <p>INSTRUCTION MANUAL Water Kettle MODEL KE4012</p>  <p><small>Please refer to the manual of the coffee maker. Please read the user manual for the coffee maker and keep it in a convenient place for future reference.</small></p>	<p>Yabano KE4012 Water Kettle Instruction Manual - Safety, Use, and Maintenance Guide</p> <p>Official instruction manual for the Yabano KE4012 Electric Water Kettle. Provides essential safety information, step-by-step usage instructions, cleaning and maintenance guidelines, and temperature settings for various beverages.</p>
	<p>User Manual: Portafilter Compatibility and Usage Guide</p> <p>Comprehensive user manual detailing portafilter compatibility with DeLonghi and other coffee machine models, usage instructions, troubleshooting tips, and frequently asked questions for optimal espresso preparation.</p>