

[Manuals.plus](#) /

› [charmast](#) /

› charmast Portable Charger W1148 User Manual

charmast W1148

charmast Portable Charger User Manual

Model: W1148

1. INTRODUCTION

Thank you for choosing the charmast Portable Charger, Model W1148. This slim 10000mAh power bank is designed for convenience and versatility, featuring built-in cables and multiple output/input options to keep your devices charged on the go. Please read this manual carefully before using the product to ensure safe and optimal performance.



Image: The charmast Portable Charger, Model W1148, in C-Blue color, showcasing its compact design and integrated cables.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Built-in Cables:** Includes 3 output cables (Lightning, USB-C, Micro USB) and 1 input USB-A cable for recharging, eliminating the need for extra cords.
- **Multiple Outputs & Inputs:** Features 6 total outputs (3 built-in cables + 3 additional ports) and 3 inputs (built-in USB-A, USB-C, Micro USB) for versatile charging and recharging.
- **10000mAh Capacity:** Provides ample power to charge smartphones and tablets multiple times.
- **Digital LED Display:** Clearly shows the remaining battery percentage.
- **Slim and Lightweight Design:** Highly portable, similar in size and weight to a mobile phone.

2.2 Components

Built in 4 Cables for All Devices



Image: The charmast power bank with its four built-in cables, illustrating their compatibility with iPhone, Android (USB-C), Micro USB devices, and for recharging the power bank itself via USB-A.

The power bank features integrated cables for various devices, including Apple Lightning, USB-C, and Micro USB for output, and a USB-A cable for input to recharge the power bank. This design ensures compatibility with a wide range of smartphones, tablets, and other portable electronics.

Ultra Slim and Lightweight



Image: A person holding the slim and lightweight charmast power bank in their pocket, demonstrating its portability. The image also shows its dimensions (5.68"x2.63"x0.69") and weight (0.55lb).

Its ultra-slim and lightweight profile makes it easy to carry in a pocket or bag, ideal for travel and daily use.

Check Remaining Battery Clearly



Image: The charmast power bank with its digital LED display illuminated, showing "100" indicating a full charge. This feature allows for clear monitoring of the remaining battery level.

The integrated digital LED display provides an accurate percentage of the remaining battery, allowing you to know exactly when to recharge the power bank.

3. SPECIFICATIONS

Feature	Detail
Model Number	W1148
Battery Capacity	10000 Milliamp Hours (mAh)
Battery Type	Lithium Polymer (2 included)
Product Dimensions	5.68 x 2.63 x 0.7 inches (144.34 x 66.9 x 17.7 mm)
Item Weight	8.5 ounces (240g)
Inputs	Built-in USB-A cable, USB-C port, Micro USB port
Outputs	Built-in Lightning cable, Built-in USB-C cable, Built-in Micro USB cable, 3 additional USB ports
Special Features	Built-in cables, Digital Display, Lightweight, Pocket Size, Slim
Color	C-Blue (for this variant)



Image: A diagram illustrating the dimensions of the charmast power bank: 14.4 cm length, 6.7 cm width, and 1.7 cm thickness.

4. SETUP

Upon receiving your charmast Portable Charger, it is recommended to fully charge it before first use to optimize battery performance and lifespan.

4.1 Initial Charge

1. Unpack the power bank from its packaging.

2. Connect the built-in USB-A input cable of the power bank to a compatible USB wall charger (not included) or a computer's USB port.
3. Alternatively, use a USB-C or Micro USB cable (not included) to connect to the respective input ports on the power bank for recharging.
4. The digital LED display will show the charging progress. Charge until the display reads "100".

5. OPERATING INSTRUCTIONS

5.1 Charging the Power Bank

The charmast Portable Charger offers three ways to recharge itself:

- **Via Built-in USB-A Cable:** Connect the integrated USB-A cable to a USB wall adapter or computer. A 10W wall charger will take approximately 6.0 hours for a full charge.
- **Via USB-C Input:** Use a USB-C cable (not included) to connect to the USB-C input port. A 15W USB-C wall charger will take approximately 4.5 hours for a full charge.
- **Via Micro USB Input:** Use a Micro USB cable (not included) to connect to the Micro USB input port. A 10W wall charger will take approximately 6.0 hours for a full charge.

Ensure your wall charger block provides at least 10 Watts (for Micro USB/Built-in USB-A) or 15 Watts (for USB-C) for optimal charging speed.

Choose Recharging Way You Like



Image: Illustrations showing the three methods to recharge the power bank: via the built-in USB-A cable, via the 10W Micro USB input, and via the 15W USB-C input, along with their approximate charging times.

5.2 Charging Devices

The power bank can charge up to 6 devices simultaneously using its various output options:

- **Built-in Cables:** Use the integrated Lightning, USB-C, or Micro USB cables to directly connect to your compatible devices.
- **Additional USB Ports:** Utilize the extra USB-A output ports on the power bank with your own charging cables for

other devices.

Simply plug your device into the appropriate output port or built-in cable. The power bank will automatically begin charging. The digital display will show the remaining battery percentage of the power bank.

Up to 6 Devices Charging Simultaneously

$$1 \times \text{Ⓜ} + 2 \times \text{Ⓢ} + 3 \times \text{Ⓜ} = 6 \times \text{Ⓜ}$$



Image: The charmast power bank simultaneously charging multiple devices, including smartphones, a tablet, and a Bluetooth speaker, demonstrating its capability to charge up to six devices at once.

USB C IN & OUT




charmast USB C




Other USB C

Image: A close-up view of the charmast power bank's USB-C port, highlighting its dual functionality for both input (recharging the power bank) and output (charging a device).

6. MAINTENANCE AND CARE

- **Regular Charging:** To maintain battery health, fully charge the power bank at least once every three months, even if not in regular use.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use liquid cleaners or aerosols.
- **Avoid Physical Damage:** Do not drop, hit, or subject the power bank to strong impacts.
- **Keep Dry:** Do not expose the power bank to water or other liquids.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Loose connection, faulty cable/adaptor, power bank fully charged.	Check all connections. Try a different cable or wall adapter. Verify the digital display; if it shows "100", it is fully charged.
Power bank charges slowly	Low-power adapter, using a non-fast charging port.	Ensure your wall adapter meets the recommended wattage (10W for Micro USB/Built-in USB-A, 15W for USB-C). Use the appropriate input port for faster charging.
Device not charging from power bank	Power bank low/empty, loose connection, incompatible device.	Check power bank's battery level on the digital display. Ensure cables are securely connected. Verify device compatibility with the power bank's output types.
Digital display not working	Power bank off, internal issue.	Press the power button to activate the display. If the issue persists, contact customer support.

8. SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to the product or injury to yourself:

- Do not disassemble, open, or attempt to repair the power bank.
- Do not expose to extreme temperatures (above 45°C/113°F or below -10°C/14°F).
- Keep away from water, moisture, and flammable materials.
- Do not dispose of the power bank in fire.
- Keep out of reach of children.
- Use only compatible and certified charging cables and adapters.
- If the power bank swells, emits an odor, or becomes excessively hot, discontinue use immediately and contact customer support.



Image: A visual warning indicating that the power bank should not be exposed to water or used near sinks.

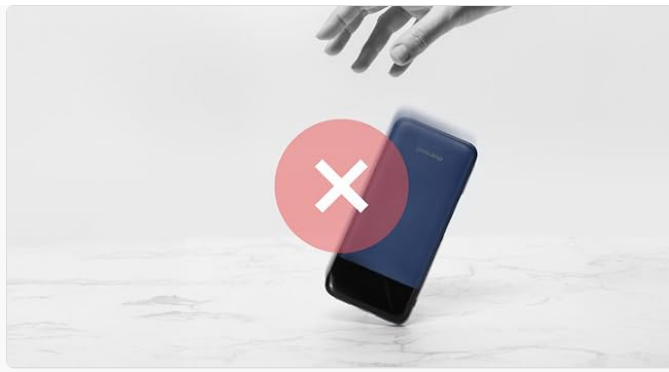


Image: A visual warning indicating that the power bank should not be dropped or subjected to impacts.

9. WARRANTY AND SUPPORT

Your charmast Portable Charger comes with 18 months of support and lifetime technical support.

For any questions, concerns, or technical assistance, please contact charmast customer service through the retailer's platform or the official charmast website.

Please retain your proof of purchase for warranty claims.

© 2025 charmast. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Answered questions about this manual

Is the Charmast W1148 10000mAh Power Bank safe for airplane travel, and should I pack it in carry-on or checked baggage?

Yes, the Charmast W1148 is safe for airplane travel, but you must follow specific airline safety regulations regarding lithium batteries: Pack in Carry-on Only: You must pack the power bank in your carry-on baggage. Federal...

[Read full answer](#)

How should I fix my Charmast W1148 portable charger when it doesn't charge my phone but works for other devices?

If your Charmast W1148 is charging one device (like a tablet) but not your phone, the issue is likely related to the specific cable, port, or device compatibility rather than a total failure of...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0BY2NZK9Y>

More documents and user manuals: <https://manuals.plus/>