

PIKOY WH-E14A

User Manual for PIKOY Galaxy Star Projector

Model: WH-E14A

INTRODUCTION

Thank you for purchasing the PIKOY Galaxy Star Projector. This device is designed to transform your space into a magical wonderland with its vibrant galaxy projections, soothing white noise, and integrated Bluetooth speaker. Please read this manual carefully before use to ensure proper operation and to maximize your experience with the product.

SAFETY INFORMATION

WARNING:

- This product is not a toy and is suitable for persons over 14 years old.
- Keep out of reach of children under 3 years of age due to small parts which may present a choking hazard.
- Avoid direct eye exposure to the laser light.
- Do not disassemble or modify the device. Unauthorized repairs will void the warranty.
- Use only the provided power adapter or one with compatible specifications (Input: 5V==2A).
- Do not expose the device to water, moisture, or extreme temperatures.
- Ensure the device is placed on a stable, flat surface to prevent falling.
- Unplug the device during lightning storms or when unused for long periods.



! WARNING

1. Not suitable for children under 3 years old;
2. This product is not a toy and is suitable for people over 14 years old;
3. The product contains small parts, please do not allow children under 3 years old to play;
4. Please pay attention to the sharp corners or edges of the product to avoid injury.

1. Nicht geeignet für Kinder unter 3 Jahren;
2. Dieses Produkt ist kein Spielzeug und für Personen über 14 Jahren geeignet;
3. Das Produkt enthält Kleinteile, bitte lassen Sie Kinder unter 3 Jahren nicht spielen;
4. Bitte achten Sie auf die scharfen Ecken und Kanten des Produkts, um Verletzungen zu vermeiden.

1. Ne convient pas aux enfants de moins de 3 ans ;
2. Ce produit n'est pas un jouet et convient aux personnes de plus de 14 ans.
3. Le produit contient de petites pièces, veuillez ne pas laisser les enfants de moins de 3 ans jouer.
4. Veuillez faire attention aux coins ou bords tranchants du produit pour éviter toute blessure.

1. Non adatto a bambini di età inferiore a 3 anni;
2. Questo prodotto non è un giocattolo ed è adatto a persone di età superiore ai 14 anni;
3. Il prodotto contiene piccole parti, si prega di non lasciare che i bambini di età inferiore a 3 anni giochino;
4. Prestare attenzione agli angoli acuti o ai bordi del prodotto per evitare danni.

1. No apto para niños menores de 3 años;
2. Este producto no es un juguete y es adecuado para personas mayores de 14 años;
3. El producto contiene piezas pequeñas, no permita que los niños menores de 3 años jueguen;
4. Preste atención a las esquinas o bordes afilados del producto para evitar daños.

1. 3歳未満のお子様には適していません。
2. この製品はおもちゃではなく、14歳以上の方に適しています。
3. 製品には小さな部品が含まれています。3歳未満のお子様には遊ばせないでください。
4. けがを避けるために、製品の鋭い角や端にご注意してください。

Image: Warning label on the product packaging, indicating suitability for ages 14+, caution about small parts for children under 3, and general safety advice in multiple languages.

PACKAGE CONTENTS

- PIKOY Galaxy Star Projector (Model: WH-E14A)
- Remote Control
- USB Power Cable
- User Manual

It Seems to be in the Splendid Galaxy

Perfect Children's Room Decoration Gift



Image: The PIKOY Galaxy Star Projector, its remote control, USB cable, and user manual, laid out next to the product box.

PRODUCT OVERVIEW

The PIKOY Galaxy Star Projector features a compact, spherical design with intuitive controls and multiple projection lenses. It integrates lighting, sound, and smart features for a comprehensive experience.



Image: The PIKOY Galaxy Star Projector, a remote control, and a smartphone displaying a music app, illustrating the product's features in a bedroom setting.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Power Connection:** Connect the provided USB power cable to the projector's power input port. Plug the other end into a compatible 5V==2A USB power adapter (not included) and then into a wall outlet.
3. **Placement:** Place the projector on a stable, flat surface in the desired room. For optimal projection, position it in the center of the room or against a wall, aiming towards the ceiling or a large wall surface.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button on the projector or the remote control to turn the device on or off.

Light Modes and Colors

The projector offers 15 distinct colors and 360 lighting patterns. Use the color selection buttons on the

remote control to cycle through different colors and combinations. The light moving speed can also be adjusted using the remote.



Image: A visual representation of the 15 available colors and the concept of 360 light modes, showcasing the variety of projections.

Brightness Adjustment

Adjust the projection brightness to your preference using the brightness level buttons on the remote control. There are 6 brightness levels available.



Image: A remote control with buttons for timer settings (0.5, 1, 1.5, 8 hours) and brightness adjustment levels (0% to 100%), with a child sleeping under the projected lights.

Bluetooth Speaker Function

The projector features a high-quality 5.0 HiFi Bluetooth speaker. To connect:

1. Ensure the projector is powered on.
2. Enable Bluetooth on your smartphone or other audio device.
3. Search for "WH-E14A" (or similar name) in your device's Bluetooth settings and pair.
4. Once connected, you can play audio through the projector's speaker.

The lights can also dance to the music in sound-reactive mode.



Image: A person relaxing in a room illuminated by the galaxy projector, holding a smartphone connected via Bluetooth to play music through the projector's speaker.

White Noise Machine

The projector has 15 built-in soothing white noise sounds to aid relaxation and sleep. Use the remote control to select and play these sounds.

- Examples of sounds include: Sea Wave, Mountain Spring, Thunderstorm, Spring Rain, Bird Singing, Summer Worm.

15 Smoothing Music for Sleeping and Relaxation



Image: A child sleeping peacefully in a room illuminated by the galaxy projector, with icons representing various white noise sounds like sea waves and thunderstorms.

Timer Function

Set an automatic shut-off timer using the remote control. Available timer options are 0.5 hours, 1 hour, 1.5 hours, and 8 hours. This feature helps conserve energy and is convenient for bedtime use.

Note: To protect the LED chips, the projector will automatically turn off after 8 hours of continuous operation, regardless of timer settings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the projector. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Lens Care:** Avoid touching the projection lens directly. If cleaning is necessary, use a lens cleaning cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power, loose connection, faulty adapter.	Check power cable connection. Ensure power adapter is working and plugged into a live outlet. Try a different USB adapter.
Lights are dim or not projecting clearly.	Brightness setting too low, dirty lens, too much ambient light.	Increase brightness using the remote. Clean the projection lens. Reduce ambient light in the room.
Bluetooth not connecting.	Projector not in pairing mode, device Bluetooth off, too far from device.	Ensure projector is on. Turn Bluetooth off and on again on your device. Move device closer to the projector. Ensure no other device is currently connected.
Remote control not working.	Dead battery, obstruction, out of range.	Replace the remote control battery. Ensure no objects are blocking the signal path. Point the remote directly at the projector.

SPECIFICATIONS

Brand	PIKOY
Model Number	WH-E14A
Product Dimensions	4.72"L x 4.72"W x 5.12"H
Item Weight	0.95 Pounds (approx. 15.2 ounces)
Material	Plastic
Light Source Type	LED
Power Source	Corded Electric
Input Voltage	5V==2A
Bluetooth Version	5.0
Built-in White Noise Sounds	15
Timer Options	0.5h, 1h, 1.5h, 8h (auto-off)

WARRANTY AND SUPPORT

PIKOY offers a 3-year quality commitment for this product. If you encounter any issues or have questions regarding your PIKOY Galaxy Star Projector, please do not hesitate to contact our customer support team. We are dedicated to providing excellent service and value our customers.

For support, please refer to the contact information provided on the product packaging or the official PIKOY website.

Note: Contact information for European and British representatives is available on the product packaging.

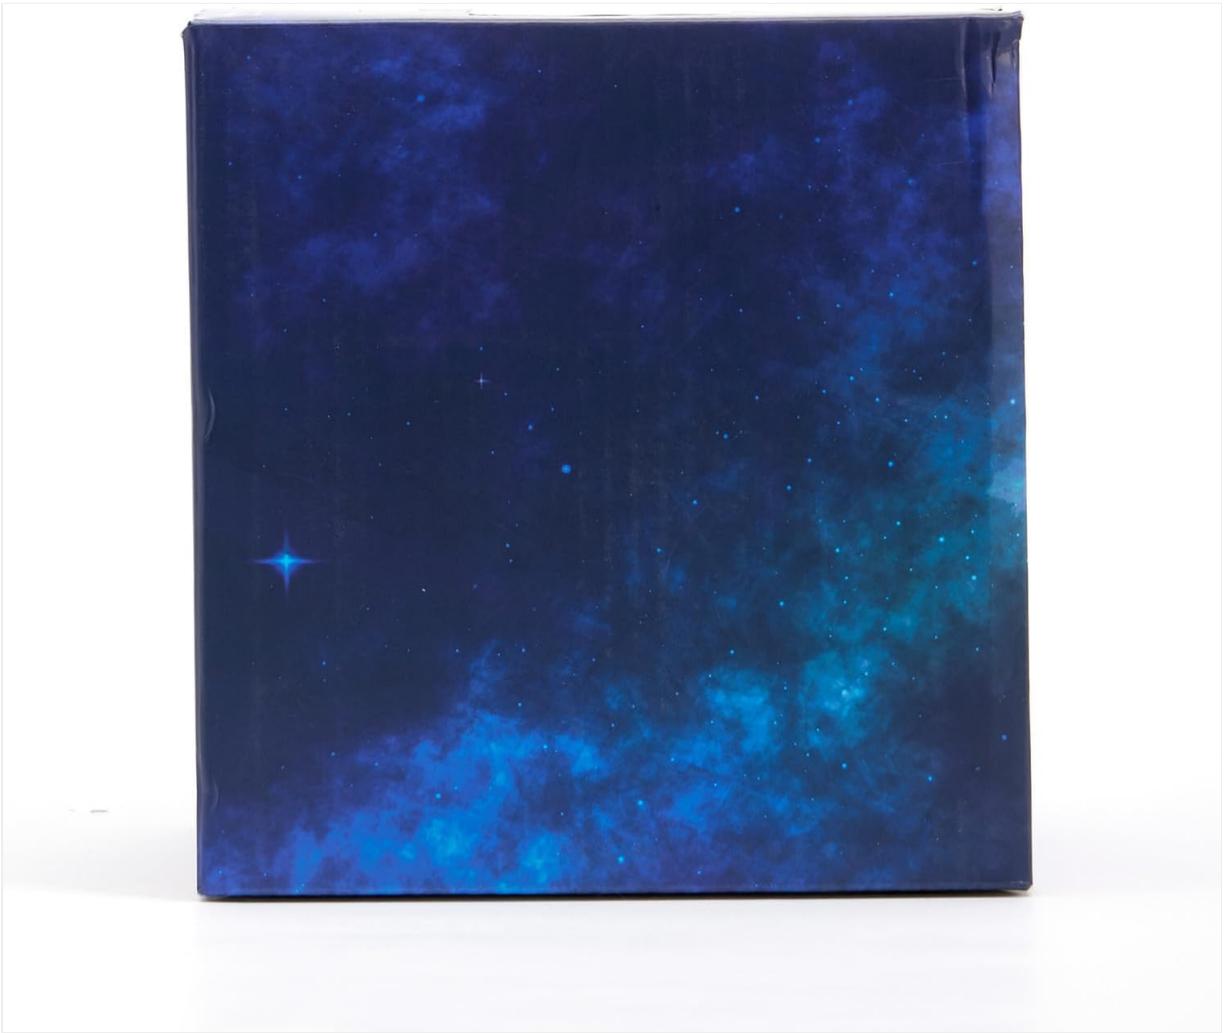


Image: The back of the product box, displaying manufacturer details (TK.CO.,Ltd.) and contact information for European and British representatives, including email addresses and phone numbers.