

Rowenta DW5360

Rowenta DW5360 Focus Xcel Iron User Manual

Model: DW5360

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Rowenta DW5360 Focus Xcel Iron. Please read all instructions carefully before using the appliance and retain this manual for future reference. This iron is designed for domestic use only.

Important Safety Instructions

- Always ensure the voltage indicated on the iron corresponds to your mains voltage.
- Do not leave the iron unattended while it is connected to the power supply or while it is hot.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron, cord, or plug in water or any other liquid.
- Unplug the iron from the electrical outlet before filling with water, cleaning, or when not in use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose.

2. PRODUCT OVERVIEW

The Rowenta DW5360 Focus Xcel Iron is a 1750 Watt steam iron featuring a stainless steel soleplate with 400 microsteam holes, an anti-drip system, and an auto shutoff function for enhanced safety and performance.



Image 2.1: Rowenta DW5360 Focus Xcel Iron.



Image 2.2: Rowenta DW5360 Iron with labeled components including 1750 Watts, Smart Control Settings, Vertical Steam, Anti-Drip System, Precision Tip, and Stainless Steel soleplate with 400 microsteam holes.

Key Features:

- **1750 Watts of Power:** For rapid heat-up and powerful steam.
- **400 Microsteam Holes:** Ensures even steam distribution across the soleplate.
- **Precision Tip:** Designed for reaching difficult areas like collars and seams.
- **Anti-Drip System:** Prevents water from dripping onto fabrics, even at low temperatures.
- **Auto Shutoff:** Automatically turns off the iron if left unattended for a period of time.
- **Transparent Water Tank:** Allows for easy monitoring of water levels.
- **Smart Control Settings:** Intuitive temperature and steam adjustment.

3. SETUP

Before First Use:

1. Remove any labels or protective covers from the soleplate.

2. Clean the soleplate with a soft, damp cloth.
3. It is recommended to test the iron on an old piece of fabric before ironing garments to ensure no residue is left from manufacturing.

Filling the Water Tank:

1. Ensure the iron is unplugged from the electrical outlet.
2. Set the steam control to the 'dry iron' position (no steam).
3. Open the water filling inlet cover.
4. Fill the water tank with tap water up to the 'MAX' level indicator. Do not overfill.
5. Close the water filling inlet cover securely.

4. OPERATING INSTRUCTIONS

Temperature and Steam Settings:

1. Plug the iron into a suitable electrical outlet. The on/off light indicator will illuminate.
2. Adjust the temperature dial to the desired setting based on the fabric type. Refer to the garment's care label.
3. Allow the iron to heat up until the temperature indicator light turns off, signaling that the set temperature has been reached.
4. For steam ironing, ensure the temperature setting is within the steam range (typically 2 dots or higher). Adjust the steam control lever to the desired steam output.



Image 4.1: Rowenta DW5360 Iron demonstrating powerful steam output.

Using Steam Functions:

- **Continuous Steam:** Move the steam control lever to the desired steam position.
- **Steam Boost:** Press the steam boost button for an extra burst of steam to remove stubborn wrinkles. Wait a few seconds between bursts.
- **Vertical Steam:** Hold the iron vertically, approximately 10-20 cm from the fabric. Press the steam boost button to release steam for refreshing hanging garments or drapes.



Image 4.2: Rowenta DW5360 iron emitting steam from its soleplate.

Using the Spray Function:

- Press the spray button to lightly moisten the fabric, which can help in smoothing out wrinkles.



Image 4.3: Highly precise ironing tip of the Rowenta DW5360 iron, useful for detailed work.

Auto Shutoff Feature:

For safety, the iron will automatically turn off if left motionless for 30 seconds horizontally or on its side, or for 8 minutes vertically. The indicator light will flash to signal auto shutoff. To restart, simply move the iron.

5. MAINTENANCE

After Each Use:

1. Unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Store the iron in an upright position to protect the soleplate.

Cleaning the Soleplate:

To clean the soleplate, use a damp cloth or a non-abrasive liquid cleaner specifically designed for iron soleplates. Do not use abrasive pads or metallic scourers.



Image 5.1: Underside view of the Rowenta DW5360 soleplate showing 400 microsteam holes and steam distribution.

Descaling (Self-Clean Function):

Regular descaling helps maintain optimal steam performance. Your iron may have a self-clean function. Refer to the specific instructions for activating this feature, typically involving filling the water tank, heating the iron, and then activating the self-clean button over a sink to flush out mineral deposits.

6. TROUBLESHOOTING

If you encounter issues with your iron, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet issue; auto shutoff activated.	Check power connection; test outlet; move iron to reactivate.

Problem	Possible Cause	Solution
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry'; mineral buildup.	Fill water tank; increase temperature setting; adjust steam control; perform descaling.
Water drips from the soleplate.	Temperature too low for steam; steam control set too high for temperature; overfilled water tank.	Increase temperature; reduce steam setting; ensure water level is not above 'MAX'.
Iron scorches fabric.	Temperature setting too high for fabric type.	Reduce temperature setting; always check garment care labels.

7. SPECIFICATIONS

- **Brand:** Rowenta
- **Model Name:** DW5360
- **Power:** 1750 Watts
- **Voltage:** 120 Volts
- **Soleplate Material:** Stainless Steel
- **Special Features:** 400 Hole Sole Plate, Anti Drip, Auto Shutoff, On/off light indicators, Transparent water tank, Precision Tip, Vertical Steam, Steam Boost
- **Color:** Blue
- **Item Weight:** Approximately 4.63 pounds
- **Product Dimensions:** Approximately 12 x 6 inches (Length x Width)

8. WARRANTY INFORMATION

For detailed warranty information regarding your Rowenta DW5360 Focus Xcel Iron, please refer to the warranty card included with your product or visit the official Rowenta website. Warranty terms and conditions may vary based on region and purchase date.

9. SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Rowenta customer support. Contact details can typically be found on the official Rowenta website or on the product packaging.

Online Support: www.rowenta.com