

BLACK+DECKER BCKM1013K01

BLACK+DECKER Kitchen Wand Cordless Immersion Blender (BCKM1013K01) Instruction Manual

1. INTRODUCTION

The BLACK+DECKER Kitchen Wand is a versatile cordless kitchen tool designed for various food preparation tasks. This 3-in-1 multi-tool system includes an immersion blender, a whisk, and a chopper attachment, providing flexibility for blending, whisking, and chopping ingredients. The cordless design offers convenience and portability, powered by a rechargeable unit that provides ample runtime for typical kitchen tasks. This manual provides instructions for safe and effective use, assembly, operation, maintenance, and troubleshooting of your Kitchen Wand.

2. IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings and instructions before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always ensure the appliance is switched off and unplugged (if applicable) before assembling, disassembling, or cleaning.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades or beaters during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- Blades are sharp. Handle with care.

3. WHAT'S INCLUDED

Your BLACK+DECKER Kitchen Wand package includes the following components:

- Wand Base (Grey)
- Immersion Blender Attachment
- Immersion Blender Guard
- Whisk Attachment
- Food Chopper Attachment
- Charging Dock
- Charging Cord
- Measuring Cup with Lid



Figure 1: All components included in the BLACK+DECKER Kitchen Wand set.

4. PRODUCT OVERVIEW

The main wand base features intuitive controls and indicators for ease of use:

- **LED Battery Charge Indicator:** Displays the current battery level, allowing you to monitor power status.
- **Variable Speed Dial:** Provides precise control over blending, whisking, and chopping speeds, from low to high, to suit different ingredients and recipes.
- **Charging Port:** Located on the wand base for connection to the charging dock.

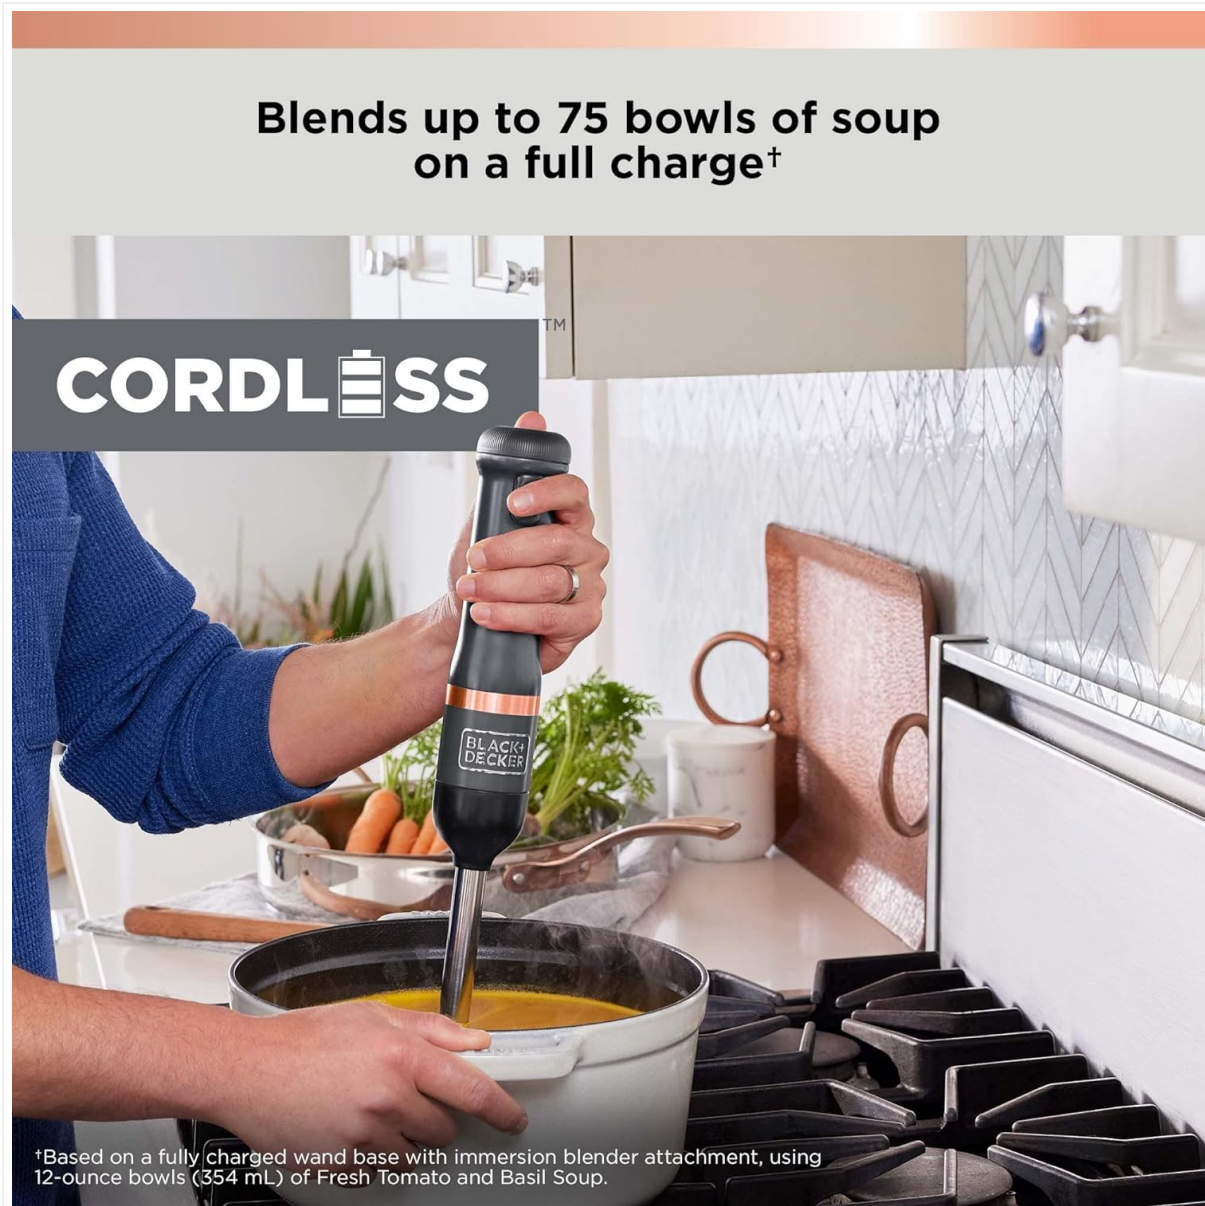


Figure 2: Key features of the Kitchen Wand base.

5. ASSEMBLY

To assemble your BLACK+DECKER Kitchen Wand, follow these steps:

1. **Attaching the Immersion Blender:** Align the immersion blender attachment with the wand base and twist until it locks securely into place. Ensure the immersion blender guard is properly attached to the immersion blender attachment.
2. **Attaching the Whisk:** Insert the whisk attachment into the designated slot on the wand base and twist to secure.
3. **Attaching the Food Chopper:** Place the chopping blade onto the center pin inside the food chopper bowl. Secure the food chopper lid onto the bowl. Then, align the wand base with the food chopper lid and twist to lock it in place.

Always ensure attachments are securely fastened before operation.

6. CHARGING THE UNIT

The BLACK+DECKER Kitchen Wand is a cordless appliance and requires charging before first use and when the battery is low.

1. Connect the charging cord to the charging dock.
2. Plug the charging cord into a standard electrical outlet.
3. Place the wand base onto the charging dock. The LED battery charge indicator will illuminate to show charging status.
4. Allow the unit to charge fully before initial use. A full charge provides sufficient power for blending up to 75 bowls of soup or chopping up to 44 onions.

The sleek, compact charging dock is designed for easy recharging and convenient storage.

7. OPERATING INSTRUCTIONS

The Kitchen Wand offers three primary functions: immersion blending, whisking, and chopping. Always ensure the appropriate attachment is securely installed before use.

7.1. Immersion Blending

Use the immersion blender attachment for pureeing soups, sauces, and smoothies directly in pots, bowls, or the included measuring cup.

1. Attach the immersion blender to the wand base.
2. Submerge the immersion blender head into the ingredients. Ensure the liquid level is below the maximum fill line to prevent splashing.
3. Press and hold the power button to start. Adjust the speed using the variable speed dial.
4. Move the blender gently up and down and in circles to ensure even blending.
5. Release the power button to stop.

What's Included:



Immersion Blender Attachment + Guard



Food Chopper Attachment



Whisk Attachment



Wand Base



Mixing Cup + Lid



Charging Dock + Cord

Figure 3: Immersion blending soup with the Kitchen Wand.

7.2. Whisking

The whisk attachment is ideal for whipping cream, beating eggs, and mixing batters.

1. Attach the whisk to the wand base.
2. Place the whisk into the ingredients in a bowl.
3. Press and hold the power button to start. Adjust the speed as needed.
4. Move the whisk around the bowl to incorporate air and mix thoroughly.
5. Release the power button to stop.



Blend, whisk, + chop



Figure 4: Whisking ingredients with the Kitchen Wand.

7.3. Chopping

The food chopper attachment is suitable for mincing herbs, nuts, vegetables, and other small food items.

1. Assemble the food chopper attachment with the chopping blade inside the bowl and the lid secured.
2. Place ingredients into the chopper bowl. Do not overfill.
3. Attach the wand base to the food chopper lid.
4. Press and hold the power button to start. Use short pulses for coarse chopping or hold for finer results.
5. Release the power button to stop. The food chopper liquid port allows for easy addition of liquids during operation.



Figure 5: Chopping ingredients with the Kitchen Wand.

8. CARE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and performance of your Kitchen Wand.

- Always unplug the charging dock and remove any attachments from the wand base before cleaning.
- The wand base should be wiped clean with a damp cloth. Do not immerse the wand base in water or any other liquid.
- All attachments (immersion blender shaft, whisk, chopper bowl, lid, and blade, measuring cup) are dishwasher safe for easy cleaning.
- For stubborn food residue, hand wash attachments with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing.
- Handle chopper blades with extreme care as they are very sharp.

9. TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER Kitchen Wand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Place the wand base on the charging dock and allow it to fully charge.
Appliance stops during operation.	Battery is low or attachment is jammed.	Recharge the battery. If an attachment is jammed, turn off the unit, clear the obstruction, and restart.
Attachments are difficult to connect/disconnect.	Improper alignment or residue.	Ensure correct alignment and twist firmly. Clean any food residue from connection points.
Poor blending/chopping performance.	Overfilling or incorrect speed setting.	Do not overfill the chopper bowl or blending container. Adjust the variable speed dial to a higher setting if needed.

10. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Number	BCKM1013K01
Color	Grey
Special Feature	Cordless
Capacity (Measuring Cup)	380 Milliliters
Product Dimensions (D x W x H)	21.75"D x 12.5"W x 5"H
Power Source	Battery Powered
Wattage	300 watts
Voltage	220 Volts
Control Type	Speed (Variable)
Material	Stainless Steel (Immersion Blender Shaft), Plastic (Housing, Chopper, Measuring Cup)
Dishwasher Safe	Yes (Attachments only)
Blade Material	Plastic
UPC	885911897419

11. WARRANTY AND SUPPORT

Your BLACK+DECKER Kitchen Wand (BCKM1013K01) comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and registration

information. For technical support, replacement parts, or further assistance, please contact BLACK+DECKER customer service through their official website or the contact information provided in your warranty documentation.