

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Elchim](#) /
- › [Elchim Anemos Hair Dryer Instruction Manual](#)

Elchim Anemos

Elchim Anemos Hair Dryer Instruction Manual

Model: Anemos

1. INTRODUCTION

Thank you for choosing the Elchim Anemos Hair Dryer. This professional-grade appliance is designed for efficient and gentle hair drying, featuring an ultra-light design, quiet operation, and a powerful micro-brushless digital motor. This manual provides essential information for safe and effective use, maintenance, and troubleshooting.

ANEMOS

ULTRA-LIGHT
DRYER WITH SONIC
MICRO-BRUSHLESS
TECHNOLOGY

SONIC SPEED

110,000 rpm

ULTRA-LIGHT

290 gr (10.2 Oz.) only

NOISE REDUCTION

69 dBA

SMART TECHNOLOGY

For optimized heat & speed



Image 1.1: Overview of Elchim Anemos Hair Dryer features, highlighting its ultra-light design, sonic micro-brushless technology, 110,000 rpm sonic speed, 290g (10.2 oz) weight, 69 dBA noise reduction, and smart technology for optimized heat and speed.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Water and Electricity:** Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Power Cord:** Always inspect the power cord for damage before use. Do not use the appliance if the cord is damaged. Do not wrap the cord around the appliance.
- **Overheating:** The appliance is equipped with a safety thermostat that automatically switches off the appliance in case of

overheating. If this occurs, unplug the appliance and allow it to cool down for a few minutes before restarting. Ensure the air inlet filter is clean.

- **Attachments:** Only use attachments supplied or recommended by the manufacturer.
- **Storage:** Always unplug the appliance after use and store it in a dry place.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Elchim Anemos Hair Dryer
- Concentrator Nozzles (typically 2 included)
- Diffuser (may be included or sold separately)
- Instruction Manual



Image 3.1: The Elchim Anemos Hair Dryer shown alongside its product packaging, indicating typical contents upon unboxing.



Image 3.2: A close-up view of the diffuser attachment, designed to evenly distribute airflow for enhanced curls and volume.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Elchim Anemos Hair Dryer.



Image 4.1: The Elchim Anemos Hair Dryer in black, showcasing its compact and ergonomic design.



Image 4.2: A detailed view of the control panel on the hair dryer, featuring buttons and indicator lights for adjusting heat and speed settings.

- **Air Outlet:** Where the heated or cool air exits.
- **Concentrator Nozzle:** Directs airflow for precise styling.
- **Heat Settings:** Buttons to adjust the temperature of the airflow.
- **Speed Settings:** Buttons to adjust the fan speed.
- **Cool Shot Button:** Provides a burst of cool air to set hairstyles.
- **Handle:** Ergonomic grip for comfortable use.
- **Air Inlet Filter:** Located at the rear, protects the motor from dust and hair.
- **Power Cord:** Connects the dryer to an electrical outlet.

5. SETUP

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Retain packaging for storage or future transport.

2. **Attaching Nozzles:** Select the desired concentrator nozzle or diffuser. Align the attachment with the air outlet and push it firmly into place until it clicks securely. Ensure it is properly seated before use.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the outlet voltage matches the appliance's requirements (typically 120V for North America).

6. OPERATING INSTRUCTIONS

Follow these steps for optimal performance and hair care.

1. **Power On:** Press the power button to turn on the hair dryer. The indicator lights for heat and speed will illuminate.
2. **Adjusting Heat:** Use the heat setting buttons to select your desired temperature. The Elchim Anemos typically offers multiple heat levels. Start with a lower heat setting and increase as needed for your hair type and styling preference.
3. **Adjusting Speed:** Use the speed setting buttons to control the airflow intensity. Lower speeds are ideal for gentle drying or styling, while higher speeds provide faster drying.
4. **Cool Shot Function:** To set your hairstyle, press and hold the cool shot button. This delivers a burst of cool air, helping to close the hair cuticle and add shine.
5. **Drying Technique:**
 - For general drying, hold the dryer about 6-8 inches away from your hair, moving it continuously to prevent heat concentration in one area.
 - For smooth styles, use a concentrator nozzle with a round brush, directing airflow down the hair shaft.
 - For curly or wavy hair, attach the diffuser and gently cup sections of hair, allowing the air to dry them without disturbing the curl pattern.
6. **Power Off:** After use, press the power button to turn off the hair dryer and unplug it from the electrical outlet.



Image 6.1: A user demonstrating how to hold the Elchim Anemos Hair Dryer comfortably during operation.



Image 6.2: A professional stylist using the Elchim Anemos Hair Dryer to dry a woman's hair, illustrating typical usage.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your hair dryer.

1. Cleaning the Air Inlet Filter:

The air inlet filter should be cleaned regularly to prevent dust and hair buildup, which can reduce airflow and cause overheating. The Elchim Anemos features a special, easily replaceable filter.

- Ensure the appliance is unplugged and completely cool.
- Gently twist or pull off the rear filter cover.
- Remove the filter and clean it using a soft brush or by rinsing it under running water. Ensure it is completely dry before reinserting.

- Replace the filter and secure the cover.

2. General Cleaning:

- Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no moisture enters the internal components.

3. Storage:

- Unplug the appliance and allow it to cool completely before storing.
- Do not wrap the power cord tightly around the appliance, as this can damage the cord.
- Store in a dry, safe place, away from children.



Image 7.1: An illustration demonstrating the easy removal and cleaning process for the special filter of the Elchim Anemos Hair Dryer.

Your browser does not support the video tag.

Video 7.1: This video demonstrates the process of cleaning the special filter of the Elchim Anemos Hair Dryer, highlighting its ease of maintenance and how it helps protect hair integrity.

8. TROUBLESHOOTING

If you encounter issues with your Elchim Anemos Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply; faulty outlet; damaged cord.	Check if the power cord is securely plugged in. Test the outlet with another appliance. Inspect the power cord for any visible damage. If damaged, discontinue use and contact customer support.
Low airflow or weak drying.	Clogged air inlet filter; obstruction in the air outlet.	Unplug the dryer and allow it to cool. Clean the air inlet filter as described in the Maintenance section. Ensure no hair or debris is blocking the air outlet.
Hair dryer overheats and shuts off.	Clogged air inlet filter; prolonged use on high heat.	Unplug the dryer and let it cool down for at least 10-15 minutes. Clean the air inlet filter. Reduce heat and speed settings during use if necessary.
Unusual noise or smell.	Internal malfunction; foreign object inside.	Immediately unplug the appliance. Do not attempt to repair it yourself. Contact customer support for assistance.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model	Anemos
Brand	Elchim
Motor Type	Professional Micro-Brushless Digital Motor
Sonic Speed	110,000 rpm
Weight	10.2 ounces (290 grams)
Noise Reduction	69 dBA
Product Dimensions	7.67 x 1.96 x 7.28 inches
Material	Plastic
Power Source	Corded Electric
UPC	836793004389

10. WARRANTY AND SUPPORT

Elchim products are designed for durability and performance. While specific warranty terms may vary, Elchim generally offers a limited warranty on its products. For detailed warranty information, product support, or service inquiries, please refer to the official Elchim website or contact their customer service directly.

Do not attempt to repair the appliance yourself. Unauthorized repairs may void your warranty and pose safety risks.

For further assistance, please visit: www.elchim.com