

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Eno](#) /

› **PLANCHA ENO 555032010701 INITIAL 50 INOX User Manual**

Eno 555032010701

PLANCHA ENO 555032010701 INITIAL 50 INOX User Manual

Model: 555032010701 | Brand: Eno

INTRODUCTION

Thank you for choosing the Eno INITIAL 50 INOX gas griddle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the griddle and keep it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- This appliance is designed for outdoor cooking and grilling. Do not use indoors.
- Ensure proper ventilation when operating the griddle.
- Keep children and pets away from the hot griddle.
- Do not touch hot surfaces. Use oven mitts or heat-resistant gloves.
- Ensure the griddle is placed on a stable, non-combustible surface.
- Do not use abrasive cleaners or sharp objects on the enameled cast iron plate.
- Disconnect the gas supply when the griddle is not in use or during cleaning.
- Regularly check gas connections for leaks using a soapy water solution.

PRODUCT OVERVIEW

Components

- Enameled Cast Iron Cooking Plate (47 x 36 cm)
- Stainless Steel Body
- Control Knobs for Gas Burners
- Ignition System
- Grease Collection Tray



Figure 1: Front view of the Eno INITIAL 50 INOX griddle, highlighting the cooking surface and control panel.

SETUP

1. Unpacking

Carefully remove all packaging materials. Inspect the griddle for any damage during transit. Retain packaging for future storage or transport if needed.

2. Placement

Place the griddle on a flat, stable, and heat-resistant surface outdoors. Ensure there is adequate clearance from combustible materials (walls, furniture, etc.).

3. Gas Connection

Connect the griddle to a suitable gas supply (e.g., propane tank) using a certified gas hose and regulator (not included). Ensure all connections are tight. Perform a leak test by applying a soapy water solution to all gas connections. Bubbles indicate a leak. If a leak is detected, turn off the gas supply immediately and tighten connections or replace faulty parts.

4. Initial Cleaning

Before first use, wipe down the enameled cast iron plate with a damp cloth to remove any manufacturing residues. Dry thoroughly.

OPERATING

1. Ignition

1. Ensure the gas supply is open.
2. Push in and turn a control knob counter-clockwise to the HIGH position.
3. Press the ignition button (if available) or use a long lighter to ignite the burner.
4. Once lit, release the control knob. Repeat for the second burner if desired.

2. Temperature Control

Adjust the control knobs between HIGH and LOW settings to achieve the desired cooking temperature. The enameled cast iron plate retains heat very well, allowing for consistent cooking.

3. Cooking Tips

- Preheat the griddle for 5-10 minutes before adding food for even cooking.
- Use a small amount of cooking oil on the griddle surface.
- The griddle is ideal for cooking a variety of foods, including meats, vegetables, eggs, and pancakes.



Figure 2: The Eno INITIAL 50 INOX griddle in an outdoor setting, demonstrating its use for preparing meals.

4. Shutting Down

When finished cooking, turn the control knobs to the OFF position. Close the gas supply valve on the gas tank.

MAINTENANCE

1. Daily Cleaning

- After each use, while the griddle is still warm (but not hot), scrape off food residues using a griddle scraper.
- Wipe the surface with a damp cloth. For stubborn residues, use a mild soap solution and rinse thoroughly.
- Empty and clean the grease collection tray regularly.

2. Deep Cleaning

Periodically, perform a deeper clean. Ensure the griddle is completely cool and the gas supply is disconnected. Clean the stainless steel body with a non-abrasive cleaner designed for stainless steel. The enameled cast iron plate is not dishwasher safe.

3. Storage

Store the griddle in a dry, protected area when not in use, especially during colder months, to prevent damage from elements. Consider using a protective cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply; Clogged burner; Faulty igniter.	Check gas tank and connections; Clean burner ports; Use a long lighter to ignite manually.
Uneven heating.	Partially clogged burner; Griddle not level.	Clean burner ports; Ensure griddle is on a flat surface.
Excessive smoke.	Too much oil; Food residue buildup.	Reduce oil; Clean griddle surface thoroughly.

SPECIFICATIONS

Feature	Detail
Brand	Eno
Model	555032010701 INITIAL 50 INOX
Product Type	Gas Griddle (Plancha)
Power	5000 W
Cooking Plate Material	Enameled Cast Iron
Cooking Plate Dimensions	47 x 36 cm
Body Material	Stainless Steel
Color	Black (plate), Stainless Steel (body)
Shape	Rectangular
Non-stick Coating	No
Dishwasher Safe	No
Recommended Use	Outdoor cooking and grilling
Item Weight	1 Kilogram

Feature	Detail
Package Dimensions	10 x 5 x 2 cm

WARRANTY AND SUPPORT

Specific warranty information for the Eno INITIAL 50 INOX griddle is not available in the provided product data.

Please refer to the product packaging or contact Eno customer support directly for details regarding warranty coverage and service.

For technical assistance or spare parts inquiries, please contact your retailer or the manufacturer's official support channels.

Related Documents - 555032010701

	<p>ENO Plancha Enosign 65 & 80 User Manual and Maintenance Guide</p> <p>Comprehensive guide for ENO Plancha Enosign 65 and 80 models, covering installation, usage, maintenance, safety, and warranty information. Includes technical specifications and troubleshooting tips.</p>
	<p>ENO Gas Stove Installation and User Manual: Atoll & Duo Models</p> <p>Comprehensive installation, operation, and maintenance guide for ENO Atoll (Model 0614) and Duo (Models 0623 & 0624) propane gas stoves. Features include safety instructions, gas adjustment specifications, burner ignition, maintenance tips, and contact information for warranty service.</p>
	<p>ENO Plancha Océane 50 & 65 User Manual and Maintenance Guide</p> <p>Comprehensive user manual and maintenance guide for ENO Plancha models Océane 50 and Océane 65, covering setup, operation, safety, and warranty information.</p>
	<p>Enophone User Manual: Your Guide to Advanced Audio and Mental Fitness Tracking</p> <p>Comprehensive user manual for Enophone headphones, detailing setup, Bluetooth pairing, audio controls, sensor usage, the Eno app, wear and care, FAQs, and safety information. Learn how to maximize your Enophone experience for both audio and mental wellness tracking.</p>
	<p>ENO 5-Burner Gas Cooker with Oven - Parts List and Diagram</p> <p>Detailed parts list and exploded view diagram for the ENO 5-burner gas cooker with oven, model F62551. Includes component descriptions, materials, references, and quantities.</p>



[ENO Le Bretagne 3 & 4-Burner Marine Gas Cooker with Oven and Grill: Installation and User Manual](#)

Comprehensive installation and user manual for the ENO Le Bretagne series marine gas cookers, featuring 3 or 4 burners, oven, and grill. Includes safety guidelines, technical specifications, and maintenance instructions for safe and efficient operation on board.

Documents - Eno – 555032010701

[\[pdf\] Tech Sheet Datasheet](#)

PRODUIT FOND DE RAYON OPERATION NATIONALE OUI DESIGNATION DU PLANCHAS INITIAL 65

CAPOT offert Cyrille Brosset HOUSSE plancha 40 et 50 LaMaison fr Plancha Enosign électrique

575132014201 Initial gaz 555032010701 555132014201 PROTECTION EFFICACE Déperlant Page 2

b6de12bdff8aa812aa8362c302e229619222bdf HPI45 FT srslid

AfmBOoqHkHZa8Ahb2apW2D5JkOs16EvSZcywFCOgPz3E3cR0EyXQcQnA lamaison media product 130545 technical datasheet |||

ANTI-FLAQUE Systme Pop-up HOUSSE plancha 40 et 50 DESCRIPTION PRODUIT

Housse de protection Toile ... ign 40 lectrique : 575132014201 LES PRODUIT

PRATIQUE Cordon de serrage Plancha Initial 50 gaz : **555032010701** lectrique :

555132014201 PROTECTION EFFICACE Dperlant Code article Gencode Nom articl...

lang:fr score:23 filesize: 275.71 K page_count: 2 document date: 2023-11-24

[\[pdf\]](#)

PRODUIT FOND DE RAYON OPERATION NATIONALE OUI DESIGNATION DU PLANCHAS INITIAL 65

CAPOT offert Cyrille Brosset AnleitungEno Abdeckung für Plancha 45 Pop UpHPI45 FTcdn shopify s

files 1 0517 4830 7108 HPI45 FT v 1739799117 |||

ANTI-FLAQUE Systme Pop-up HOUSSE plancha 40 et 50 DESCRIPTION PRODUIT

Housse de protection Toile ... ign 40 lectrique : 575132014201 LES PRODUIT

PRATIQUE Cordon de serrage Plancha Initial 50 gaz : **555032010701** lectrique :

555132014201 PROTECTION EFFICACE Dperlant Code article Gencode Nom articl...

lang:fr score:19 filesize: 403.13 K page_count: 4 document date: 2024-11-28