

[Manuals.plus](#) /

› [Furmax](#) /

› Furmax Electric Height Adjustable Standing Desk User Manual

Furmax ST241

Furmax Electric Height Adjustable Standing Desk User Manual

Model: ST241

INTRODUCTION

The Furmax Electric Height Adjustable Standing Desk is designed to promote a healthier and more dynamic work environment. This manual provides comprehensive instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your desk. By allowing you to seamlessly switch between sitting and standing positions, this desk helps alleviate physical strain associated with prolonged sitting, enhancing focus and overall well-being.



Figure 1: Furmax Electric Height Adjustable Standing Desk (White, 63 Inch)

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and operation. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Limit:** Do not exceed the maximum recommended weight limit of 145 pounds. Exceeding this limit may damage the desk or cause it to become unstable.
- **Assembly:** Always ensure the desk is properly assembled and all fasteners are securely tightened before use.
- **Stability:** If necessary, anchor the desk to a wall to prevent tipping, especially when adjusting height or placing heavy items.
- **Height Adjustment:** Exercise caution when adjusting the height to avoid injury from collisions with objects or body parts. Keep hands and objects clear of moving parts.
- **Overheat Protection:** The motor system includes overheat protection. If the motor stops working due to overheating, allow it to cool down before resuming operation.
- **Children and Pets:** Keep children and pets away from the desk during height adjustment to prevent accidents.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the included parts list in your physical manual for detailed identification. Key components typically include:

- Desktop sections (typically two or four pieces)
- Desk legs (T-shaped metal brackets)

- Motor and control box
- Control panel with digital display
- Connecting rod
- Power adapter and cables
- Assembly hardware (screws, Allen wrenches)
- Headphone hook



Figure 2: Quick Installation Diagram illustrating main components.

SETUP AND ASSEMBLY

Assembly of the Furmax Electric Height Adjustable Standing Desk is designed to be straightforward. It is recommended to have at least one person for assembly. For detailed step-by-step instructions, please refer to the official installation video and the provided PDF manual.

Assembly Steps Overview:

1. Assemble the desk legs and crossbar.
2. Attach the motor and connecting rod to the leg frames.
3. Secure the desktop sections together using the provided dowels and metal plates.
4. Mount the assembled desktop onto the leg frame, ensuring all screws are tightened.
5. Connect the control panel, control box, and power adapter.
6. Attach the headphone hook to the underside of the desk.

Your browser does not support the video tag.

Video 1: Official Furmax Installation Guide. This video provides a visual walkthrough of the assembly process.

For a printable version of the instructions, please download the [Installation Manual \(PDF\)](#).

OPERATING INSTRUCTIONS

The Furmax Electric Height Adjustable Standing Desk features an intuitive digital control panel for easy height adjustments. The quiet motor ensures smooth transitions between sitting and standing positions.

Digital Control Panel



LED Display:

LED screen displays accurate height



UP Key:

Press and hold the UP key to raise the desk



1/2 Key:

Press and hold the 1/2 key to save the height



DOWN Key:

Press and hold the DOWN key to raise the desk

Figure 3: Digital Control Panel for height adjustment.

Control Panel Functions:

- **LED Display:** Shows the current desk height in inches.
- **UP (▲) Key:** Press and hold to raise the desk.
- **DOWN (▼) Key:** Press and hold to lower the desk.
- **Memory Keys (1/2):** Allows you to save and quickly recall your preferred sitting and standing heights.

Setting Memory Presets:

1. Adjust the desk to your desired height using the UP or DOWN keys.
2. Press and hold the '1' or '2' memory key until the display flashes or beeps, indicating the height has been saved.
3. To recall a saved height, simply press the corresponding memory key (1 or 2). The desk will automatically move to the preset position.

Quick and Smooth Height Adjustable

Easily control with 4 operation buttons

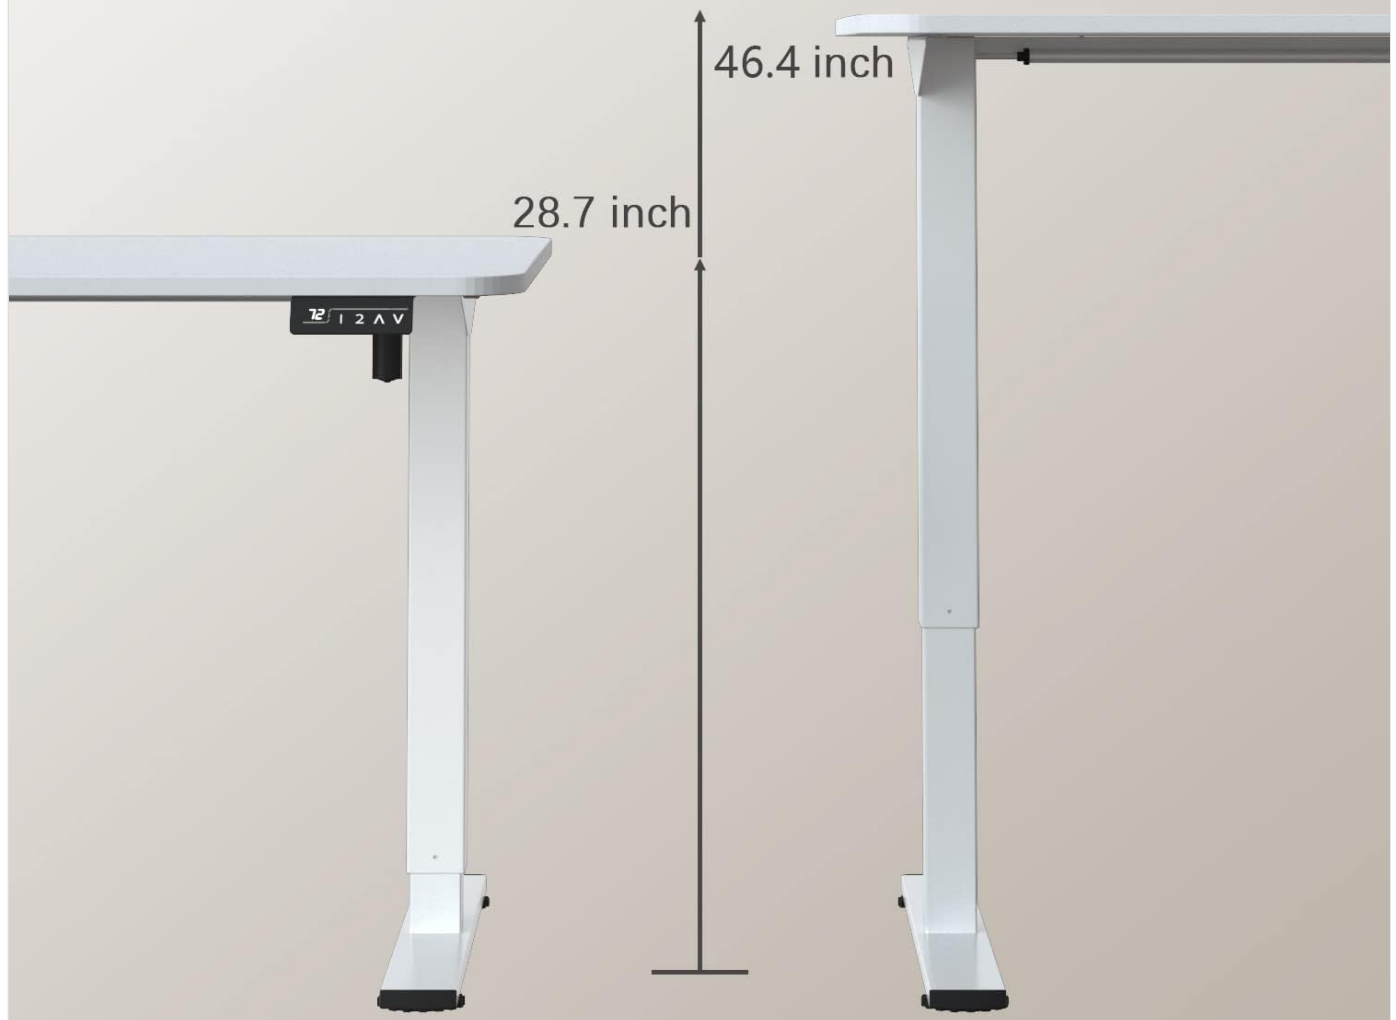


Figure 4: Height adjustment range of the Furmax standing desk.

MAINTENANCE

Regular maintenance ensures the longevity and smooth operation of your Furmax standing desk.

- **Cleaning:** Wipe the desktop surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the laminated finish.
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage. Utilize the built-in cable hole for a tidy workspace.
- **Fasteners:** Occasionally check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor Care:** The motor is designed for durability. Avoid overloading the desk or making rapid, continuous height adjustments to prolong motor life.

TROUBLESHOOTING

If you encounter any issues with your Furmax standing desk, please refer to the official [Troubleshooting Guide \(PDF\)](#) for common problems and solutions. If the issue persists, please contact Furmax customer support.

SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model Number	ST241
Product Dimensions	24"D x 63"W x 28.7"H
Color	White
Minimum Height	28.7 Inches
Maximum Height	46.4 Inches
Maximum Weight Recommendation	145 Pounds
Top Material Type	Wood (Laminated)
Base Material	Metal (Alloy Steel)
Motor Noise Level	Under 50DB
Included Components	Headphone Hook, Cable Hole



Figure 5: Detailed dimensions and weight capacity of the desk.

WARRANTY AND SUPPORT

Furmax is committed to providing high-quality products and excellent customer service.

- **Return Policy:** This product is eligible for a 30-day easy return policy. Please refer to the seller's return policy for full details.
- **Protection Plans:** Extended protection plans (2-Year and 3-Year) are available for purchase to cover your investment.
- **Customer Support:** For any inquiries, technical assistance, or warranty claims, please visit the official [Furmax Store on Amazon](#) or contact their customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question