

mafiti K27

Mafiti K27 Kids Instant Print Camera User Manual

Model: K27

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Mafiti K27 Kids Instant Print Camera. Please read this manual thoroughly before operating the device and retain it for future reference. The Mafiti K27 is a digital camera designed for children, featuring instant thermal printing, 48-megapixel photo capture, and 1080P video recording capabilities.

2. SAFETY INFORMATION

- **Adult Supervision:** This product is intended for use by children aged 3-12 under adult supervision.
- **Choking Hazard:** Small parts, such as the TF card and paper rolls, may pose a choking hazard. Keep them out of reach of very young children.
- **Water Exposure:** The camera is not water-resistant. Avoid exposure to water or excessive moisture to prevent damage.
- **Charging:** Use only the provided Type-C charging cable. Do not attempt to charge with damaged cables or non-compatible chargers.
- **Battery:** The camera contains a built-in lithium-ion battery. Do not attempt to replace the battery yourself. Do not expose the camera to extreme temperatures or dispose of it in fire.
- **Thermal Paper:** The thermal paper is BPA-free and skin-friendly. Ensure only compatible thermal paper is used for printing.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Mafiti K27 Instant Print Camera (x1)
- Printer Paper Rolls (x3)
- 32GB TF Card (pre-installed) (x1)
- Type-C Charging Cable (x1)

- Colored Pens (x6)
- Cute Cartoon Stickers (x1 sheet)
- Neck Lanyard (x1)
- User Manual (x1)

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.



Image 1: Front and back view of the Mafiti K27 Kids Instant Print Camera. The front shows the lens, flash, and print output slot. The back features the 2-inch IPS screen and control buttons.



Image 2: Visual representation of the camera's key features, including IPS Screen, Selfie function, 48MP photo resolution, 1080P video recording, Smart Fill Light, Time-Lapse, Burst Shot, Stickers & Filters, USB Transfer, and 800mAh battery.

Camera Controls:

- **Power Button:** Located on the top/side, used to turn the camera on/off.
- **Shutter Button:** Used to take photos or start/stop video recording.
- **Navigation Buttons:** For menu navigation and selecting options.
- **Print Button:** Initiates instant printing of the displayed photo.
- **Mode Button:** Switches between photo, video, and playback modes.

5. SETUP

5.1. Charging the Camera

1. Locate the Type-C charging port on the camera.
2. Connect the provided Type-C cable to the camera and the other end to a USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes 2-3 hours.

5.2. Inserting the TF Card

The camera comes with a 32GB TF card pre-installed. If you need to remove or re-insert it:

1. Ensure the camera is powered off.
2. Locate the TF card slot, usually on the side of the camera.
3. Gently push the TF card into the slot until it clicks into place. To remove, push it again until it springs out.

5.3. Loading Printer Paper

The camera uses thermal paper for instant prints. Ensure the paper is loaded correctly for proper function.



Image 3: Step-by-step guide for loading the thermal printer paper. It illustrates opening the paper compartment, placing the roll with the correct orientation, and closing the compartment.

1. Open the paper compartment cover on the side of the camera.
2. Insert a new roll of thermal paper, ensuring the paper feeds out from the top of the roll and is positioned correctly. The smooth side of the paper should face the print head.
3. Close the compartment cover firmly. A small portion of paper should protrude from the print slot.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- **To Power On:** Press and hold the Power Button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power Button again until the screen turns off.

6.2. Taking Photos



Image 4: The camera features front and rear dual lenses for regular photos and selfies. It also highlights the 'One Key Print Photo' button.

1. Turn on the camera. It will typically default to photo mode.
2. Frame your shot using the 2-inch IPS screen.
3. Press the Shutter Button to capture a photo.
4. To take a selfie, switch to the front-facing lens (if applicable, refer to camera controls for specific button).

6.3. Recording Videos



1080P Video Recording

Capture and Record
Every Meaningful Moment

Image 5: A child using the camera to record video, emphasizing the 1080P video recording feature. The screen displays a 'REC' indicator.

1. Press the Mode Button to switch to video recording mode.
2. Press the Shutter Button once to start recording. A 'REC' indicator will appear on the screen.
3. Press the Shutter Button again to stop recording.

6.4. Instant Printing

After taking a photo, you can instantly print it without ink.

1. View the photo you wish to print in playback mode.
2. Press the dedicated Print Button. The camera will print the photo using thermal technology.
3. Gently tear off the printed photo from the camera's output slot.

6.5. Using Filters and Frames

Enhance your photos with built-in filters and cartoon frames.

- In photo mode, use the navigation buttons to browse through available filters (4 options) and cartoon frames (25 options).
- Select your desired filter or frame before taking a picture.

6.6. Smart Fill Light

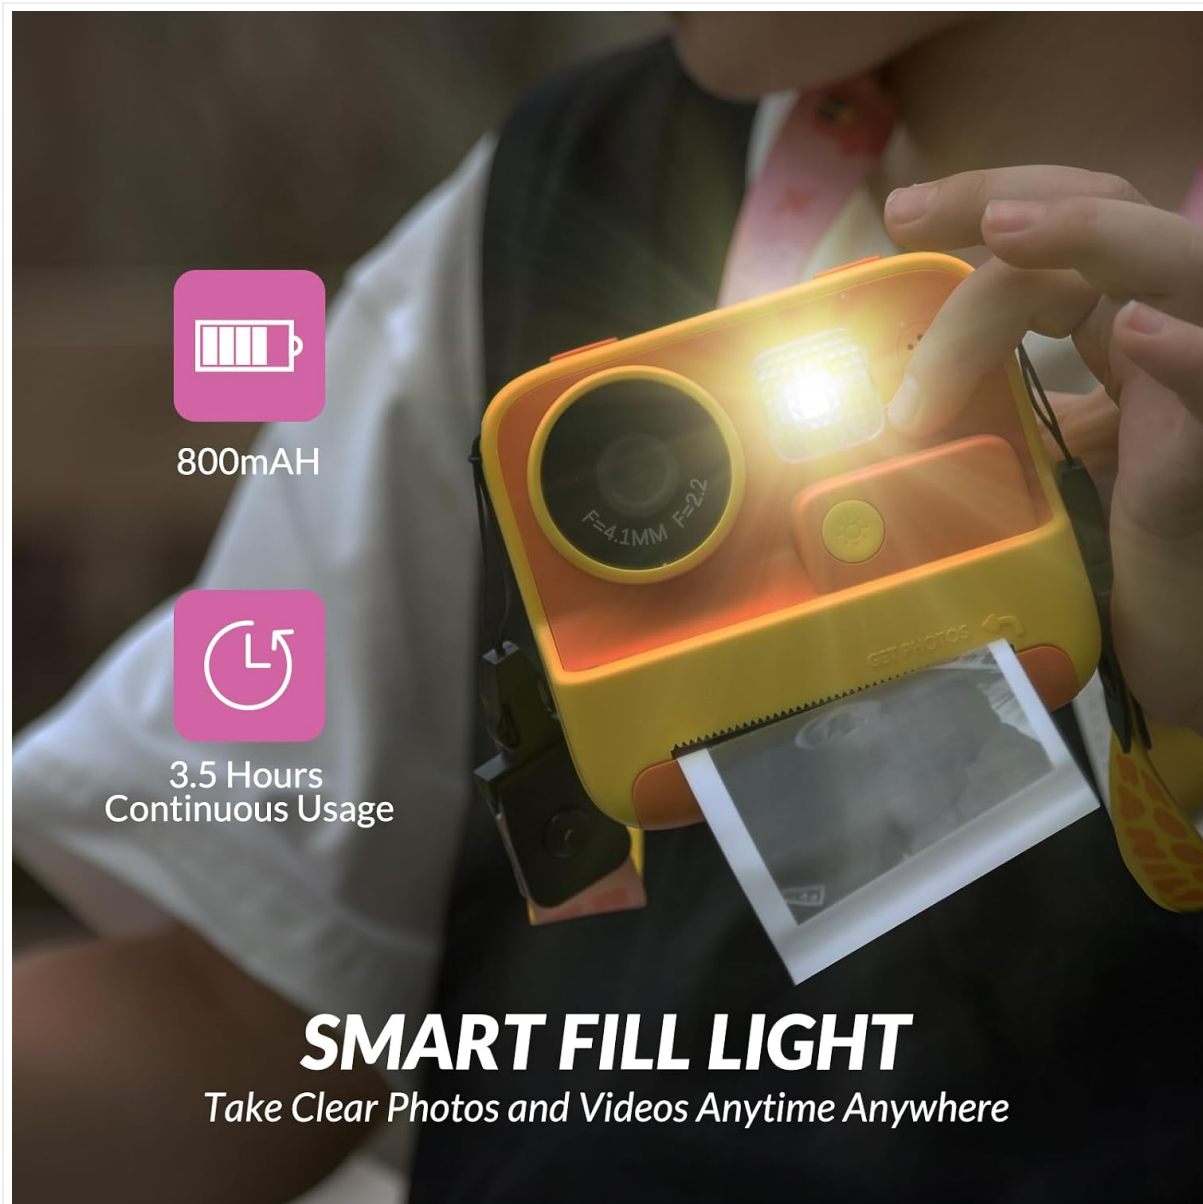


Image 6: The camera's smart fill light feature is shown, indicating its use for clearer photos and videos in various lighting conditions.

The camera features a smart fill light to improve photo and video quality in low-light conditions. This light activates automatically or can be manually toggled (refer to camera settings for specific control).

6.7. Connecting to a Computer

Transfer photos and videos to a computer using the provided USB cable.

1. Ensure the camera is powered on.
2. Connect the camera to your computer using the Type-C USB cable.
3. The camera will appear as a removable disk drive on your computer. You can then access and transfer files from the TF card.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth. Do not use liquid cleaners.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

- **Paper Rolls:** Keep spare thermal paper rolls sealed in their packaging until ready for use to protect them from moisture and light.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera fully using the provided Type-C cable.
Photos are not printing.	Paper loaded incorrectly or out of paper.	Check paper orientation (smooth side up) and ensure there is enough paper. Reload if necessary.
Printed photos are blank or faded.	Paper loaded upside down.	Ensure the thermal paper is loaded with the heat-sensitive side facing the print head.
Cannot transfer files to computer.	Incorrect USB connection or camera mode.	Ensure the USB cable is securely connected and the camera is powered on. Check if the camera is in the correct USB transfer mode (if applicable).
Camera freezes or becomes unresponsive.	Software glitch.	Press and hold the Power Button for 10 seconds to force a restart. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Mafiti
Model Name	K27
Maximum Image Resolution	48 MP
Video Resolution	1080p
Screen Size	2 Inches (IPS Display)
Lens Type	Front and Rear Dual Lens
Optical Zoom	5x
Image Stabilization	Digital
Battery Capacity	800mAh Lithium Ion
Battery Average Life	2-3 Hours (continuous use)
Memory Storage	32 GB TF Card (included)
Connectivity	USB Type-C
Printing Technology	Thermal (No Ink)
Dimensions (D x W x H)	2.2" x 3.6" x 3.2"
Item Weight	6.4 Ounces

Feature	Detail
Special Features	Smart Fill Light, Filters, Cartoon Frames, Time-Lapse, Burst Shot

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Mafiti website. Keep your proof of purchase for any warranty claims.