

TECKNET TK-WA806

TECKNET TK-WA806 Wireless Door and Window Alarm System User Manual

Brand: TECKNET | Model: TK-WA806

1. INTRODUCTION

The TECKNET TK-WA806 Wireless Door and Window Alarm System is designed to enhance the security of your home or property. This versatile device functions as both an alarm and a chime, providing immediate alerts when a protected entry point is opened. With adjustable volume levels and easy installation, it offers a practical solution for monitoring doors, windows, cabinets, and more.



Image: The TECKNET Wireless Door Alarm System provides security for your entire home.

2. PACKAGE CONTENTS

Your TECKNET TK-WA806 package includes the following items:

- TECKNET Alarm Units (Quantity: 6)

- Magnetic Sensors (Quantity: 6)
- 3M Adhesive Pads
- User Manual (This document)



Image: Multiple alarm units and magnetic sensors are included for comprehensive coverage.

3. PRODUCT OVERVIEW

Each TECKNET alarm unit consists of a main alarm body and a separate magnetic sensor. The main unit features an LED sensor light, a mounting plate, and switches for volume control and mode selection (Off, Chime, Alarm).



Image: Detailed view of the alarm unit components, including the LED sensor light, volume switch, and magnetic sensor.

4. SETUP

Follow these steps to properly install your TECKNET Wireless Door and Window Alarm:

1. **Prepare the Surface:** Ensure the installation area on your door/window frame and the door/window itself is clean and dry. Wipe away any dust or debris.
2. **Attach Adhesive:** Peel off the protective backing from the 3M adhesive pads and attach them to the back of both the main alarm unit and the magnetic sensor.
3. **Mount the Units:** Carefully align the main alarm unit and the magnetic sensor. The sensor should be installed within 0.5 inches (approximately 1.27 cm) from the arrow side of the main alarm unit. Ensure the arrows on both parts point towards each other for correct functionality.
4. **Secure Placement:** Press both units firmly onto the desired surface (e.g., door frame and door, window frame and window) for several seconds to ensure a strong bond.

Easy to Install



Image: Step-by-step guide for easy installation of the alarm system.

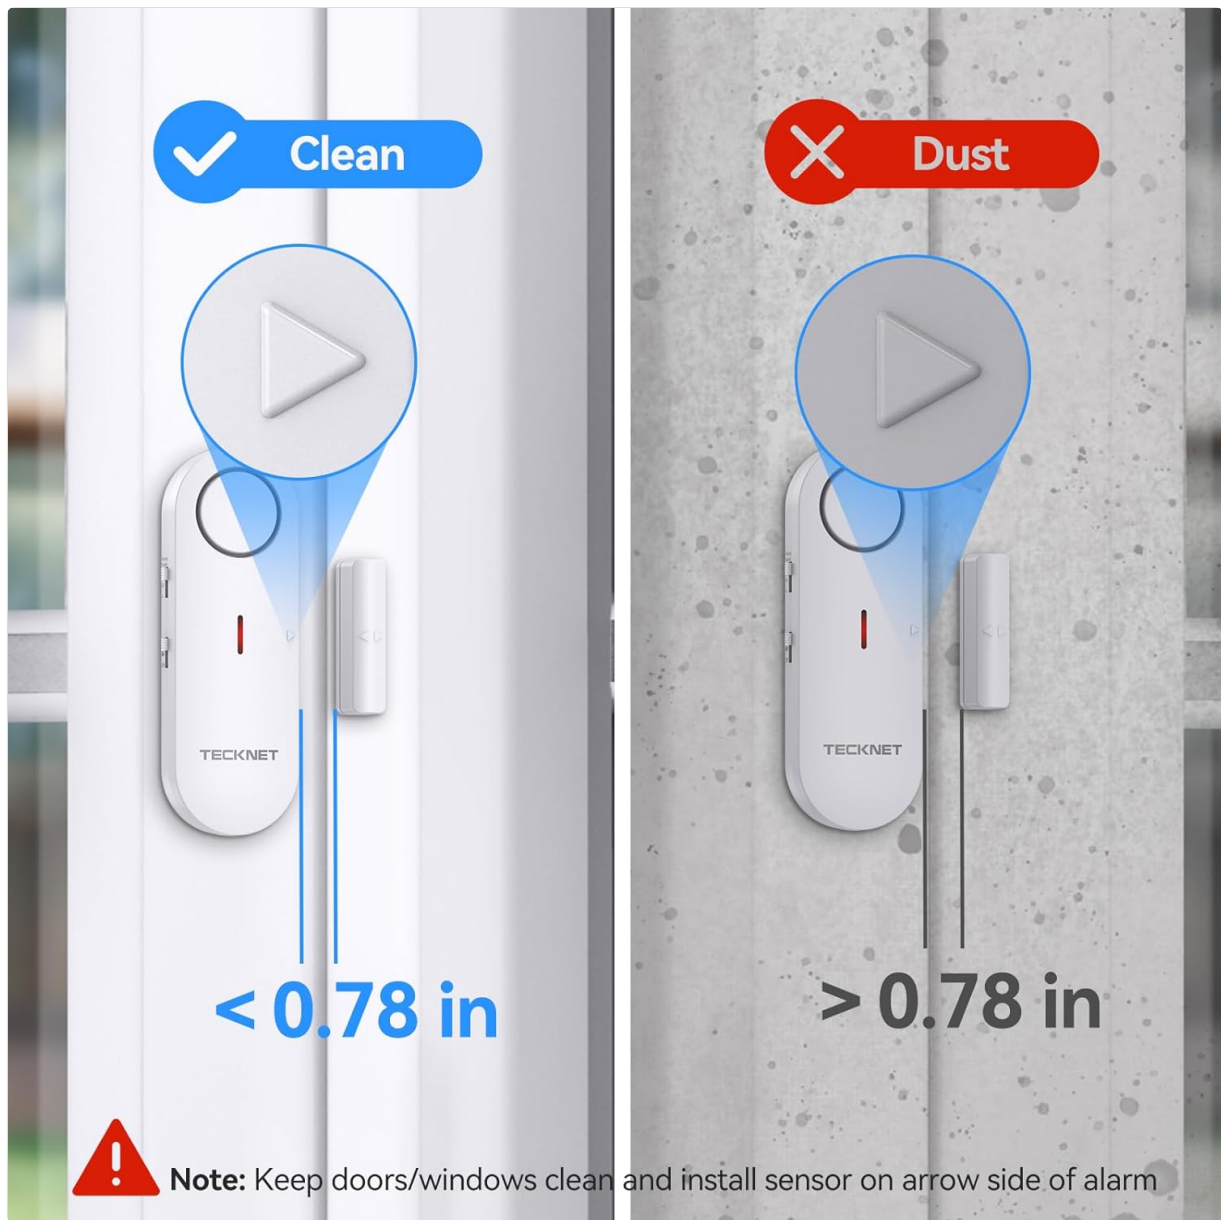 


Image: Proper alignment and a clean surface are crucial for optimal alarm function.

5. OPERATING INSTRUCTIONS

The TECKNET alarm system offers three operational modes and adjustable volume levels:

Mode Selection

Use the slide switch on the side of the main alarm unit to select your desired mode:

- **Off:** The alarm is deactivated and will not sound.
- **Chime:** When the magnetic sensor separates from the main unit (e.g., a door opens), the unit will emit a pleasant chime sound. This is ideal for knowing when someone enters or exits.
- **Alarm:** When the magnetic sensor separates from the main unit, the alarm will sound a loud, continuous alert. This mode is suitable for security purposes, deterring intruders, or alerting you to unauthorized access.

Volume Control

The alarm features a 3-level volume control switch. Adjust the switch to set the desired loudness for both chime and alarm modes.

3 Modes & 3-Level Volume Switch



Image: The alarm offers three modes and three volume levels for customizable alerts.

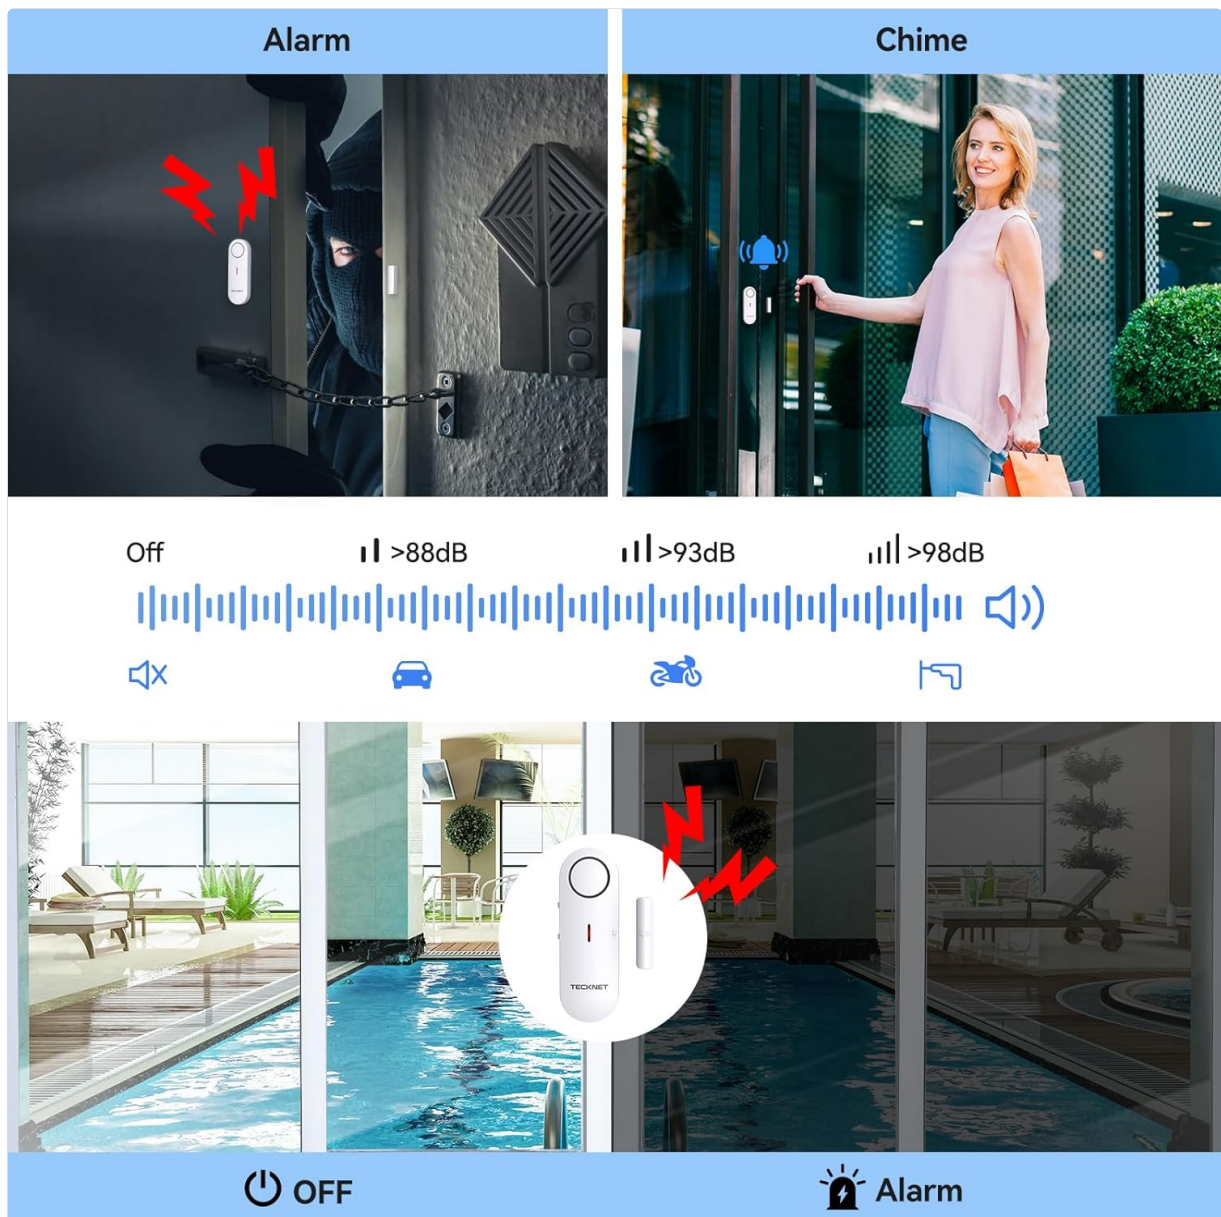 


Image: Visual representation of alarm and chime modes with volume indicators.

6. MAINTENANCE

Battery Replacement

The TECKNET TK-WA806 alarms come with batteries pre-installed, protected by an insulating tab. Before

first use, remove this tab. When the batteries need replacement:

1. Gently slide the main alarm unit upwards from its mounting plate to detach it. The mounting plate will remain affixed to your surface.
2. Locate the small screw on the back of the alarm unit. Unscrew it to open the battery compartment.
3. Replace the old batteries with new Alkaline batteries of the specified type (refer to specifications).
4. Securely close the battery compartment and reattach the alarm unit to its mounting plate.

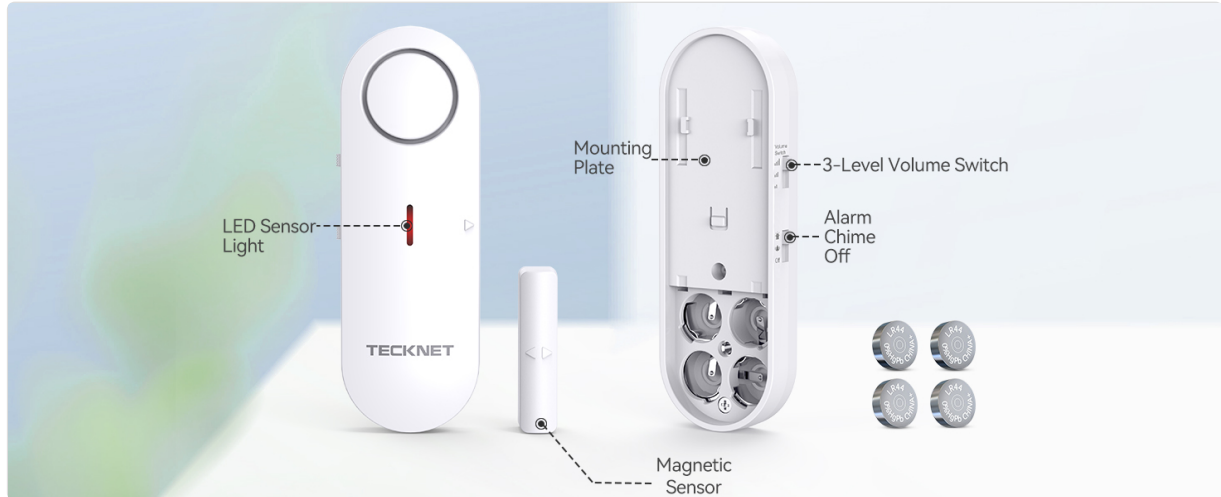


Image: The battery compartment is accessible from the back of the main alarm unit.

7. TROUBLESHOOTING

• Alarm not sounding:

- Ensure the mode switch is not set to 'Off'.
- Check if the batteries need replacing.
- Verify that the main alarm unit and magnetic sensor are correctly aligned and within the specified distance (less than 0.5 inches).

• False alarms:

- Ensure the installation surface is clean and stable, preventing accidental movement.
- Confirm the magnetic sensor is securely attached and not shifting.

8. SPECIFICATIONS

Feature	Detail
Control Method	Touch
Noise Level	65 Decibels (Adjustable)
Mounting Type	Door Mount (Adhesive)
Maximum Range (Sensor Gap)	0.78 Inches (2 cm)
Sensor Technology	Contact Sensor
Manufacturer	TECKNET

Part Number	TK-WA701
Item Weight	9 ounces
Product Dimensions	5.35 x 4.72 x 1.42 inches
Item Model Number	TK-WA806
Style	6 PCS
Included Components	Case
Batteries Included?	No (Pre-installed with pull tab)
Batteries Required?	No
Battery Type	Alkaline
Power Source	Battery Powered
Compatible Devices	Home Security System

9. WARRANTY AND SUPPORT

TECKNET offers a **36-Month Warranty** for this product (registration may be required). If you encounter any problems during the use of your TECKNET TK-WA806 Wireless Door and Window Alarm System, please do not hesitate to contact our professional customer service team for assistance.