

[Manuals.plus](#) /

> [ALLIMITY](#) /

> Allimity ERF3M90H Remote Control User Manual for Hisense TVs

ALLIMITY ERF3M90H

Allimity ERF3M90H Remote Control User Manual

Model: ERF3M90H

INTRODUCTION

This manual provides instructions for the Allimity ERF3M90H replacement remote control, designed for use with various Hisense TV models. This remote is compatible with models such as ERF3V90H, 43A6H, 50A6H, 55A6H, 65A6H, 75A6H, 50U6H, 55U6H, 65U6H, 75U6H, 65U8H, and 75U8H. For basic functions, no programming is required; simply insert batteries. Voice control functionality requires initial pairing with your television.



Angled view of the Allimity ERF3M90H remote control, highlighting its design.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and remove it.
3. Insert two (2) AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: Batteries are not included with the remote control.





Back view of the remote control with the battery compartment open, showing correct AAA battery placement.

2. Initial Pairing for Voice Function

While the remote control's basic functions (channel, volume, power) typically work immediately after battery installation, the voice control feature requires pairing with your Hisense TV. Refer to your Hisense TV's user manual for specific instructions on how to pair a new Bluetooth remote control for voice functionality. This usually involves navigating to the TV's settings menu (e.g., Remote & Accessories, Bluetooth Settings) and following the on-screen prompts to add a new device.

OPERATING INSTRUCTIONS

The Allimity ERF3M90H remote control provides intuitive access to your Hisense TV's functions. Below are the primary button functions:



Front view of the Allimity ERF3M90H remote control, showing power, input, navigation, volume, channel, and quick access buttons, along with a microphone icon indicating voice control.

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Google Assistant / Voice Search Button ()::** Activates the voice control feature (requires pairing).
- **Settings Button (⚙️):** Opens the TV's settings menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (🏠):** Returns to the TV's home screen.
- **Volume Up/Down (VOL ▲/▼):** Adjusts the TV's volume.
- **Mute Button ()::** Mutes or unmutes the TV's audio.
- **Channel Up/Down (CH ▲/▼):** Changes TV channels.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, Prime Video, YouTube, Disney+, Tubi, Peacock).

Voice Control

After successful pairing, press the Google Assistant / Voice Search button and speak clearly into the remote control. You can use voice commands to search for content, control playback, adjust settings, and more. Ensure you are within the effective range of the TV for optimal performance.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity and are not depleted. Replace with fresh AAA batteries if necessary.
- **Obstructions:** Ensure there are no objects blocking the path between the remote and the TV's infrared receiver (if using IR functions). For Bluetooth, ensure the remote is within range (up to 10 meters).
- **TV Power:** Confirm the TV is powered on and not in standby mode.

Voice Control Issues

- **Pairing:** Verify that the remote control is properly paired with your Hisense TV for voice functionality. If

not, follow the pairing instructions in the Setup section or your TV's manual.

- **Microphone:** Ensure nothing is obstructing the remote's microphone.
- **Internet Connection:** Voice commands often require an active internet connection on your TV. Check your TV's network settings.

SPECIFICATIONS

Brand	ALLIMITY
Model Name	ERF3M90H, ERF3V90H
Compatible Devices	Hisense Televisions
Connectivity Technology	Bluetooth
Special Feature	Voice Search
Max Number of Supported Devices	1
Button Quantity	27
Controller Type	Voice Control
Maximum Range	10 Meters
Power Supply	2 x AAA 1.5V Batteries (Not Included)
Item Weight	63 Grams
Item Dimensions (L x W x H)	6" x 1.8" x 0.5" (15.24 cm x 4.57 cm x 1.27 cm)

WARRANTY INFORMATION

This product is covered by the standard manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For specific details regarding warranty duration and terms, refer to the documentation provided at the time of purchase or contact the seller directly.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the retailer or the manufacturer's customer support. Provide your product model number (ERF3M90H) and a detailed description of the problem to facilitate efficient support.