

[Manuals.plus](#) /

› [KXAUTO](#) /

› KXAUTO Men's Sports Outdoor Waterproof Military Watch Model 8049/2025 User Manual

KXAUTO 8049/2025

KXAUTO Men's Sports Outdoor Waterproof Military Watch Model 8049/2025 User Manual

Your guide to setting up, operating, and maintaining your KXAUTO watch.

1. PRODUCT OVERVIEW

The KXAUTO Men's Sports Outdoor Waterproof Military Watch (Model 8049/2025) is a multi-functional timepiece designed for durability and versatility. It features both analog and digital displays, an LED backlight, alarm, stopwatch, and date functions, all housed in a robust, waterproof casing.



Figure 1: Front view of the KXAUTO Model 8049/2025 watch, showcasing its robust design and dual display.

Watch Components

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different functions (Time, Alarm, Stopwatch).
- **START Button:** Used to start/stop the stopwatch, adjust settings, or view specific data.
- **RESET Button:** Used to reset the stopwatch, clear settings, or move to the next setting option.
- **Crown:** Adjusts the analog time.



Figure 2: Close-up view of the watch face, highlighting the function buttons and digital display.

2. SETUP AND INITIAL CONFIGURATION

Setting Analog Time

1. Pull the crown out to the first position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to secure the analog time.

Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display starts flashing, indicating it's in setting mode.
2. Press the **RESET** button to cycle through the settings (seconds, hour, minute, month, date, day of week).
3. Use the **START** button to adjust the flashing value.

4. Once all settings are correct, press the **MODE** button to exit the setting mode.

Setting the Alarm

1. Press the **MODE** button until the alarm time (ALM) is displayed.
2. Press the **RESET** button to select the hour or minute digit you wish to set. The selected digit will flash.
3. Use the **START** button to adjust the flashing digit.
4. Press the **MODE** button to confirm and exit the alarm setting mode.
5. To activate/deactivate the alarm, press the **START** button while in alarm mode. An alarm icon (ALM) will appear/disappear on the display.

3. OPERATING INSTRUCTIONS

Using the Backlight

Press the **LIGHT** button to illuminate the digital display for better visibility in low-light conditions. The backlight will remain active for a few seconds.



Figure 3: The watch display with its green LED backlight activated.

Using the Stopwatch

1. Press the **MODE** button until the stopwatch (CHR) is displayed, showing '00:00:00'.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the stopwatch.
4. To resume, press the **START** button.
5. To reset the stopwatch to '00:00:00', press the **RESET** button while the stopwatch is paused.

Switching Display Modes

Repeatedly press the **MODE** button to cycle through the available display modes: Time, Alarm, and Stopwatch.

4. MAINTENANCE

Water Resistance

This watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for daily use, showering, and swimming in shallow water. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Do not operate buttons underwater.

Video 1: Demonstration of the watch's water resistance. This video shows a similar model (Smael 8053) being submerged in water, highlighting its waterproof capabilities.

Video 2: Another demonstration of water resistance for a KXAUTO watch (Model 6092), showing it submerged in water.

Cleaning

Wipe the watch regularly with a soft, damp cloth to remove dirt and sweat. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement

When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5. TROUBLESHOOTING

- **Digital Display is Blank:** The battery may be depleted. Replace the battery.
- **Digital Time is Incorrect:** Re-set the digital time following the instructions in Section 2.
- **Analog Time is Incorrect:** Re-set the analog time using the crown as described in Section 2.
- **Buttons are Unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not have a specific lock function). If issues persist, a battery replacement might be needed, or contact support.
- **Water Inside the Watch:** Immediately stop using the watch and seek professional repair. Water damage is typically not covered under warranty if water resistance guidelines were not followed.

6. SPECIFICATIONS



Figure 4: Detailed product information including dimensions and materials.

Feature	Detail
Model Number	8049 / 2025
Movement	Electron + Quartz
Watchcase Material	ABS
Watchband Material	TPU
Surface Material	Acrylic Mirror Surface
Water Resistance	50M (5ATM)
Weight	73 g
Thickness	17.5 mm
Total Length	255 mm
Wearing Circumference	Max 230 mm, Min 160 mm

Battery Type	Maxell Japanese battery
Parcel Dimensions	7.39 x 7.19 x 6.2 cm
Date First Available	April 3, 2023

7. WARRANTY AND SUPPORT

Your KXAUTO watch is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, warranty claims, or any other inquiries, please contact KXAUTO customer service through the retailer where the product was purchased or visit the official KXAUTO website for contact information.