

ODK 0420AV5ZF8Q

ODK 4-Drawer Dresser Instruction Manual

Model: 0420AV5ZF8Q

INTRODUCTION

Thank you for choosing the ODK 4-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new dresser. Please read these instructions carefully before beginning assembly and retain them for future reference.

This dresser is designed for organizing small items, clothing, and blankets in various living spaces, particularly suitable for bedrooms or areas with limited space. Its compact design features a sturdy steel frame, a durable wood top, and four fabric drawers.





Image: The ODK 4-Drawer Dresser, fully assembled, showcasing its black fabric drawers and wood top.

SAFETY INFORMATION

As this dresser requires assembly, ensure that it is assembled correctly to maintain stability and prevent tipping. Improper assembly may result in safety hazards. Always follow the assembly instructions provided and consult the manufacturer's customer service if you require assistance.

- Keep all small parts and packaging materials away from children during assembly.
- Do not overload drawers. Distribute weight evenly.
- Ensure the dresser is placed on a level surface. Use the adjustable feet to stabilize if necessary.
- Periodically check all connections and fasteners to ensure they remain tight.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Steel Frame Components (Side frames, back bars)
- Wooden Top Board
- Fabric Drawers (4 units)
- Drawer Handles
- Adjustable Leveling Feet
- Assembly Hardware (Screws, Allen wrench, etc.)
- Instruction Manual

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches.

- 1. Unpack and Identify Parts:** Lay out all components and hardware. Compare them with the parts list in your package to ensure everything is present.
- 2. Assemble the Steel Frame:**
Connect the side frames using the horizontal bars. Ensure all connections are secure. Attach the X-crossbar to the back of the frame for enhanced stability.



Image: Step-by-step visual guide for assembling the metal frame components.



Image: Detail of the X-crossbar for frame reinforcement.

3. **Attach the Wooden Top Board:** Place the wooden top board onto the assembled steel frame. Secure it using the provided screws and tools.



Image: The black wooden top board, highlighting its quality and texture.

4. **Prepare and Insert Fabric Drawers:** Unfold each fabric drawer. Insert the bottom panel into each drawer to create a rigid base. Attach the handles to the front of each drawer.



Dimension



Image: The fabric drawers, ready for insertion into the frame.

5. **Attach Adjustable Feet:** Screw the adjustable leveling feet into the bottom of the dresser frame. Adjust them as needed to ensure the dresser is stable and level on your floor.



Image: Demonstrating the adjustment of the leveling feet for stability.

OPERATING INSTRUCTIONS

The ODK 4-Drawer Dresser is designed for straightforward use.

- **Drawer Use:** Gently pull the handles to open the fabric drawers. Push them back in until they are fully closed. Avoid forcing drawers open or shut.
- **Weight Capacity:** Each fabric drawer is suitable for light to medium-weight items such as clothing, linens, and small accessories. Do not place excessively heavy items in the drawers or on the wooden top to prevent damage or instability.
- **Top Surface:** The wooden top can be used to place decorative items, lamps, or other lightweight objects. Ensure items are stable and do not overhang the edges.



Image: The dresser with drawers open, illustrating storage capacity for various items.

MAINTENANCE

Proper care will extend the life of your dresser.

- **Cleaning:** Wipe the wooden top and steel frame with a dry cloth. For the fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Re-tighten if any looseness is detected.
- **Environment:** Avoid placing the dresser in direct sunlight or near heat sources, which can affect the wood and fabric over time.

TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **Dresser is Wobbly:** Ensure the dresser is on a level surface. Adjust the leveling feet at the bottom of the frame until stability is achieved. Check that all frame screws are securely tightened.
- **Drawers Do Not Slide Smoothly:** Verify that the fabric drawers are correctly inserted into their respective slots and that the bottom panels are fully engaged. Ensure no items are obstructing the drawer's movement.
- **Missing Parts or Damaged Components:** Do not attempt to force assembly with incorrect or damaged parts. Contact ODK customer service immediately for replacements.

SPECIFICATIONS

Feature	Detail
Brand	ODK
Model Name	4 Drawer Dresser
Model Number	0420AV5ZF8Q
Product Dimensions	11.73"D x 15.74"W x 31.77"H
Color	Black
Room Type	Bedroom
Furniture Finish	Black
Drawer Type	4-Drawer
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes
Item Weight	11.9 Pounds
UPC	850050098881

Dimension



Image: Dimensional diagram of the ODK 4-Drawer Dresser.

WARRANTY AND SUPPORT

Warranty: This ODK dresser comes with a **Lifetime Warranty**, ensuring long-term quality and support for manufacturing defects.

Customer Service: For any installation assistance, missing parts, quality issues, or general inquiries, ODK offers **24/7 customer support**. Please contact us for quick replacements or help.

Contact Information: Refer to the contact details provided in your product packaging or visit the official ODK website for support.

IMPORTANT NOTE ON VIDEOS

While product videos may be available, specific details regarding their creator type and relevance were not provided in the product data. Therefore, no videos have been embedded in this manual to ensure compliance with content guidelines.

© 2025 ODK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question