

Fotopro FotoPro X-Go Carbon

Fotopro 62-inch Carbon Fiber Travel Tripod Instruction Manual

Model: FotoPro X-Go Carbon

1. INTRODUCTION

Thank you for choosing the Fotopro 62-inch Carbon Fiber Travel Tripod. This lightweight and compact tripod is designed for photographers seeking versatility and portability. It features a durable carbon fiber construction, a 360° ball head with an Arca-Swiss quick release plate, and a detachable monopod function. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

2. WHAT'S IN THE BOX

Upon unboxing your Fotopro X-Go Carbon Tripod, please verify that all components are present:

- Fotopro 62-inch Carbon Fiber Travel Tripod
- Ball Head with Arca-Swiss Quick Release Plate
- Carry Bag
- Allen Wrenches (for adjustments)
- Removable Rubber Feet (and spikes)

PACKAGE LIST

X-GO CARBON E2 TRIPOD

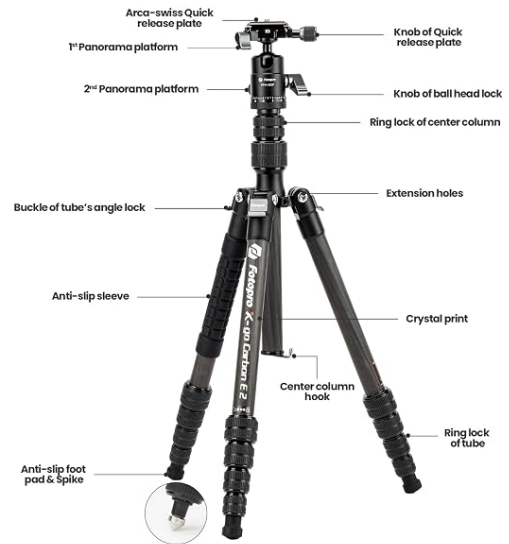


Image: Contents of the Fotopro X-Go Carbon E2 Tripod package, including the tripod, carry bag, and accessories.

3. SETUP INSTRUCTIONS

3.1 Unfolding the Tripod

1. Remove the tripod from its carry bag.
2. Gently extend the tripod legs outwards until they are fully spread.
3. Adjust the leg angles by pressing the leg angle adjustment locks located at the top of each leg. There are three adjustable angles for various terrains.

3 Gears alternative leg angles



Image: Demonstrates the three alternative leg angles for the Fotopro tripod, allowing for versatile positioning.

3.2 Adjusting Leg Height

The tripod features 5-section legs. To adjust the height:

1. Twist the leg locks counter-clockwise to loosen each section.
2. Extend the leg sections to your desired height.
3. Twist the leg locks clockwise to secure each section firmly.

Adjustable Height Tripod

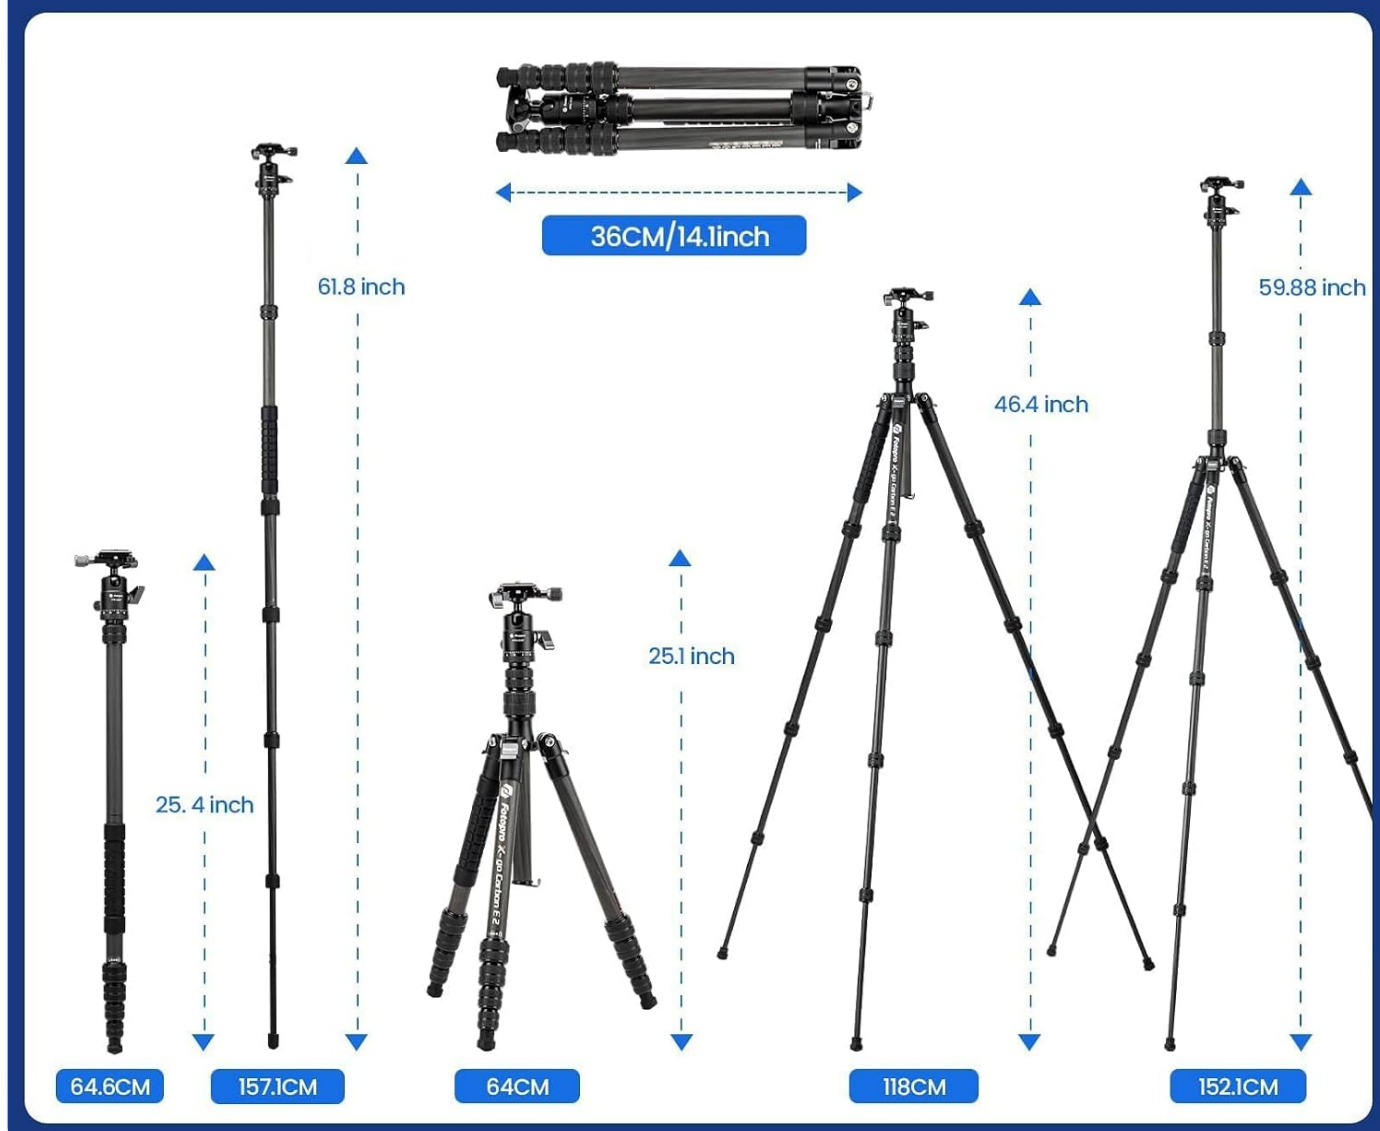


Image: Illustrates the various adjustable heights of the Fotopro tripod, from folded to fully extended, including monopod configurations.

3.3 Attaching Your Camera

1. Ensure the Arca-Swiss quick release plate is securely attached to the bottom of your camera.
2. Align the quick release plate with the clamp on the ball head.
3. Slide the plate into the clamp and tighten the locking knob until your camera is firmly secured.

Professional and Portable



Max Load
8kg/17.63lb

Weight Only
0.98kg/2.16lb



Image: A Fotopro tripod set up with a camera and an external light, demonstrating its professional and portable use.

3.4 Monopod Conversion

One of the tripod's legs can be detached and combined with the center column to form a monopod:

1. Unscrew the designated leg (usually the one with the foam grip) from the tripod body.
2. Remove the center column from the tripod.
3. Attach the ball head to the top of the detached leg.
4. Alternatively, attach the center column to the top of the detached leg for extended height.

Fotopro Multifunctional Tripod



Remove the monopod leg tube from the tripod



Attach the ball head to the monopod leg



Twist the hook and center column, then combine the leg and center column



Monopod



Hiking stick



selfie stick



Ball Head +
Monopod Leg



Ball Head +
Centre Column +
Monopod Leg

Image: Step-by-step guide on how to convert the Fotopro tripod into a monopod, showing the detachment of a leg and combination with the center column.

4. OPERATING INSTRUCTIONS

4.1 Using the Ball Head

The 360° metal ball head allows for flexible camera positioning:

- Loosen the main locking knob to adjust the camera angle freely.
- Tighten the main locking knob to secure the camera in position.
- Use the separate panning base knob to achieve smooth 360° panoramic rotations without adjusting the camera's tilt.

4.2 Reversible Center Column

For low-angle photography or macro shots, the center column can be inverted:

1. Loosen the center column locking knob.
2. Pull the center column completely out.
3. Invert the column and reinsert it into the tripod body.
4. Tighten the locking knob to secure.

Various Occasions



Image: The Fotopro tripod being used in diverse outdoor scenarios, showcasing its adaptability for different photography occasions.

4.3 Using the Monopod

The detachable monopod can be used as a trekking pole or selfie stick:

- Once converted, adjust the monopod's length using the twist locks on its sections.
- Ensure all sections are securely locked before use.

Your browser does not support the video tag.

Video: A demonstration of the Fotopro X-Go Carbon E2 tripod's features, including its compact size, quick setup, and versatility for various camera accessories.

Your browser does not support the video tag.

Video: An overview of the 2024 Fotopro X-Go Carbon Fibre Tripod, highlighting its compact design, quick deployment, and ability to convert into a monopod.

Your browser does not support the video tag.

Video: A detailed look at the Fotopro X-GO Carbon fiber tripod, showcasing its robust build, adjustable features, and ease of use for professional photography.

5. FEATURES AND COMPONENTS

The Fotopro X-Go Carbon Tripod is engineered with several key features for enhanced usability:

- **Compact for Travel:** Made of carbon fiber, weighing only 2.16 lbs (0.98 kg) with a folded length of 14.17 inches (36 cm).
- **2-in-1 Tripod and Monopod:** Quickly converts for versatile shooting, extending up to 61 inches (157 cm) as a monopod.
- **Adjustable Heights and Angles:** 5-section legs with three leg angle adjustments and a reversible center column for diverse shooting positions.
- **360° Ball Head & Arca-Swiss Quick Release:** 25mm metal ball head for free angle rotation and a 360° panning base for panoramic shots.
- **Humanized Design:** Non-slip rubber feet for stability, a weight hook for heavy equipment, and a convenient carrying case.

2-1 Tripod and Monopod



Image: An exploded view of the Fotopro tripod highlighting its key components, including the 1/4" quick release plate, bubble level, 360-degree ball head, non-slip rubber feet, leg angle adjustment lock, 4-section leg, and removable weight hook.

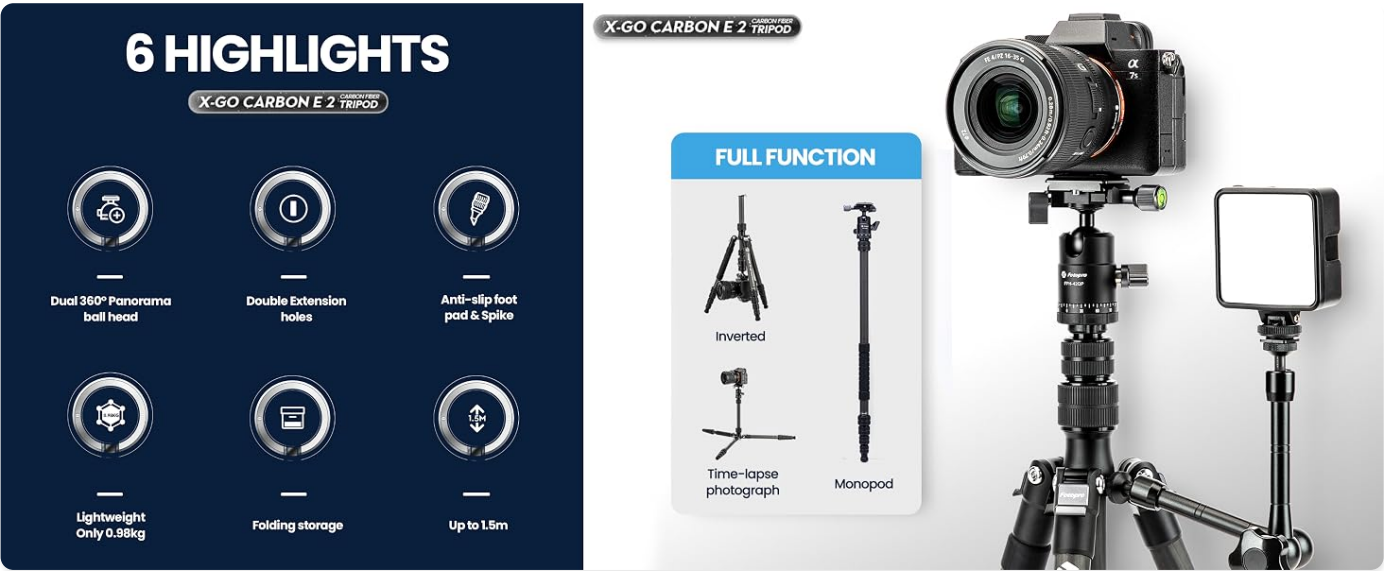


Image: A graphic detailing six key highlights of the Fotopro X-Go Carbon E2 Tripod, such as dual 360° panorama ball head, double extension holes, anti-slip foot pad & spike, lightweight design, folding storage, and up to 1.5m height.

6. SPECIFICATIONS

Feature	Specification
Brand	Fotopro
Model Name	X-Go Carbon
Material	Carbon Fiber
Item Weight	0.98 Kilograms (2.16 lbs)
Weight Limit	17.63 Pounds (8 kg)
Maximum Height	59 Inches (152 cm)
Minimum Height	34 Centimeters (13.38 inches)
Folded Size	14.17 inches (36 cm)
Leg Diameter	0.86 inches (22 mm)
Tripod Head Type	Ball Heads
Compatible Devices	Camcorder, Camera
UPC	732781384511

7. MAINTENANCE

To ensure the longevity and optimal performance of your Fotopro tripod, follow these maintenance guidelines:

- Regularly clean the tripod legs and joints with a soft, dry cloth to remove dust and debris.
- Avoid using harsh chemicals or abrasive materials that could damage the carbon fiber or metal finishes.
- Periodically check all screws and locking mechanisms for tightness. Use the provided Allen wrenches for any adjustments.
- If used in wet or sandy conditions, disassemble the leg sections (if possible) and clean thoroughly before reassembly to prevent corrosion or sticking.
- Store the tripod in its carry bag in a dry, cool place when not in use.

8. TROUBLESHOOTING

If you encounter any issues with your Fotopro tripod, refer to the following common problems and solutions:

- **Legs not extending/retracting smoothly:** Check for dirt or sand in the leg sections. Clean thoroughly. Ensure twist locks are fully loosened before adjusting.
- **Camera not stable on ball head:** Ensure the quick release plate is correctly seated and the locking knob is fully tightened. Verify the camera screw on the plate is secure.
- **Ball head movement is stiff:** Loosen the main locking knob completely. If stiffness persists, a small amount of silicone-based lubricant can be applied to the ball, but avoid over-lubrication.
- **Tripod feels wobbly:** Ensure all leg sections are fully extended and securely locked. Check that the leg angle adjustment locks are engaged. For maximum stability, extend the lowest leg sections first.

If problems persist, please contact Fotopro customer support.

9. WARRANTY AND SUPPORT

The Fotopro 62-inch Carbon Fiber Travel Tripod comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product is free from defects in material and workmanship under normal use.

For warranty claims, technical support, or any inquiries, please visit the official Fotopro website or contact their customer service department. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BY8SXTKD>

More documents and user manuals: <https://manuals.plus/>