

## vamav CHSYNC 15

# Vamav Sync 15 Professional Amplified Speaker User Manual

Model: CHSYNC 15

## 1. INTRODUCTION

Thank you for choosing the Vamav Sync 15 Professional Amplified Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

- **Power Source:** Ensure the speaker is connected to a power source that matches the voltage specified on the device.
- **Ventilation:** Do not block ventilation openings. Maintain adequate space around the speaker for proper airflow.
- **Water and Moisture:** Keep the speaker away from water, rain, and excessive humidity. Do not operate with wet hands.
- **Heat:** Avoid placing the speaker near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Disconnect from power before cleaning. Use a dry, soft cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the speaker on a stable, flat surface to prevent it from falling.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Vamav Sync 15 Amplified Speaker
- Power Cable
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various components of your Vamav Sync 15 speaker.



**Figure 4.1: Front View.** This image displays the front of the Vamav Sync 15 speaker, featuring a protective grille over the

speaker cone and an illuminated LED strip along the side, indicating power and operational status.





**Figure 4.2: Rear View.** The rear of the speaker is shown, highlighting the retractable handle for portability and integrated wheels at the base, designed for easy transport.

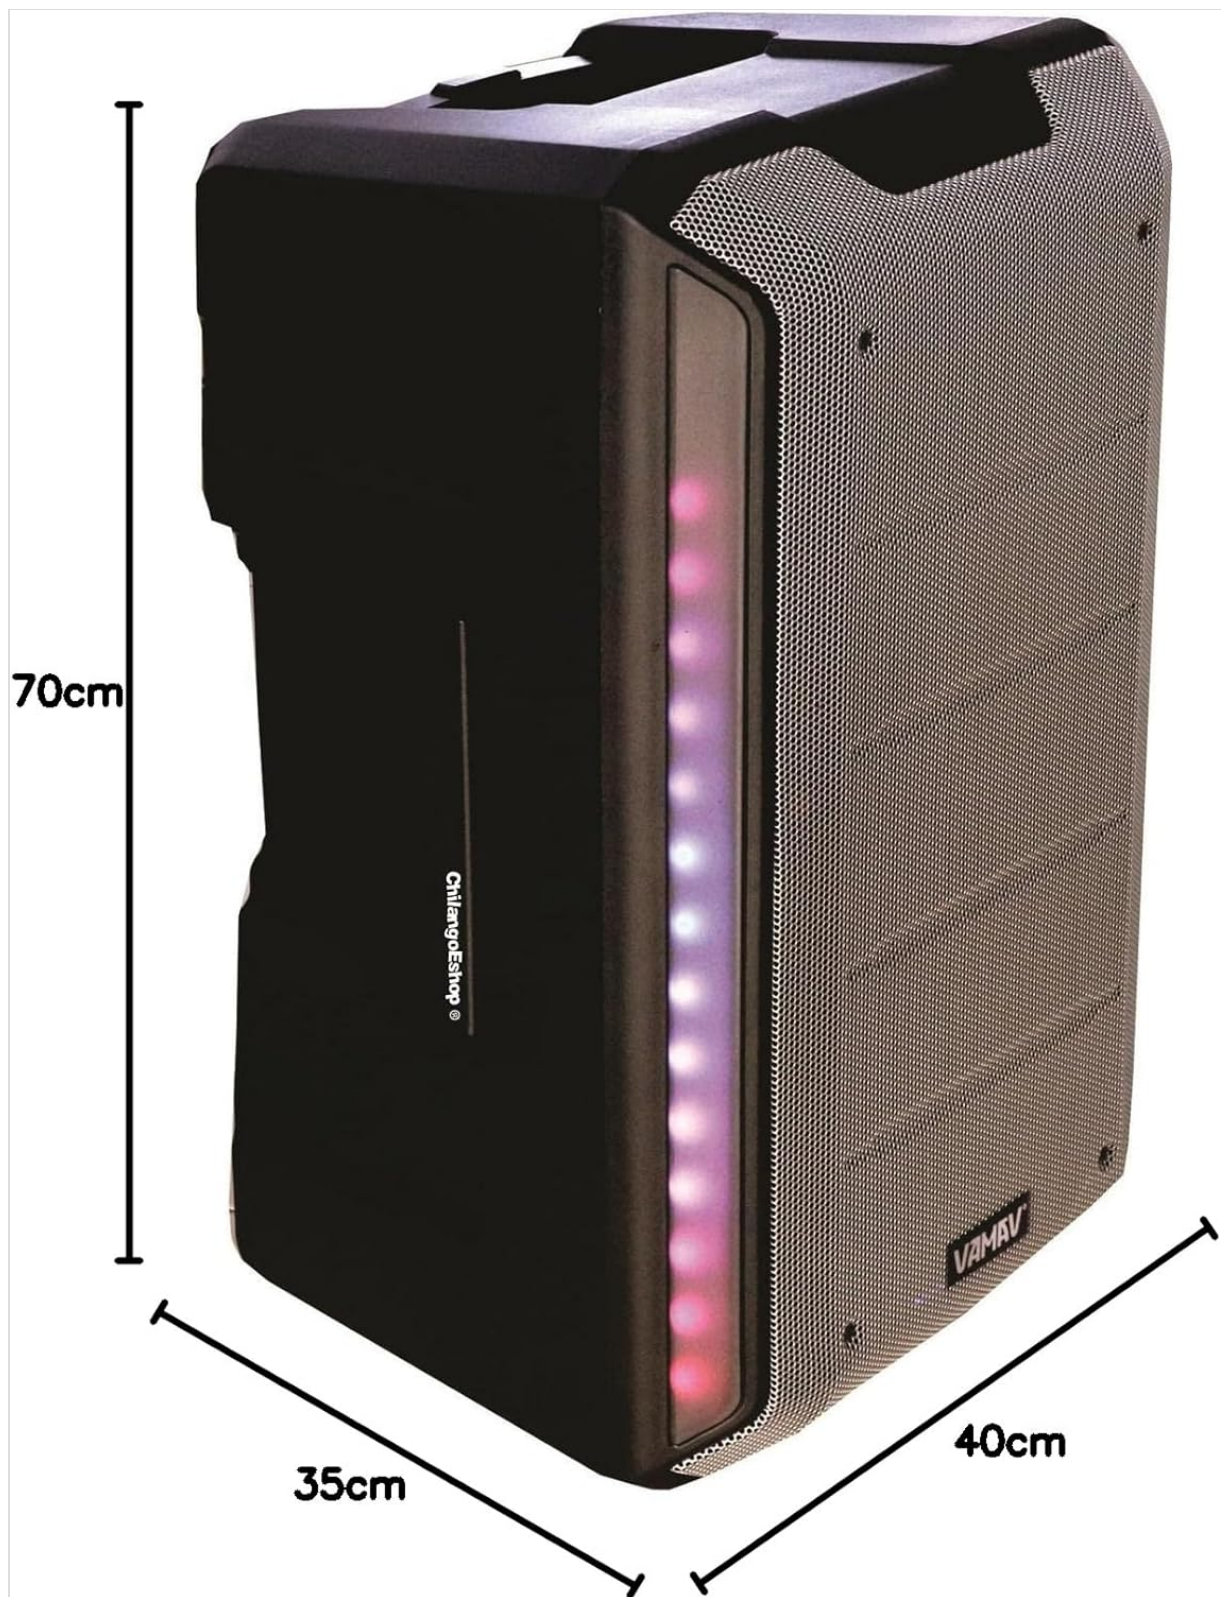


**Figure 4.3: Control Panel.** A detailed view of the control panel, featuring an MP3 digital display, Bluetooth connectivity indicator, USB and SD card slots, various input ports (XLR, 6.3mm Jack, RCA), and control knobs for Echo, Delay, Bass, Treble, Microphone Levels, Line Level, and Master Volume.





**Figure 4.4: Bottom View.** This image illustrates the bottom of the speaker, showing the robust wheels for mobility and a central socket designed for mounting the speaker on a stand.



**Figure 4.5: Speaker Dimensions.** An illustration indicating the approximate dimensions of the Vamav Sync 15 speaker: 70 cm in height, 35 cm in depth, and 40 cm in width.

## 5. SETUP

1. **Unpacking:** Carefully remove the speaker and all accessories from the packaging.
2. **Placement:** Position the speaker on a stable, flat surface or mount it on a compatible speaker stand using the bottom pole mount socket. Ensure adequate space for ventilation.
3. **Power Connection:** Connect the provided power cable to the speaker's power input and then to a suitable electrical outlet.

4. **Initial Power On:** Turn the Master Volume knob to its minimum setting before powering on the unit to avoid sudden loud sounds. Press the power switch to turn on the speaker.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Power On/Off

- To power on, ensure the Master Volume is low, then flip the power switch located on the control panel.
- To power off, turn the Master Volume to minimum, then flip the power switch.

### 6.2. Bluetooth Connection

1. Turn on the speaker. The display will show the current mode.
2. Press the 'MODE' button on the control panel until 'Bluetooth' is selected. The Bluetooth indicator will flash, signifying it is ready for pairing.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select 'CHSYNC 15' from the list of devices. Once connected, the Bluetooth indicator will stop flashing and remain solid.
5. You can now play audio from your device through the speaker. The effective Bluetooth range is approximately 10 meters.

### 6.3. USB/SD Card Playback

1. Insert a USB flash drive or SD card into the respective slot on the control panel.
2. The speaker will automatically switch to USB/SD mode and begin playing audio files. If not, press the 'MODE' button to select USB or SD.
3. Use the playback controls (Play/Pause, Next, Previous) on the control panel to manage your audio.

### 6.4. Connecting Microphones and Line-in Devices

- **Microphones:** Connect microphones to the 'MIC 1 IN' or 'MIC 2 IN' XLR or 6.3mm Jack inputs. Adjust individual microphone levels using the 'MIC 1 LEVEL' and 'MIC 2 LEVEL' knobs.
- **Line-in Devices:** Connect external audio sources (e.g., mixer, CD player) to the 'LINE IN' RCA inputs or the 6.3mm Jack input. Adjust the input level using the 'LINE LEVEL' knob.
- **Line Out:** Use the 'LINE OUT' 6.3mm Jack to connect to another amplified speaker or recording device.

### 6.5. Audio Controls

- **ECHO:** Adjusts the echo effect for microphones.
- **DELAY:** Controls the delay time of the echo effect.
- **BASS:** Adjusts the low-frequency audio output.
- **TREBLE:** Adjusts the high-frequency audio output.
- **MASTER VOL:** Controls the overall output volume of the speaker.

## 7. MAINTENANCE

---

- **Cleaning:** Regularly wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.



- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Inspect power and audio cables periodically for damage. Replace any frayed or damaged cables immediately.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty; Power switch off.	Ensure power cable is securely connected; Test outlet with another device; Turn power switch on.
No sound output	Master Volume too low; Input source not selected; Input device not connected or faulty; Mute activated.	Increase Master Volume; Select correct input mode (Bluetooth, USB, Line In); Check connections of input device; Ensure no mute function is active.
Bluetooth not connecting	Speaker not in Bluetooth mode; Device too far; Bluetooth not enabled on source device; Already connected to another device.	Press MODE button to select Bluetooth; Move device closer (within 10m); Enable Bluetooth on your device; Disconnect from other devices.
USB/SD card not playing	Incorrect file format; USB/SD card faulty or improperly inserted; Speaker not in USB/SD mode.	Ensure audio files are compatible (e.g., MP3); Reinsert USB/SD card; Press MODE button to select USB/SD.

## 9. SPECIFICATIONS

Feature	Specification
Model Name	CHSYNC 15
Speaker Type	Monitor, Amplified (Active)
Speaker Size	15 Inches
System	Two-way system
Voice Coil	2" KSV
Driver	34mm
RMS Power Output	150 Watts
Wireless Technology	Bluetooth (10 meters distance)
Connectivity Technology	Bluetooth, USB
Media Playback	USB port, SD card slot





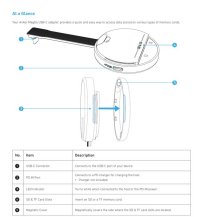
Feature	Specification
Audio Controls	Bass, Treble, Echo, Delay, Master Volume, Mic Levels, Line Level
Inputs	XLR, 6.3mm Jack (x1), RCA
Output	6.3mm Jack
Power Source	Battery
Control Method	Tactile
Material	Plastic
Color	Black
Product Dimensions	13.8"D x 15.8"W x 27.6"H (35cm D x 40cm W x 70cm H)
Compatible Devices	Desktop computer, Laptop, Projector, MP3 player, Smartphone, Tablet, Television, Video game console



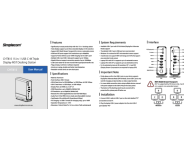
## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2023 Vamav. All rights reserved.

### Related Documents - CHSYNC 15

	<p><a href="#">Stereon BAF-1545/BAF-1545BT 15-Inch Amplified Speakerbox with SD Reader and Bluetooth - User Manual</a></p> <p>Comprehensive user manual for the Stereon BAF-1545 and BAF-1545BT 15-inch amplified speakerboxes. Learn about features, controls, connections, troubleshooting, and specifications.</p>
	<p><a href="#">Chicken Challengers Rule Guide: How to Play the Strategic Card Game</a></p> <p>Learn how to play Chicken Challengers, a strategic turn-based card game for 2-6 players. Discover card types, setup, turns, winning conditions, and advanced rules.</p>
	<p><a href="#">Anker MagGo USB-C Adapter: Portable SD/TF Card Reader</a></p> <p>Anker MagGo USB-C adapter provides fast data access for SD and TF memory cards. Features magnetic attachment, PD-IN port, and high transfer speeds. Ideal for iPhone 15/16 series and other USB-C devices.</p>

	<p><a href="#">ONE SCREEN™ Synthetic Liquid Urine Drug Controls - Instructions for Use (IFU)</a></p> <p>Instructions for Use (IFU) for ONE SCREEN™ Synthetic Liquid Urine Drug Controls by American Screening Corp. This document details product description, intended use, composition, applications, precautions, storage, stability, and target analyte concentrations for these in vitro diagnostic controls.</p>
	<p><a href="#">JSAUX USB-C SD Card Reader User Guide and FAQs</a></p> <p>Comprehensive guide and frequently asked questions for the JSAUX 3-in-1 USB Type-C Micro SD Memory Card Reader OTG Adapter, covering compatibility, troubleshooting, and file transfer for devices like iPhone 15, iPad Pro, and Android phones.</p>
	<p><a href="#">Simplecom CHT815 15-in-1 USB-C 4K Triple Display MST Docking Station User Manual</a></p> <p>Detailed user manual for the Simplecom CHT815 15-in-1 USB-C docking station, featuring triple 4K display support, 100W PD charging, multiple USB ports, Gigabit Ethernet, and SD/MicroSD card readers. Includes specifications, system requirements, installation guide, and troubleshooting tips.</p>