

[Manuals.plus](#) /

› [MYHGRC](#) /

› Universal Remote for All TVs/DVD/Blu-ray Player/VCR/Combo/CBL/Audio Streaming Media Player and More User Manual

MYHGRC c61590dc-1362-4403-ba0e-39d622619457

Universal Remote for All TVs/DVD/Blu-ray Player/VCR/Combo/CBL/Audio Streaming Media Player and More

Model: c61590dc-1362-4403-ba0e-39d622619457 | Brand: MYHGRC

PRODUCT OVERVIEW

The MYHGRC 4-in-1 Universal IR Learning Remote is designed to consolidate control of multiple audio/video devices into a single, convenient unit. This remote is compatible with a wide range of major TV brands, Blu-ray/DVD players, streaming media players, soundbars, and cable boxes, offering a comprehensive solution for your home entertainment system.

It replaces the functions of your original remote controls, providing an ergonomic and lightweight design for comfortable use. The remote utilizes infrared technology for stable performance and fast response times.



Image: The MYHGRC universal remote control, showcasing its sleek design and button layout. This remote is designed to replace multiple original remote controls.

MYHGRC Universal remote



Image: A visual representation of the MYHGRC universal remote's compatibility, showing it can control various devices such as TVs, DVD/Blu-ray players, streaming/media players, cable/satellite boxes, sound bars/audio systems, and home theater setups.

SETUP GUIDE

Before using your universal remote, you will need to install batteries and program it to control your specific devices. The remote requires 2 AAA batteries (not provided).

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

4. Slide the battery cover back into place until it clicks securely.



Image: A close-up view of the universal remote's battery compartment, showing two AAA batteries inserted. The battery cover is shown removed, indicating how to access the compartment.

2. Programming Your Devices

The universal remote can be programmed using two primary methods: Direct Code Entry or Auto Code Search. Direct Code Entry is generally recommended for its simplicity and speed.

Method A: Direct Code Entry (Recommended)

This method involves entering a specific code for your device's brand directly into the remote.

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the corresponding device button on the universal remote (e.g., **TV**, **DVD**, **CBL**, **AUX**) until the

indicator light on the remote stays lit.

3. Enter the 3-digit code for your device's brand using the number buttons. Refer to the code list provided with your remote (not included in this manual).
4. Once the code is entered, the indicator light should turn off. Test the remote by pressing the **Power** button. If the device turns off, the programming was successful.
5. If the device does not respond, try the next code listed for your brand or proceed to Method B.

Method B: Auto Code Search

This method allows the remote to search through its internal code library to find a compatible code for your device.

1. Turn on the device you wish to program.
2. Press and hold the corresponding device button on the universal remote (e.g., **TV**, **DVD**, **CBL**, **AUX**) until the indicator light on the remote stays lit.
3. While holding the device button, press the **Power** button once. The indicator light will start flashing, indicating the remote is searching for a code.
4. Point the remote at your device and wait for the device to turn off. This may take several minutes as the remote cycles through codes.
5. Once the device turns off, immediately press the same device button (e.g., **TV**) to save the code. The indicator light will turn off.
6. Test the remote's functions (e.g., volume, channel, input). If all functions work, programming is complete. If not, repeat the auto code search process.

OPERATING INSTRUCTIONS

Once programmed, your MYHGRC universal remote is ready for daily use. It offers intuitive control over your connected devices.

Basic Functions

- **Device Selection Buttons (TV, CBL, DVD, AUX):** Press the corresponding button to select the device you wish to control. The remote will then send commands to that specific device.
- **Power Button:** Turns the selected device on or off.
- **Number Buttons (0-9):** Used for direct channel entry or code entry during programming.
- **Volume Control (Vol+, Vol-):** Adjusts the volume of the selected audio device or TV.
- **Channel Control (CH+, CH-):** Changes channels on the selected TV or cable box.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections on smart TVs, streaming devices, or DVD/Blu-ray players.
- **Input Button:** Cycles through input sources on your TV.
- **Menu Button:** Accesses the menu of the selected device.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback on DVD/Blu-ray players or streaming devices.
- **Colored Buttons (A, B, C, D):** These buttons often have specific functions depending on the device or application, as indicated on your device's screen or original remote.

The universal remote designed by upgraded chips,
easily control from 15 meters / 50 feet.



Image: A hand holding the universal remote, pointing towards a television in a living room setting. This illustrates the remote's effective control range of up to 15 meters (50 feet).



IR remote



4 in 1 Buttons

Image: A detailed view of the universal remote, highlighting its infrared (IR) capability and the "4 in 1 Buttons" (TV, CBL, DVD, AUX) that allow control over multiple device types.



Image: An infographic showing key features of the universal remote: made from durable ABS material, uses infrared technology, offers stable performance, features silicone buttons for comfortable pressing, and has a slightly cozy, ergonomic design suitable for everyone.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your universal remote control.

Battery Replacement

Replace batteries when the remote's indicator light becomes dim or the remote becomes unresponsive. Always replace both batteries at the same time with new AAA batteries.

1. Open the battery compartment as described in the "Battery Installation" section.
2. Remove the old batteries.
3. Insert new AAA batteries, observing the correct polarity (+/-).
4. Close the battery compartment securely.
5. Dispose of old batteries responsibly according to local regulations.

Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or immerse the remote in water.

TROUBLESHOOTING

If you encounter issues with your universal remote, please refer to the following common solutions:

- **Remote is unresponsive or indicator light does not turn on:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
- **Remote does not control your device:**
 - Ensure you have selected the correct device button (TV, CBL, DVD, AUX) on the remote.
 - Re-attempt the programming process (Direct Code Entry or Auto Code Search) for the specific device.
 - Ensure there are no obstructions between the remote and the device's infrared sensor.
 - Confirm you are within the effective operating range (up to 15 meters / 50 feet).
- **Some buttons work, but others do not:**
 - This may indicate that the programmed code is not fully compatible. Try another code for your device's brand using the Direct Code Entry method, or re-run the Auto Code Search.
- **Remote has a delay in response:**
 - While the remote is designed for fast response, ensure fresh batteries are used.
 - Ensure direct line of sight to the device.

If you continue to experience issues after following these steps, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	c61590dc-1362-4403-ba0e-39d622619457
Brand	MYHGRC
Compatible Devices	DVD/Blu-ray Player, Television, VCR, Streaming Media Players, Soundbars, Cable Boxes
Max Number of Supported Devices	18 (4-in-1 functionality for primary device types)
Color	Black
Special Feature	Lightweight, Universal, Infrared (IR)
Batteries Required	2 AAA batteries (not included)
Item Weight	0.882 ounces (approx. 25 grams)
Package Dimensions	7.05 x 2.05 x 1.3 inches (approx. 17.9 x 5.2 x 3.3 cm)



Image: A side-by-side view of the universal remote, illustrating its dimensions: approximately 18cm (7.08in) in length, 4.5cm (1.77in) in width, and 2.7cm (1.06in) in thickness.

CUSTOMER SUPPORT

MYHGRC is committed to 100% customer satisfaction. If you have any questions regarding the setup, operation, or compatibility of your universal remote, or if you encounter any issues, please do not hesitate to contact us.

We are ready to provide instructions, specific steps, or other detailed solutions to ensure your satisfaction. Please refer to the contact information provided with your product packaging or visit the official MYHGRC website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question