



[Manuals.plus](#) /

› [Timegyro](#) /

› Timegyro Small Digital Clock Battery Operated, LED Travel Alarm Clock with Snooze, Model CRS6B Instruction Manual

Timegyro CRS6B

Timegyro Small Digital Clock Battery Operated (Model CRS6B)

Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the Timegyro Small Digital Clock, Model CRS6B. This compact, battery-operated LED alarm clock is designed for convenience and portability, featuring adjustable brightness, 12/24-hour display, and a snooze function.

PRODUCT OVERVIEW

Familiarize yourself with the clock's components and controls.

Battery operated only



Image: A detailed diagram of the Timegyro Small Digital Clock, highlighting its dimensions (approximately 4.7 inches length, 1.8 inches height, 1.4 inches width) and the location of control buttons on the top, including AL SET, TIME SET, HOUR, MIN, AL ON/OFF, and SNOOZE. The back of the clock shows the battery compartment for two AA 1.5V batteries and a low battery indicator.

The clock operates solely on 2 AA batteries (not included), offering cordless convenience.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Open the cover.
3. Insert two AA 1.5V batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Initial Power On

Once batteries are installed, the LED display will illuminate.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Press the **HOUR** button to adjust the hour. Pay attention to the PM indicator for 12-hour format.
3. Press the **MIN** button to adjust the minutes.
4. Press the **TIME SET** button again to confirm and exit time setting mode.

Switching 12/24-Hour Format

While in normal time display mode, press the **12/24Hr** button to toggle between 12-hour (with PM indicator) and 24-hour (military time) formats.

Setting the Alarm

1. Press and hold the **AL SET** button until the alarm hour digits begin to flash.
2. Press the **HOUR** button to adjust the alarm hour.
3. Press the **MIN** button to adjust the alarm minutes.
4. Press the **AL SET** button again to confirm and exit alarm setting mode.

Turning Alarm On/Off

Press the **AL ON/OFF** button to activate or deactivate the alarm. An alarm icon will appear on the display when the alarm is active.

Snooze Function

When the alarm sounds, press the large **SNOOZE** button on top of the clock. The alarm will pause for 7 minutes and then sound again.



SNOOZE FUNCTION

With alarm going,
press top button to snooze for 7 minutes

Image: A Timegyro digital clock displaying "13:00" with an alarm icon and snooze icon, next to a person sleeping in bed.
Text indicates "SNOOZE FUNCTION: With alarm going, press top button to snooze for 7 minutes."

Adjusting Brightness

The clock features three brightness levels: Low, Medium, and High.

1. Press and hold the **TIME SET** button for 2 seconds to cycle through the brightness levels.
2. The clock also has an automatic night mode (8:00 PM to 6:00 AM) which dims the display to the lowest brightness to conserve battery power.



Special design for weaker light and night



Low Light



Medium Light



High Light

Image: A Timegyro digital clock showing different brightness levels (Low Light, Medium Light, High Light) and illustrating automatic dimming during night hours (18:00 PM - 7:00 AM) compared to day hours (7:00 AM - 18:00 PM).

MAINTENANCE

Battery Replacement

When the display dims significantly or the clock stops functioning, it is time to replace the batteries. Follow the battery installation steps. Always use two new AA 1.5V batteries.

Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the clock in water.

TROUBLESHOOTING

- **Clock not turning on or display is blank:** Ensure batteries are inserted correctly with proper polarity. Replace with fresh AA batteries.
- **Display is too dim:** Adjust the brightness level using the TIME SET button. Check battery level; low batteries can cause dimming.
- **Alarm not sounding:** Ensure the alarm is activated (alarm icon visible). Verify the alarm time is set correctly.
- **Incorrect time display:** Reset the time following the "Setting the Time" instructions.

Your browser does not support the video tag.

Video: A user review of the Timegyro Small Digital Clock, demonstrating its features and ease of use. This video highlights the clock's compact size and clear display, useful for understanding its practical application.

SPECIFICATIONS

Feature	Detail
Brand	Timegyro
Model Number	CRS6B
Display Type	Digital LED
Power Source	2 x AA Batteries (not included)
Product Dimensions (approx.)	4.7"L x 1.8"H x 1.4"W
Special Features	Alarm, Snooze, Adjustable Brightness, 12/24Hr Format
Frame Material	Plastic
Item Weight	3.2 ounces (0.09 Kilograms)
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Timegyro customer service through the retailer's platform or visit the official Timegyro website. Keep your purchase receipt for warranty claims.