

Manuals.plus /

› Olakids /

› Olakids TS10074 4-in-1 Foldable Indoor Jungle Gym Instruction Manual

Olakids TS10074

Olakids TS10074 4-in-1 Foldable Indoor Jungle Gym Instruction Manual

Model: TS10074

Brand: Olakids

INTRODUCTION

Thank you for choosing the Olakids TS10074 4-in-1 Foldable Indoor Jungle Gym. This versatile play structure is designed to provide a safe and engaging environment for toddlers, promoting physical activity and developmental skills. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience.

SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise children during play on the jungle gym.
- **Age Range:** Suitable for children aged 36 to 72 months (1 to 6 years).
- **Weight Capacity:** Maximum weight capacity of 275 lbs for the climbing structure. The swing has a maximum load capacity of 66 lbs.
- **Stable Placement:** Ensure the jungle gym is placed on a flat, stable surface. Consider using a play mat underneath to prevent slipping and protect floors.
- **Material Safety:** Constructed from solid pine and beech wood with non-peel, kid-friendly paint. All surfaces are smooth to prevent injuries.
- **Regular Inspection:** Periodically check all components for tightness, damage, or wear. Tighten screws and replace damaged parts immediately.
- **Indoor Use Only:** This product is designed for indoor use. Do not expose to outdoor elements.

PRODUCT FEATURES

- **4-in-1 Design:** Includes climbing ladders, a ramp for sliding and climbing, and a height-adjustable swing.
- **Stable Triangle Structure:** Engineered with a robust triangle design for enhanced stability.
- **Safe & Durable Materials:** Made from solid pine and beech wood with smooth, rounded edges and hidden screws for child safety.
- **Foldable for Storage:** Features a locking mechanism for easy folding into a compact size, facilitating storage and movement.
- **Versatile Play:** The ramp can be used as a slide or flipped to become a climbing wall with holds.

SETUP INSTRUCTIONS

Assembly of the Olakids TS10074 Indoor Jungle Gym requires careful attention to detail. Please follow the included instructions and refer to the assembly video for visual guidance.

Assembly Video Guide

Your browser does not support the video tag.

Video Description: This official assembly video from Olakids demonstrates the step-by-step process of setting up the 4-in-1 Foldable Climbing Set. It provides visual instructions for connecting components and ensuring proper installation.

General Assembly Steps

1. Unpack all components and verify against the parts list.
2. Assemble the main triangular frames using the provided hardware.
3. Attach the climbing ladders to the frames.
4. Install the swing bar and attach the swing seat. Ensure the swing is securely fastened and height-adjusted as desired.
5. Attach the reversible ramp/slide to the desired height and orientation.
6. Tighten all screws and bolts securely.

Note: Some users have reported that a power drill can expedite the assembly process, though hand tools are typically sufficient.



Image Description: A fully assembled Olakids Indoor Jungle Gym in a natural wood finish. One child is on the swing, and another is climbing the ramp, demonstrating the 4-in-1 functionality.

OPERATING INSTRUCTIONS

Using the Swing

- Ensure the swing is securely attached to the top bar using the provided hooks.
- Adjust the swing height by modifying the rope length through the designated holes.
- Always ensure the child is seated properly and securely before swinging.

4-in-1 Multifunctional Design



Swing



Ladder



Climber



Slide



Image Description: A close-up view of the swing component, highlighting its height adjustment feature and the maximum weight capacity of 55 lbs.

Using the Slide/Climbing Ramp

- The ramp is reversible: one side is a smooth slide, the other has climbing holds.
- To switch modes, detach the ramp from the frame, flip it, and reattach it to the desired height.
- Ensure the ramp is firmly secured in place before use.

Height Adjustable Swing

Adjust Height from 27" to 34"



Swing Bearing
to 55lbs



Image Description: An infographic illustrating the four play modes: swing, ladder, climber, and slide, showcasing the versatility of the jungle gym.

Folding for Storage

- Loosen the adjustable knobs on the side of the triangular frames.
- Carefully fold the structure inward until it is compact.
- Tighten the knobs to secure the folded position.

Safe & Sturdy Design



Image Description: The jungle gym shown in its folded state, demonstrating its compact design for easy storage, with a close-up of the adjustable knobs.

MAINTENANCE

- **Cleaning:** Wipe down all wooden surfaces with a damp cloth and mild soap. Avoid harsh chemicals that could damage the wood or paint.
- **Inspection:** Regularly check all screws, bolts, and connections to ensure they are tight. Inspect wooden parts for cracks, splinters, or damage.
- **Storage:** When not in use, especially for extended periods, store the folded jungle gym in a dry, cool place away from direct sunlight or extreme temperatures to prevent wood warping or damage.

Compact Folding Design



Image Description: Detailed images highlighting the rounded edges, smooth surfaces, hidden screws, and easy-grip sticks, emphasizing the safe and sturdy design for toddlers.


TROUBLESHOOTING

- **Wobbly Structure:** If the jungle gym feels unstable, check that all screws and bolts are fully tightened. Ensure it is placed on a completely flat surface.
- **Difficulty Folding:** Ensure the adjustable knobs are sufficiently loosened before attempting to fold the structure. Do not force the folding mechanism.
- **Swing Not Level:** Adjust the ropes on both sides of the swing seat to ensure it hangs evenly.
- **Ramp Not Secure:** Verify that the hooks on the ramp are fully engaged with the rungs of the climbing ladder at the desired height.

SPECIFICATIONS

Attribute	Value
Brand	Olakids
Model Number	TS10074
Color	Natural
Material	Beech, Pine
Product Dimensions (D x W x H)	48"D x 45"W x 44"H
Item Weight	18 Pounds
Maximum Weight Recommendation	275 Pounds
Swing Maximum Load Capacity	66 lbs
Manufacturer Minimum Age	36 Months
Manufacturer Maximum Age	72 Months
Required Assembly	Yes

Product Size

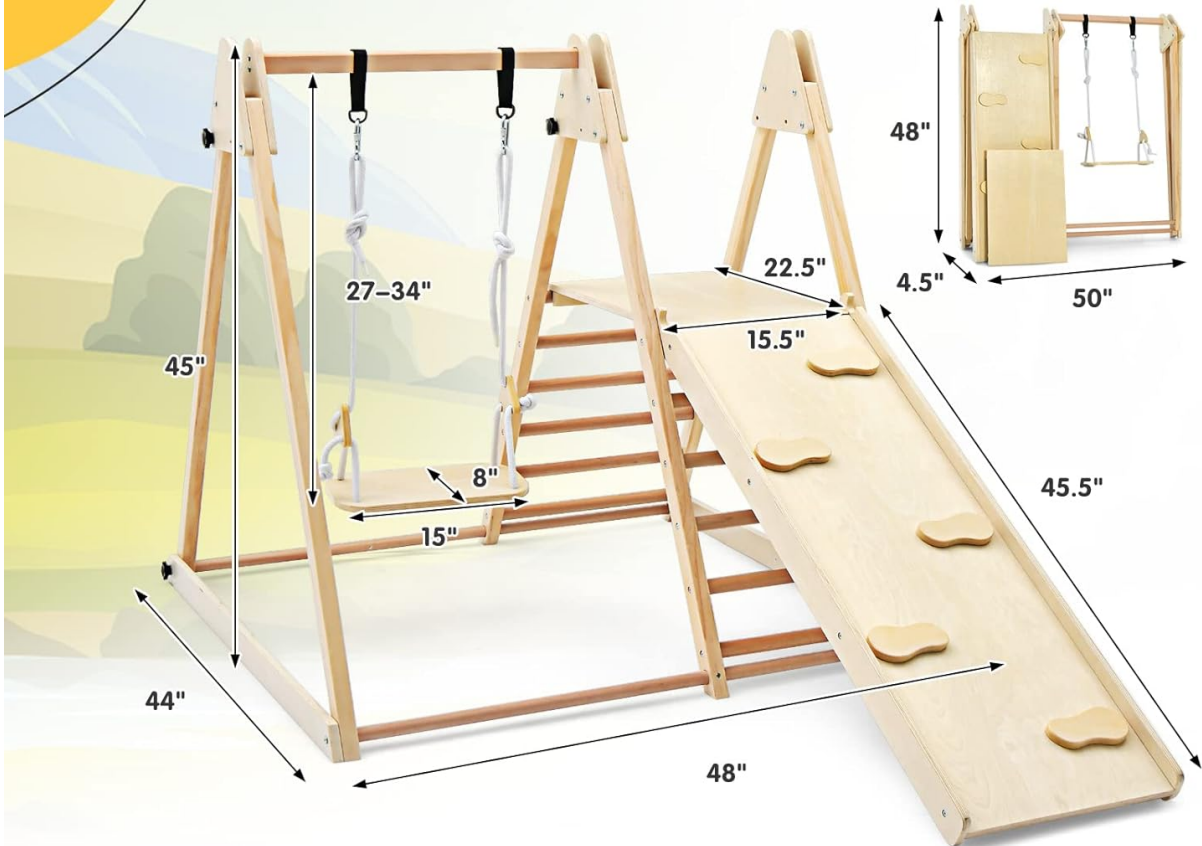

Suitable Age 1+ Years



Maximum Weight 275 lbs

Image Description: A detailed diagram illustrating the product dimensions of the assembled jungle gym, including height, width, and depth, along with the suitable age range and maximum weight capacity.

WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Olakids customer service. Keep your purchase receipt as proof of purchase.

- **Customer Service:** Refer to the contact information provided with your product packaging or visit the official Olakids website.
- **Online Resources:** Additional support and FAQs may be available on the Olakids brand store.