

## VGR V-096

# VGR V-096 Professional Hair Trimmer Instruction Manual

Model: V-096

## 1. INTRODUCTION

---

Thank you for choosing the VGR V-096 Professional Hair Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read these instructions carefully before first use and keep them for future reference.

## 2. SAFETY INSTRUCTIONS

---

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the trimmer in water. The blade head is washable, but the main body is not waterproof.
- Keep the appliance away from water and other liquids. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Always check the trimmer for damage before use. Do not use if the blade or housing is damaged.
- Use only the charging cable provided with the trimmer.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- Ensure the trimmer is switched off before cleaning or performing maintenance.

## 3. PACKAGE CONTENTS

---

Please check the package for the following items:

- VGR V-096 Professional Hair Trimmer
- 3 Cutting Guide Combs (1mm, 2mm, 3mm)

- Type-C USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual

## 4. PRODUCT FEATURES



**VGR V-096**  
Professional Hair Trimmer

**3 CUTTING GUIDE COMBS**  
1mm, 2mm, 3mm

**400** MINUTES OPERATING TIME

**55 db** LOW NOISE

**TYPE-C** USB Charging

Image: VGR V-096 Professional Hair Trimmer highlighting 3 cutting guide combs, 400 minutes operating time, 55dB low noise, and Type-C USB charging.



**HIGH-PERFORMANCE**  
Powerful Motor for Smooth Performance

**HIGH-SPEED ROTARY MOTOR**  
Ensures a Fast, Powerful Shave with Consistent Cutting Performance

**TURBO SPEED**

**6000 RPM / 6500 RPM**

Image: Close-up of the VGR V-096 Trimmer showing its high-performance rotary motor and turbo speed function (6000 RPM / 6500 RPM).

- **Luxurious Metal Body:** Crafted from premium metal with an intricate pirate pattern design for a stylish appearance.
- **Precision T-Blade:** Stainless steel T-shaped blade designed for easy outlining, precise trimming, and defining facial lines. Features a skin-friendly R-angle to prevent nicks and cuts.
- **High-Performance Motor:** Equipped with a powerful rotary motor for smooth, fast, and consistent cutting performance.

- **Turbo Function:** Provides an enhanced speed mode (6500 RPM) for tackling thicker hair or achieving faster results.
- **Long Battery Life:** Integrated 2000 mAh Lithium battery offers up to 400 minutes of continuous operating time on a single charge.
- **Type-C USB Charging:** Convenient charging via Type-C USB, compatible with computers, laptops, USB chargers, and power banks.
- **Washable Blade Head:** The blade head can be rinsed under running water for easy and hygienic cleaning.
- **Low Noise Operation:** Operates at approximately 55 dB for a quieter grooming experience.
- **Self-Sharpening Edge:** Blades are designed to maintain sharpness over time for consistent professional results.
- **Heat Protection:** Features heat control technology to prevent overheating during extended use.

## 5. SETUP

### 5.1 Initial Charging



Image: The VGR V-096 Trimmer connected to a Type-C USB charging cable, illustrating its long battery life and heat protection features.

1. Before first use, fully charge the trimmer for approximately 3-4 hours.
2. Connect the Type-C USB charging cable to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, laptop, USB wall adapter, power bank).
4. The indicator light will show charging status (refer to the trimmer's display for specific indications).
5. Once fully charged, disconnect the charging cable.

### 5.2 Attaching Guide Combs

## PRECISION LENGTH CHOICE

Total Grooming Control from Cut to Close

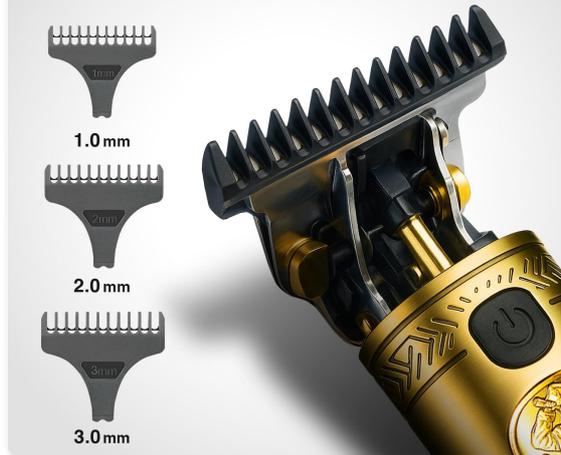


Image: The VGR V-096 Trimmer demonstrating the precision length choices with 1mm, 2mm, and 3mm cutting guide combs.

1. Ensure the trimmer is switched off.
2. Select the desired cutting guide comb (1mm, 2mm, or 3mm).
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

## 6. OPERATING INSTRUCTIONS

### 6.1 Basic Operation

1. Press the power button to turn the trimmer on.
2. To activate Turbo mode, press the power button again while the trimmer is on. The indicator light may change or a different sound may be heard.
3. To turn off, press the power button once more.

### 6.2 Trimming Techniques



Image: A person using the VGR V-096 Trimmer for a precision cut, highlighting its nick-proof design and

versatility for hair, beard, body, and earlobe trimming.



Image: Examples of salon-style grooming achievable with the VGR V-096 Trimmer, including hair design, hair fading, and beard/mustache styling.

- **For Hair Trimming:** Start with a longer guide comb and gradually switch to shorter ones if a closer cut is desired. Move the trimmer against the direction of hair growth for an even cut.
- **For Beard/Mustache Trimming:** Use the appropriate guide comb to maintain desired length. For outlining and detailing, remove the comb and use the bare blade carefully.
- **For Body Grooming:** Exercise caution and use a guide comb to prevent skin irritation.
- Always ensure the skin is clean and dry before trimming.
- Stretch the skin taut in sensitive areas for a smoother pass.

## 7. MAINTENANCE AND CLEANING

### 7.1 Cleaning the Blade Head



Image: A close-up of the VGR V-096 Trimmer's precision T-blade, illustrating its water-resistant feature for convenient cleaning, durability, and self-sharpening edge.

1. Ensure the trimmer is switched off and unplugged from any power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to brush away loose hairs from the blade and housing.
4. For a more thorough clean, carefully detach the blade head (if detachable as per design) and rinse it under running water. Do NOT rinse the main body of the trimmer.
5. Allow the blade head to air dry completely before reattaching or storing.

## 7.2 Oiling the Blades

1. After cleaning and drying the blades, apply a small drop of the provided lubricating oil to the teeth of the blade.
2. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth. Regular oiling ensures optimal cutting performance and extends blade life.

## 7.3 Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Poor cutting performance.	Blades are dirty or not oiled.	Clean and oil the blades as per maintenance instructions.
Trimmer pulls hair.	Blades are dull or hair buildup.	Clean and oil blades. If problem persists, blades may need replacement (contact support).
Trimmer gets hot.	Extended use or blocked ventilation.	Allow the trimmer to cool down. Ensure no hair or debris is blocking the motor area.

## 9. SPECIFICATIONS

Feature	Detail
Model	V-096
Brand	VGR
Power Source	Battery Operated (Corded/Cordless)
Battery Type	2000 mAh Lithium Battery
Operating Time	Up to 400 minutes

Feature	Detail
Charging Interface	Type-C USB
Blade Material	Stainless Steel (T-blade)
Body Material	Metal
Cutting Guide Combs	1mm, 2mm, 3mm
Dimensions	15 x 4 x 3 cm
Item Weight	225 grams
Special Features	Turbo Function, Washable Head, Low Noise (55dB), Heat Protection
Recommended Uses	Hair Styling, Hair Trimming, Hair Cutting

## 10. WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact the retailer or the VGR customer service department through their official channels. Do not attempt to open or repair the device yourself, as this may void the warranty.