

NGS ELEC-HEADP-0397

NGS Artica Greed Wireless On-Ear Headphones User Manual

Model: ELEC-HEADP-0397

INTRODUCTION

Thank you for choosing the NGS Artica Greed Wireless On-Ear Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before use.



Image: Front view of the NGS Artica Greed Wireless On-Ear Headphones in white, showcasing the earcups and adjustable headband.

PACKAGE CONTENTS

Verify that all items are present in your package:

- NGS Artica Greed Wireless On-Ear Headphones
- USB Type-C Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your NGS Artica Greed headphones.



Image: Close-up view of the right earcup of the NGS Artica Greed headphones, indicating the location of the control buttons for volume, track control, and power/pairing.

- **Power/Multi-function Button:** Power On/Off, Play/Pause, Answer/End Call, Pairing.
- **Volume Up / Next Track Button:** Increase volume (short press), Next track (long press).
- **Volume Down / Previous Track Button:** Decrease volume (short press), Previous track (long press).
- **USB Type-C Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection.
- **Microphone:** Built-in for hands-free calls.
- **LED Indicator:** Displays power, charging, and Bluetooth status.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the supplied USB Type-C cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- The LED indicator will illuminate during charging.
- Once fully charged, the LED indicator will change color or turn off (refer to LED indicator section for specifics).
- A full charge provides up to 40 hours of playback at maximum volume.



Image: Side view of the NGS Artica Greed headphones, highlighting the USB Type-C charging port and 3.5mm audio jack.

2. Powering On/Off

- **To Power On:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power/Multi-function button for approximately 3 seconds until the LED indicator turns off.

3. Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure the headphones are powered off.
2. Press and hold the Power/Multi-function button for approximately 5-7 seconds until the LED indicator flashes rapidly in alternating colors (e.g., blue and red), indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "NGS Artica Greed" from the list of found devices.
5. Once paired, the LED indicator will flash slowly or turn solid blue (refer to LED indicator section). You will hear an audible confirmation.



Image: The NGS Artica Greed headphones positioned next to a smartphone screen displaying "Easy Pairing Bluetooth" and "40h Portable Playtime," illustrating the wireless connectivity and battery life.

4. Wired Connection

You can also use the headphones with the included 3.5mm audio cable. This is useful when the battery is depleted or for devices without Bluetooth connectivity.

- Connect one end of the 3.5mm audio cable to the audio jack on the headphones.
- Connect the other end to the 3.5mm audio output of your device.
- In wired mode, the headphone's battery is not used, and some controls on the headphones may not

function.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Short press the Power/Multi-function button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Phone Calls

The built-in microphone allows for hands-free calling when connected via Bluetooth.

- **Answer Call:** Short press the Power/Multi-function button when a call comes in.
- **End Call:** Short press the Power/Multi-function button during a call.
- **Reject Call:** Long press the Power/Multi-function button when a call comes in.
- **Redial Last Number:** Double-press the Power/Multi-function button.

Folding and Storage

The headphones feature a foldable design for easy storage and transport.



Image: The NGS Artica Greed headphones shown in a folded position, demonstrating their compact design for portability.

- Gently fold the earcups inwards towards the headband.
- Store in a protective case or bag to prevent damage.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly, even if not in use for extended periods.
- **Water Resistance:** These headphones are not water-resistant. Avoid exposure to liquids.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully using the USB Type-C cable.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (rapid flashing LED). Turn device Bluetooth off/on. Move headphones closer to device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; incorrect audio source; loose wired connection.	Increase volume on both headphones and connected device. Ensure correct audio output is selected on your device. If wired, check cable connection.
Sound quality is poor.	Interference; device too far; low quality audio source.	Move closer to the connected device. Avoid strong Wi-Fi or other wireless interference. Try a different audio source.






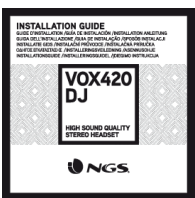
SPECIFICATIONS

Feature	Detail
Model	ELEC-HEADP-0397
Connectivity	Bluetooth 5.1, 3.5mm Audio Jack
Wireless Range	Up to 10 meters
Battery Type	Lithium Polymer, 300mAh
Battery Life	Up to 40 hours (at maximum volume)
Charging Port	USB Type-C
Impedance	32 Ohms
Frequency Response	20Hz ~ 20kHz
Sensitivity	105+/-3dB
Microphone	Built-in
Weight	0.2 Kilograms
Material	Plastic
Special Features	Foldable, Lightweight, Adjustable Headband, Padded Ear Cushions

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official NGS website or contact your local retailer. Keep your proof of purchase for warranty claims.
Manufacturer: Lurbe Grup, S.A.

Related Documents - ELEC-HEADP-0397

	<p>NGS Artica Bloom True Wireless Stereo Earphones User Manual</p> <p>User manual for the NGS Artica Bloom True Wireless Stereo Earphones, covering setup, charging, pairing, controls, specifications, and warranty information.</p>
	<p>NGS Artica Trophy Active Noise Cancelling Earphones User Manual</p> <p>Discover the NGS Artica Trophy Active Noise Cancelling Earphones with this comprehensive user manual. Learn about features, setup, specifications, and warranty.</p>
	<p>NGS Roller Nitro 3: Outdoor Wireless Portable Speaker User Manual</p> <p>Discover the features and operation of the NGS Roller Nitro 3, an outdoor wireless portable speaker. This manual covers Bluetooth, TWS, Radio, USB/TF, and AUX modes, along with charging instructions and technical specifications.</p>
	<p>NGS INFINITY RB Wireless Rechargeable Multimode Silent Mouse - User Guide</p> <p>Comprehensive guide for the NGS INFINITY RB wireless mouse, detailing its features, control buttons, connectivity options (2.4GHz and Bluetooth 5.1), technical specifications, and warranty information.</p>
	<p>NGS Sky Charm Tower Speaker User Manual</p> <p>User manual for the NGS Sky Charm Tower Speaker, providing detailed instructions on installation, operation modes (Bluetooth, Aux, USB, FM, Stereo, Optical), remote control functions, and technical specifications for this 50W Bluetooth speaker.</p>
	<p>NGS VOX420 DJ High Sound Quality Stereo Headset Installation Guide</p> <p>This document provides a comprehensive installation guide for the NGS VOX420 DJ stereo headset. It details how to connect the headset to PCs and popular gaming consoles like PlayStation 4 (PS4) and Xbox, ensuring optimal setup for high sound quality.</p>