

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Linksys](#) /

> [Linksys E9450 AX5400 WiFi 6 Router User Manual](#)

Linksys E9450-RM2

Linksys E9450 AX5400 WiFi 6 Router User Manual

Model: E9450-RM2

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Linksys E9450 AX5400 WiFi 6 Router. The Linksys E9450 is a high-performance Dual-Band router designed to provide extensive Wi-Fi coverage and handle numerous devices simultaneously, supporting speeds up to 5.4 gigabits per second. It is ideal for streaming 4K/8K video, gaming, and general internet use.

Key features include:

- Covers up to 2800 sq. ft. and supports over 30 devices.
- Utilizes WiFi 6 technology for increased capacity and efficiency.
- Dual-Band technology doubles bandwidth, reducing interference and maximizing throughput.
- Features Parental Controls and Guest Access for enhanced network security.
- Equipped with RJ-45 Ethernet ports and a USB port for versatile connectivity.
- Easy setup via browser-based installation using a smartphone, tablet, or computer.
- WPS button for simple device addition to the network.

PACKAGE CONTENTS

Before proceeding with the setup, ensure all items are present in the package:

- Linksys E9450 AX5400 WiFi 6 Router
- Power supply
- Ethernet Cable (typically included, though not explicitly listed in "whats_in_the_box", it's standard for routers)

PRODUCT OVERVIEW



Figure 1: Angled front view of the Linksys E9450 Router, highlighting the sleek black design and vertical LED indicator strip.

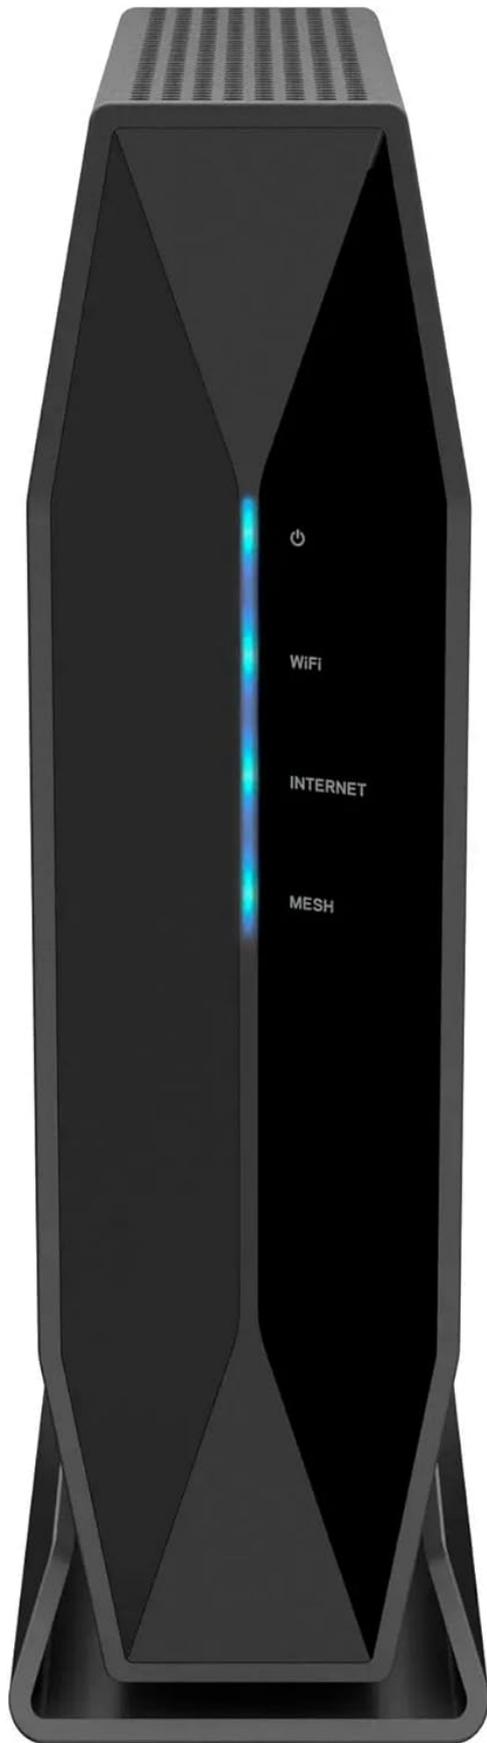


Figure 2: Front view of the Linksys E9450 Router, showing the power, WiFi, Internet, and Mesh status indicators.



Figure 3: Rear panel of the Linksys E9450 Router, detailing the connectivity options: WPS button, USB port, four Gigabit Ethernet LAN ports, one Gigabit Internet (WAN) port, 12V power input, power switch, and reset button.



Figure 4: Bottom view of the Linksys E9450 Router, displaying the product label with model information, serial number, and regulatory compliance details.

SETUP GUIDE

1. Placement

Place the router in a central location within your home or office, away from large metal objects, concrete walls, and devices that emit radio frequency interference (e.g., microwaves, cordless phones). Optimal placement ensures maximum Wi-Fi coverage and signal strength.

2. Hardware Connection

1. **Connect to Modem:** Connect one end of the provided Ethernet cable to the yellow "Internet" (WAN) port on the back of the Linksys E9450 router. Connect the other end to your internet modem's Ethernet port.
2. **Power On:** Connect the power supply to the 12V power input port on the router and plug the other end into a power outlet. Flip the power switch to the ON position.
3. **Wait for Indicators:** Allow a few minutes for the router to boot up. The LED indicators on the front panel should stabilize. The "Internet" LED should turn solid blue, indicating a successful connection to your modem and the internet.

3. Initial Configuration

1. **Connect to Router:**
 - **Wireless:** On your computer or mobile device, connect to the default Wi-Fi network name (SSID) broadcast by the router. This information is typically found on a label on the bottom of the router (refer to Figure 4).
 - **Wired:** Alternatively, connect an Ethernet cable from one of the router's numbered LAN ports (1-4) to your computer's Ethernet port.
2. **Access Setup Page:** Open a web browser (e.g., Chrome, Firefox, Edge) and type <http://linksysmartwifi.com> or 192.168.1.1 into the address bar and press Enter.
3. **Follow On-Screen Instructions:** The Linksys setup wizard will guide you through the initial configuration process, including setting up your new Wi-Fi network name (SSID), password, and administrator password for the router.

OPERATING INSTRUCTIONS

Connecting Devices

- **Wi-Fi Connection:** On your wireless devices (smartphones, tablets, laptops), search for available Wi-Fi networks and select the network name (SSID) you configured during setup. Enter your Wi-Fi password when prompted.
- **WPS (Wi-Fi Protected Setup):** For WPS-compatible devices, press the WPS button on the back of the router (refer to Figure 3) and then activate WPS on your device within two minutes. This will automatically connect the device without needing to enter the password.
- **Wired Connection:** For devices requiring a wired connection (e.g., desktop computers, gaming consoles), connect an Ethernet cable from the device to any of the numbered LAN ports (1-4) on the router.

Managing Your Network

Access the router's web interface (<http://linksysmartwifi.com> or 192.168.1.1) using your administrator password to manage advanced settings:

- **Parental Controls:** Set internet access schedules, block specific websites, or restrict internet access for certain devices.
- **Guest Access:** Create a separate Wi-Fi network for guests, keeping your main network secure.
- **Firmware Updates:** Regularly check for and install firmware updates to ensure optimal performance and security.
- **Network Settings:** Configure advanced network settings such as port forwarding, DHCP server settings, and VPN passthrough.

MAINTENANCE

- **Regular Reboots:** Periodically reboot your router (unplug from power for 10 seconds, then plug back in) to clear its memory and refresh network connections. This can resolve minor performance issues.
- **Firmware Updates:** Keep the router's firmware updated to the latest version. Firmware updates often include performance improvements, security patches, and new features. Check the Linksys support website for your model.
- **Physical Cleaning:** Keep the router clean and free of dust. Use a soft, dry cloth to wipe the exterior. Ensure ventilation openings are not blocked to prevent overheating.
- **Secure Passwords:** Regularly change your Wi-Fi password and router administrator password to strong, unique combinations.

TROUBLESHOOTING

Problem	Possible Solution
No Internet Connection	<ul style="list-style-type: none">• Check if the "Internet" LED on the router is solid blue. If not, check the connection to your modem.• Reboot both your modem and router by unplugging them for 30 seconds and then plugging them back in.• Verify your internet service provider (ISP) is not experiencing an outage.
Slow Wi-Fi Speed	<ul style="list-style-type: none">• Ensure the router is centrally located and not obstructed.• Reduce the number of active devices or bandwidth-intensive activities.• Check for Wi-Fi interference from other devices or neighboring networks.• Update your device's wireless drivers.
Cannot Access Router Setup Page	<ul style="list-style-type: none">• Ensure your device is connected to the router's network (wired or wireless).• Try using a different web browser.• Verify you are typing the correct address: http://linksyssmartwifi.com or 192.168.1.1.• Temporarily disable any VPN or proxy settings on your computer.
Forgot Wi-Fi Password or Router Administrator Password	<ul style="list-style-type: none">• Locate the default Wi-Fi password on the router's label (if not changed).• Perform a factory reset: With the router powered on, press and hold the "Reset" button on the back panel (refer to Figure 3) for 10-15 seconds until the power LED flashes. This will revert all settings to factory defaults, including passwords. You will need to reconfigure the router.

SPECIFICATIONS

Feature	Detail
Brand	Linksys
Model Name	Dual-Band AX5400 WiFi 6 Router

Feature	Detail
Item Model Number	E9450-RM2
Wireless Communication Standard	802.11ax (WiFi 6)
Frequency Band Class	Dual-Band (2.4 GHz and 5 GHz)
Maximum Speed	Up to 5.4 Gbps
Coverage Area	Up to 2800 sq. ft.
Device Capacity	Supports 30+ Devices
Connectivity Technology	Wi-Fi, Ethernet
Ports	RJ-45 (WAN/LAN), USB
Special Feature	WPS (Wi-Fi Protected Setup)
Item Weight	2.97 pounds
Package Dimensions	11.5 x 9.21 x 3.7 inches
Included Components	Power supply

WARRANTY AND SUPPORT

This Linksys E9450 router is a Certified Refurbished product, which typically includes a manufacturer's warranty. Please refer to the specific warranty information provided at the time of purchase or contact the seller for details regarding the 90-day warranty mentioned in the product description.

For technical support, additional resources, or the latest firmware updates, please visit the official Linksys support website. You can also find FAQs and community forums that may assist with common issues.

Linksys Support Website: www.linksys.com/support