

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tognana](#) /

› [Tognana Fusion T Grill CM37X23 with Wood Base Instruction Manual](#)

## Tognana CM37X23

# Tognana Fusion T Grill CM37X23 with Wood Base Instruction Manual

Model: CM37X23



## INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Tognana Fusion T Grill CM37X23 with Wood Base. Please read all instructions carefully before first use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always place the grill on a stable, heat-resistant surface.
- Do not leave the grill unattended while in use.
- Keep children and pets away from the hot grill.
- Use oven mitts or heat-resistant gloves when handling hot components.
- Ensure adequate ventilation when using the grill indoors.
- Allow the grill to cool completely before cleaning or storing.

## PRODUCT COMPONENTS

The Tognana Fusion T Grill CM37X23 consists of the following main components:

- Cast Iron Grill Plate (CM37X23)
- Solid Wood Base
- Fuel Holder (for solid fuel, e.g., gel fuel or small charcoal briquettes)

Image: The Tognana Fusion T Grill CM37X23, showing the cast iron grill plate resting on the solid wood base, with the fuel holder visible underneath.

## SETUP INSTRUCTIONS

- Unpack Components:** Carefully remove all components from the packaging. Inspect for any damage.
- Assemble Base:** Place the solid wood base on a flat, stable, and heat-resistant surface.
- Position Fuel Holder:** Place the fuel holder securely within the designated area of the wood base.
- Place Grill Plate:** Carefully set the cast iron grill plate on top of the wood base, ensuring it is stable and centered over the fuel holder.
- First Use Preparation:** Before first use, wash the grill plate with warm soapy water, rinse thoroughly, and dry completely. Season the cast iron grill plate according to standard cast iron seasoning procedures (apply a thin layer of cooking oil and heat).

## OPERATING INSTRUCTIONS

- Add Fuel:** Place appropriate solid fuel (e.g., gel fuel canister, small charcoal briquettes) into the fuel holder. Do not overfill.
- Light Fuel:** Carefully light the fuel using a long lighter or match.
- Preheat Grill:** Allow the grill plate to preheat for 5-10 minutes, or until it reaches the desired cooking temperature.
- Grill Food:** Place food directly onto the hot grill plate. Cook according to your recipe.
- Adjust Heat:** If using adjustable gel fuel, you may regulate the flame. For charcoal, adjust by adding or removing briquettes (with caution).
- Extinguish Fuel:** Once cooking is complete, carefully extinguish the fuel. For gel fuel, use the snuffer if provided. For charcoal, allow it to burn out completely or carefully remove and douse with water.
- Cool Down:** Allow the grill and base to cool completely before handling or cleaning.

Image: The Tognana Fusion T Grill CM37X23 shown in operation, with food cooking on the grill plate, set on a dining table.

## CARE AND MAINTENANCE

- Grill Plate Cleaning:** After each use, once cooled, scrape off any food residue. Wash with warm water and a mild detergent. For stubborn residue, use a non-abrasive scrubber. Dry immediately and thoroughly to prevent rust. Re-season periodically.
- Wood Base Cleaning:** Wipe the wood base with a damp cloth. Do not soak in water. Dry immediately. Periodically apply food-safe mineral oil to maintain the wood's condition.
- Storage:** Store all components in a dry place. Ensure the cast iron grill plate is completely dry before storage to prevent rust.
- Do Not Use:** Avoid using abrasive cleaners, steel wool, or harsh chemicals on any part of the grill.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill not heating sufficiently	Insufficient fuel; fuel not properly lit; grill plate not preheated long enough.	Ensure adequate fuel is used and properly lit. Allow more time for preheating.

Problem	Possible Cause	Solution
Food sticking to grill plate	Grill plate not properly seasoned; not enough oil on food/grill; grill not hot enough.	Ensure grill plate is well-seasoned. Apply a thin layer of cooking oil to the grill or food. Preheat thoroughly.
Rust appearing on grill plate	Grill plate not dried completely after washing; improper storage.	Dry the grill plate immediately and thoroughly after washing. Re-season the rusted area. Store in a dry environment.

## SPECIFICATIONS

- Model:** CM37X23
- Brand:** Tognana
- Material:** Cast Iron Grill Plate, Solid Wood Base
- Dimensions:** (Approximate) 37cm x 23cm (Grill Plate)
- Fuel Type:** Designed for solid fuels (e.g., gel fuel, small charcoal briquettes)

## WARRANTY INFORMATION

Tognana products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Tognana website. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For technical assistance, spare parts, or any questions regarding your Tognana Fusion T Grill CM37X23, please contact Tognana customer support:

- Website:** [www.tognana.com](http://www.tognana.com) (Please check the official website for contact details specific to your region.)
- Email:** Refer to the website for regional contact emails.
- Phone:** Refer to the website for regional contact phone numbers.