

Wireless Express WE-Retro

Compact Mini Bluetooth Speaker with Retro Design - User Manual

Model: WE-Retro | Brand: Wireless Express

1. INTRODUCTION

Welcome to the user manual for your new Wireless Express Compact Mini Bluetooth Retro Speaker. This speaker combines a vintage aesthetic with modern audio technology, offering a compact and portable solution for high-quality sound. Designed for ease of use, it delivers powerful audio with clear and balanced tones, including deep bass and crisp highs, all within a small package.

Product Features:

- Vintage design with modern technology for a nostalgic feel and Bluetooth connectivity.
- Compact and portable with a convenient carrying handle.
- Easy Bluetooth connectivity for wireless pairing with phones, tablets, and other compatible devices.
- Big sound in a small package, delivering clear, balanced audio with deep bass and crisp highs.
- Rechargeable battery providing up to 7 hours of continuous playtime.
- Versatile for various uses including parties, picnics, or home relaxation.

Package Contents:

- 1 x Compact Mini Bluetooth Speaker (Red)
- 1 x Charging Cable
- 1 x Instruction Manual
- 1 x Color Box



Image: Front view of the Wireless Express Compact Mini Bluetooth Speaker in red, featuring its retro grille and white carrying handle.

2. SETUP

2.1 Initial Charging

Before first use, fully charge your speaker.

1. Locate the charging port on your speaker.
2. Connect the provided charging cable to the speaker's charging port.
3. Connect the other end of the charging cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate. Once fully charged (approximately 2-3 hours), the light may change color or turn off.
5. A full charge provides up to 7 hours of continuous playtime.

2.2 Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device to enjoy wireless audio.

1. Ensure the speaker is charged and powered off.
2. Press and hold the Power button (usually marked with a power symbol) on the speaker until you hear an audible prompt or see a blinking LED light, indicating it is in pairing mode.
3. On your device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "WE-Retro" or a similar name from the list of found devices.
6. Once connected, you will hear a confirmation sound from the speaker, and the LED light will typically become solid.
7. Your speaker is now ready to play audio wirelessly.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds.
- **Power Off:** Press and hold the Power button again for approximately 3 seconds.

3.2 Basic Controls (Button Controller)

The speaker features intuitive button controls located on the top panel.



Image: Top view of the speaker, highlighting the control buttons for power, volume, and playback.

- **Play/Pause:** Press the Play/Pause button (often marked with a triangle/two vertical bars) to start or pause audio playback.
- **Volume Up:** Press the Volume Up button (+) to increase the volume. Hold to rapidly increase volume.
- **Volume Down:** Press the Volume Down button (-) to decrease the volume. Hold to rapidly decrease volume.
- **Next Track:** Press the Next Track button (often marked with >>|) to skip to the next song.
- **Previous Track:** Press the Previous Track button (often marked with |<<) to go back to the beginning of the current song or to the previous song.

3.3 Connectivity Options

- **Bluetooth:** Primary wireless connection for smartphones, tablets, and other Bluetooth-enabled devices.
- **Auxiliary (AUX):** Connect devices via a 3.5mm audio cable (not included) to the AUX input port for wired playback.
- **USB:** The USB port is primarily for charging the device. Some models may support USB audio playback, refer to specific product details if available.

4. MAINTENANCE

4.1 Cleaning

To maintain the appearance and functionality of your speaker:

- Wipe the exterior with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings. The speaker is not waterproof.

4.2 Storage

When not in use for extended periods:

- Store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to charge the battery at least once every three months to preserve battery life.

5. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device Bluetooth is off; Speaker is already connected to another device; Device is too far from speaker.	Ensure speaker is in pairing mode (blinking LED). Turn Bluetooth off/on on your device. Disconnect from other devices. Move device closer to speaker (within 10 meters).
No sound or low volume.	Volume on speaker or device is too low; Speaker is not connected; Audio source issue.	Increase volume on both speaker and connected device. Ensure speaker is properly paired. Check if audio is playing on the source device.
Sound distortion.	Volume too high; Device too far from speaker; Interference.	Reduce volume. Move device closer to speaker. Avoid strong electromagnetic interference.

6. SPECIFICATIONS

Detailed technical specifications for the Compact Mini Bluetooth Speaker:

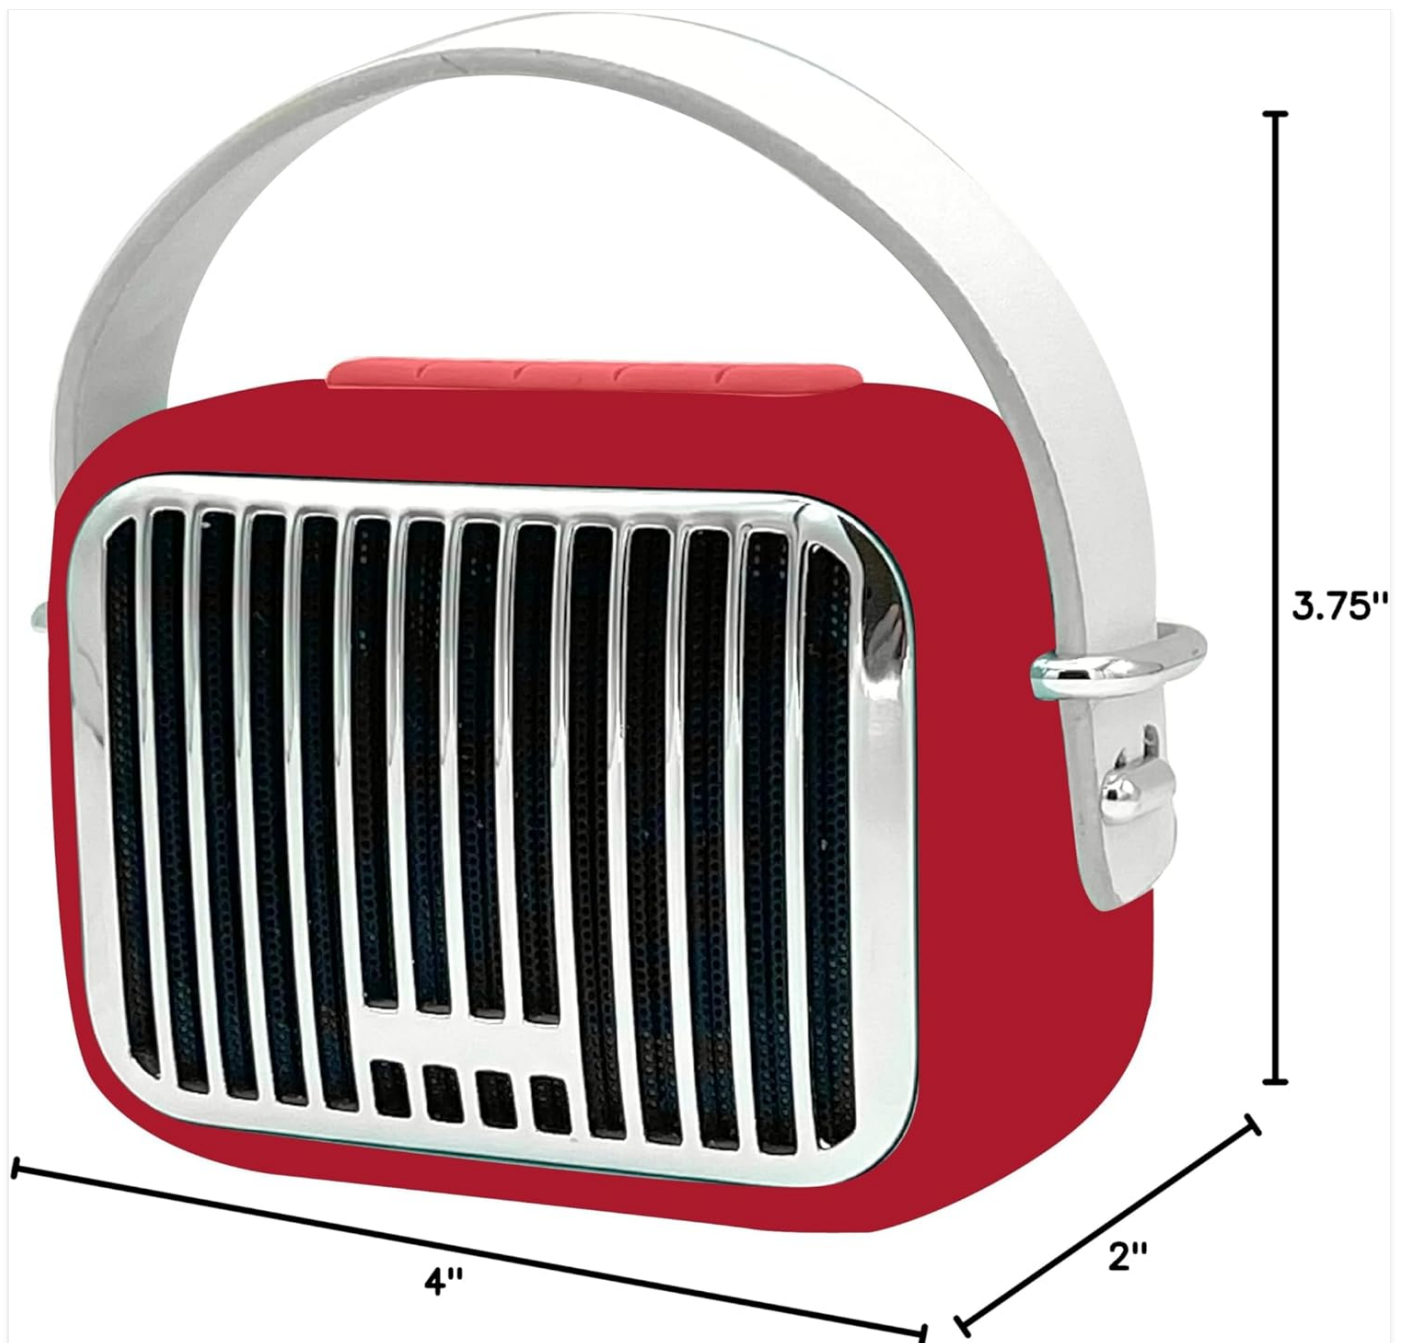


Image: Diagram showing the dimensions of the speaker: 2"D x 3.75"W x 4"H.

Feature	Detail
Model Name	WE-Retro
Brand	Wireless Express
Speaker Type	Outdoor (Portable)
Special Feature	Portable
Recommended Uses	For Smartphones or Tablets, For Portable Devices, For Parties, For Picnics, For Home Use
Compatible Devices	Laptop, MP3 Player, Desktop, Tablet, Smartphone
Controller Type	Button

Feature	Detail
Surround Sound Channel Configuration	1.0
Color	Red
Battery Life	7 Hours
Included Components	Cable, Instructions, Color box
Product Dimensions (L x W x H)	2"D x 3.75"W x 4"H
Is Waterproof	FALSE
Warranty Type	Limited
Number of Items	1
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Audio Driver Type	Dynamic Driver
Connectivity Protocol	Bluetooth
Specific Uses For Product	Portable use, Social gatherings
UPC	850030392527
Style	Retro
Manufacturer	Wireless Express
Item Weight	9.6 ounces
ASIN	B0BYG2MSR4
Date First Available	March 14, 2023
Connectivity Technology	Bluetooth, Auxiliary, USB
Audio Output Mode	Stereo
Mounting Type	Freestanding

7. WARRANTY AND SUPPORT

7.1 Limited Warranty

This product comes with a Limited Warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage period and limitations. Keep your purchase receipt as proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or warranty inquiries not covered in this manual, please contact Wireless Express customer support.

- **Online Support:** Visit the official Wireless Express website for FAQs and support resources.
- **Contact Information:** Refer to the contact details provided on the product packaging or the official brand website.

Please have your product model (WE-Retro) and purchase information ready when contacting support.

