

[Manuals.plus](#) /

› [Curtis Stone](#) /

› Curtis Stone Dura-Pan Nonstick Mini Multi-Cooker Model 739-381-100 User Manual

## Curtis Stone 739-381-100

# Curtis Stone Dura-Pan Nonstick Mini Multi-Cooker

Model: 739-381-100

## INTRODUCTION

The Curtis Stone Dura-Pan Nonstick Mini Multi-Cooker is designed to simplify meal preparation with its versatile cooking functions. This compact appliance is ideal for preparing meals for one to two people, offering convenience and easy storage. Featuring a durable Dura-Pan nonstick coating, the removable pot ensures effortless food release and quick cleanup. This manual provides essential information for the safe and effective operation of your multi-cooker.

This product is a manufacturer-refurbished item, thoroughly tested and inspected to meet original performance standards. It includes a 1-year refurbished warranty for your assurance.



Image: A turquoise Curtis Stone Mini Multi-Cooker is shown next to a plate of pasta salad and a small baked cake, demonstrating its versatility for various meals.

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS

---

Your Curtis Stone Mini Multi-Cooker package includes the following items:

- Mini Multi-Cooker Main Unit
- Removable Dura-Pan Nonstick Pot
- Measuring Cup
- Rice Paddle
- Power Cord (removable)
- Instruction Manual



Image: A red Curtis Stone Mini Multi-Cooker is shown open, revealing the inner pot. Alongside it are the included measuring cup and rice paddle.

## SETUP

---

1. Unpack all components and remove any packaging materials.
2. Wash the removable Dura-Pan nonstick pot, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the clean, dry Dura-Pan nonstick pot into the main unit.
5. Ensure the appliance is placed on a stable, level, heat-resistant surface, away from water and heat sources.
6. Connect the removable power cord to the multi-cooker and then plug it into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

The multi-cooker features touch button controls and four programmed heating function modes for various cooking needs. A status indicator with lights and sound provides feedback on operation.



Image: A close-up top view of the red Curtis Stone Mini Multi-Cooker, highlighting the control panel with buttons for 'Multi Cook', 'Slow Cook', 'Bake', 'Keep Warm', and the power button.

### Function Modes:

- **Multi-Cook:** This mode is suitable for general cooking tasks, such as sautéing, simmering, or preparing various one-pot meals.
- **Rice Cooker:** Specifically designed for cooking rice to perfection. Use the included measuring cup for accurate water-to-rice ratios.
- **Slow Cook:** Ideal for slow-cooking stews, soups, and tenderizing meats over an extended period.
- **Bake:** Allows for baking small cakes, breads, or other desserts directly in the multi-cooker.
- **Keep Warm:** Automatically activates after most cooking cycles to maintain food at a serving temperature. Can also be selected manually.

### General Operation:

1. Add your ingredients to the Dura-Pan nonstick pot.
2. Close the lid securely.
3. Press the power button to turn on the appliance.
4. Select your desired cooking function by pressing the corresponding touch button (Multi-Cook, Rice Cooker, Slow Cook, Bake).
5. The status indicator lights will illuminate, and an audible sound will confirm your selection.
6. The multi-cooker will begin the cooking cycle.
7. Once the cooking cycle is complete, the appliance will typically switch to the 'Keep Warm' mode automatically, indicated by a light and sound.
8. To stop cooking or turn off the appliance, press and hold the power button.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your multi-cooker and ensure optimal performance.

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Removable Pot, Measuring Cup, and Rice Paddle:** These items are dishwasher safe or can be washed by hand with warm, soapy water. The Dura-Pan nonstick coating allows for easy food release and simple cleanup. Avoid using abrasive cleaners or metal scouring pads, as these can damage the

nonstick surface.

- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.
- **Lid:** The lid can be wiped clean with a damp cloth. Ensure the steam vent is clear of any food debris.
- Store the multi-cooker in a dry place when not in use.

## TROUBLESHOOTING

If you encounter issues with your Curtis Stone Mini Multi-Cooker, please refer to the following common solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; damaged cord.	Ensure power cord is securely plugged into both the appliance and a working electrical outlet. Check circuit breaker. Inspect power cord for damage.
Food not cooking properly.	Incorrect function selected; insufficient liquid; lid not sealed.	Verify the correct cooking mode is selected. Ensure adequate liquid is added for rice or slow cooking. Check that the lid is closed and sealed correctly.
Steam escaping excessively from lid.	Lid not properly closed; steam vent blocked.	Ensure the lid is securely closed. Check and clear any food debris from the steam vent.
Food sticking to the pot.	Nonstick coating damaged; improper use.	Ensure only non-abrasive utensils are used. Avoid harsh cleaning agents. If coating is significantly damaged, consider replacement.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	739-381-100
Product Dimensions	8 x 8 x 8 inches
Item Weight	3 pounds
Manufacturer	Curtis Stone
Coating	Dura-Pan Nonstick
Function Modes	Multi-Cook, Rice Cooker, Slow Cook, Bake, Keep Warm
Power Cord	Removable

## WARRANTY AND SUPPORT

This Curtis Stone Dura-Pan Nonstick Mini Multi-Cooker (Renewed) comes with a **1-Year Refurbished Warranty**. This warranty covers defects in materials and workmanship under normal use for one year from the date of purchase.

For warranty claims, technical support, or any questions regarding your appliance, please refer to the contact information provided by the retailer or the manufacturer's official support channels.