

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar 2M x 2M 200 LED Curtain Lights with Remote and Timer Instruction Manual

Aigostar 2M*2M

Aigostar 2M x 2M 200 LED Curtain Lights with Remote and Timer Instruction Manual

Model: 2M*2M

1. INTRODUCTION

Thank you for choosing the Aigostar 2M x 2M 200 LED Curtain Lights. This product is designed to provide versatile and decorative lighting for various occasions, both indoors and outdoors. It features 8 distinct lighting modes, a convenient remote control, and an intelligent timer function. Please read this manual carefully before use to ensure proper installation and operation.

2. SAFETY INSTRUCTIONS

- Ensure the product is handled with care to prevent damage to the LED bulbs or wiring.
- Do not immerse the battery box in water. While the lights are waterproof (IP44 rated), the battery box requires protection from direct water exposure.
- Use only the specified battery type (3 AA batteries). Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not going to be used for an extended period to prevent leakage.
- Keep out of reach of small children and pets.
- Do not attempt to modify or repair the product. Contact customer support if issues arise.

3. PACKAGE CONTENTS

- 1 x Aigostar 2M x 2M 200 LED Curtain Lights
- 1 x Battery Box with Controller
- Hooks for installation

4. SETUP

4.1 Battery Installation

1. Open the battery compartment on the controller unit.
2. Insert 3 AA batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment securely.



Figure 1: Battery Installation Diagram

4.2 Mounting the Lights

The curtain lights are designed for easy installation with integrated hooks. You can hang them on curtain rods, cables, or use nails for secure placement.

- Uncoil the light string carefully to avoid tangling.
- Identify the main horizontal cable from which the vertical strands descend.
- Use the provided hooks to secure the main cable to your desired location (e.g., curtain rod, wall, balcony railing).
- Arrange the vertical strands as desired for your decoration.

Fácil de Instalar

 
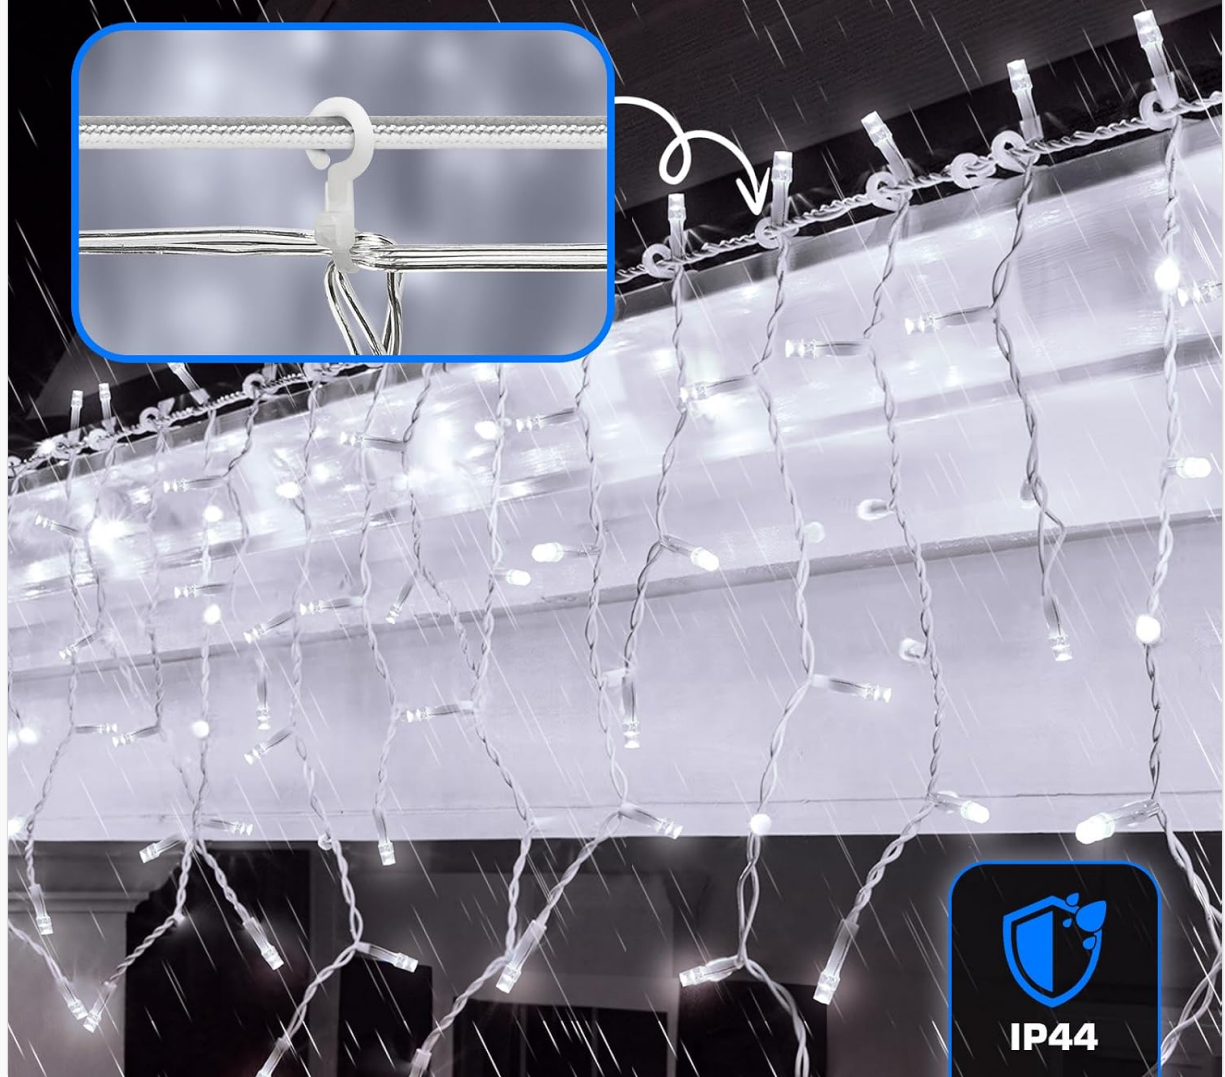 


Figure 2: Easy Installation with Hooks

200 LED Cool White Curtain Lights



**3 AA
Batteries**

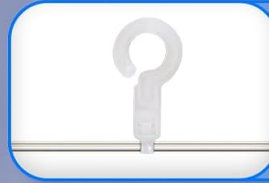

**Convenient hook
easy to instal**

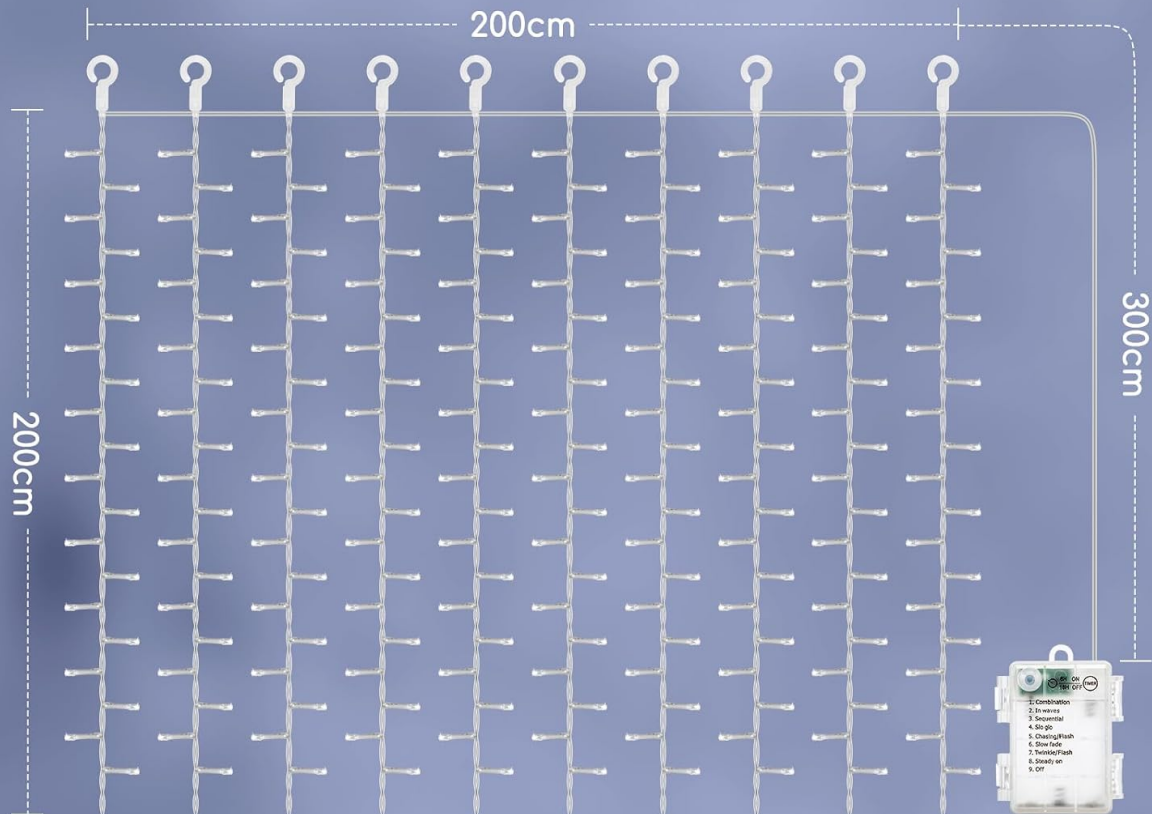 


Figure 3: Product Dimensions and Features Overview

5. OPERATING INSTRUCTIONS

The Agostar LED Curtain Lights feature a controller with a button for power, mode selection, and timer activation.

5.1 Power On/Off

- Press the power button on the controller to turn the lights ON.
- Press the power button repeatedly to cycle through the modes.
- To turn the lights OFF, cycle through all 8 modes until the 'Off' setting is reached, or press and hold the power button.

5.2 Lighting Modes

The lights offer 8 different lighting modes to suit various atmospheres. Press the mode button on the controller to cycle through them:

1. Combination
2. In waves

3. Sequential
4. Slo glo
5. Chasing/Flash
6. Slow fade
7. Twinkle/Flash
8. Steady on



Figure 4: Available Lighting Modes

5.3 Timer Function

The intelligent timer function allows the lights to operate automatically:

- To activate the timer, press the 'TIMER' button on the controller.
- Once activated, the lights will stay ON for 6 hours, then automatically turn OFF for 18 hours, and repeat this cycle daily.
- To deactivate the timer, press the 'TIMER' button again.

Curtain Light Controller

- Light switching key
- Timer auto on/off button

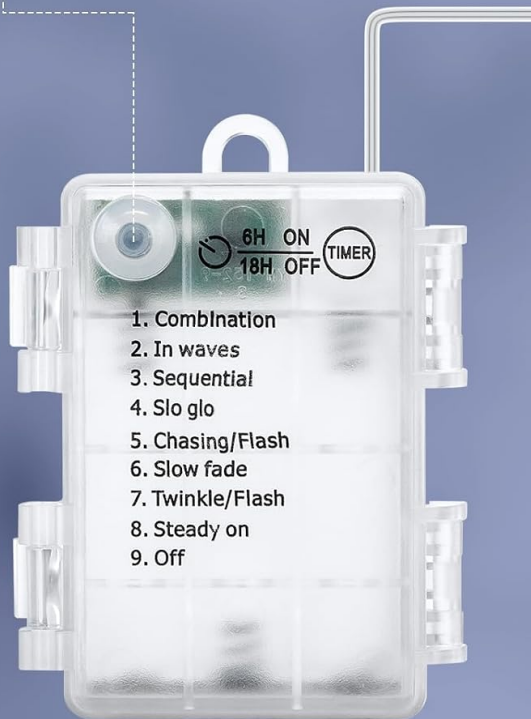 


Figure 5: Controller Buttons for Mode and Timer

Your browser does not support the video tag.

Video 1: Demonstration of Aigostar String Lights features, including various lighting modes and the controller.

6. MAINTENANCE

6.1 Cleaning

- Ensure the lights are turned off and batteries are removed before cleaning.
- Wipe the lights and controller gently with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.

6.2 Battery Replacement

- When the lights dim or stop working, replace all 3 AA batteries with new ones.
- Follow the battery installation steps in Section 4.1.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Lights are dim.	Batteries are low.	Replace batteries with new ones.
Modes are not changing.	Controller button malfunction or low battery.	Ensure batteries are fresh. Press the button firmly. If issue persists, contact support.
Timer function not working.	Timer not activated or low battery.	Press the 'TIMER' button to activate. Ensure batteries are fresh.

8. SPECIFICATIONS

Feature	Detail
Brand	Aigostar
Model	2M*2M
Dimensions	2 meters (width) x 2 meters (height)
Number of LEDs	200
Light Color	Cool White (6500K)
Lighting Modes	8 (Combination, In waves, Sequential, Slo glo, Chasing/Flash, Slow fade, Twinkle/Flash, Steady on)
Power Source	3 x AA Batteries (not included)
Waterproof Rating	IP44 (for lights, battery box should be protected)
Special Features	Timer (6H ON / 18H OFF), Remote Control (integrated into battery box)
Product Weight	200 g

9. WARRANTY AND SUPPORT

Aigostar products are manufactured to high-quality standards. For any questions, technical support, or warranty claims, please refer to the retailer's return policy or contact Aigostar customer service directly through their official channels. Please retain your proof of purchase for warranty purposes.