

OMOTON Wireless Keyboard and Mouse

OMOTON 2.4G Wireless AZERTY Keyboard and Silent Mouse User Manual

Model: Wireless Keyboard and Mouse

1. INTRODUCTION

Thank you for choosing the OMOTON 2.4G Wireless AZERTY Keyboard and Silent Mouse. This product is designed to provide a comfortable and efficient typing and navigation experience for your Windows PC. This manual will guide you through the setup, operation, and maintenance of your new wireless peripheral set.



Image 1.1: The OMOTON 2.4G Wireless AZERTY Keyboard and Silent Mouse set, featuring a full-size keyboard with an integrated phone/tablet holder and a compact, ergonomic mouse, alongside the USB receiver.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x OMOTON 2.4G Wireless AZERTY Keyboard
- 1 x OMOTON Silent Wireless Mouse
- 1 x USB 2.4G Receiver (stored inside the keyboard or mouse)

Note: AAA battery for the keyboard and AA battery for the mouse are not included and must be purchased separately.

3. PRODUCT OVERVIEW

3.1 Keyboard Features

- **AZERTY Layout:** Standard French keyboard layout.
- **Ergonomic Design:** Integrated wrist rest and foldable support legs for comfortable typing angles.
- **Integrated Phone/Tablet Holder:** A 21cm long slot to securely hold your smartphone or tablet while working.
- **18 Function Keys:** Dedicated multimedia and shortcut keys for enhanced productivity.
- **Silent Keys:** Designed for quiet operation, minimizing typing noise.
- **Power-Saving Mode:** Automatically enters sleep mode after 10 minutes of inactivity.

3.2 Mouse Features

- **Silent Clicks:** Reduces click noise for a quiet working environment.
- **Adjustable DPI:** Three sensitivity levels (800/1200/1600 DPI) for precise control.
- **Optical Tracking:** Reliable and accurate cursor movement.
- **Ergonomic Design:** Contoured shape for comfortable grip.
- **Power-Saving Mode:** Automatically enters sleep mode after 10 minutes of inactivity.



Image 3.1: The OMOTON keyboard showcasing its integrated phone/tablet holder and ergonomic wrist rest, designed for user comfort and convenience.

Souris ergonomique

Offre une expérience d'utilisation confortable



Image 3.2: The OMOTON silent mouse, highlighting its ergonomic design and the three adjustable DPI levels (800, 1200, 1600) for customized cursor sensitivity.

4. SETUP INSTRUCTIONS

Follow these steps to set up your OMOTON wireless keyboard and mouse:

1. Install Batteries:

- Open the battery compartment on the back of the keyboard and insert one AAA battery.
- Open the battery compartment on the back of the mouse and insert one AA battery.

CLAVIER ET SOURIS SUR BATTERIE



Image 4.1: Illustration showing the battery compartments for both the OMOTON keyboard (AAA battery) and mouse (AA battery).

2. **Locate USB Receiver:** The USB 2.4G receiver is typically stored in the battery compartment of either the keyboard or the mouse for safekeeping during transport. Remove it carefully.
3. **Connect USB Receiver:** Plug the USB receiver into an available USB port on your Windows PC.
4. **Power On Devices:**
 - Slide the ON/OFF switch on the back of the keyboard to the "ON" position.
 - Slide the ON/OFF switch on the bottom of the mouse to the "ON" position.

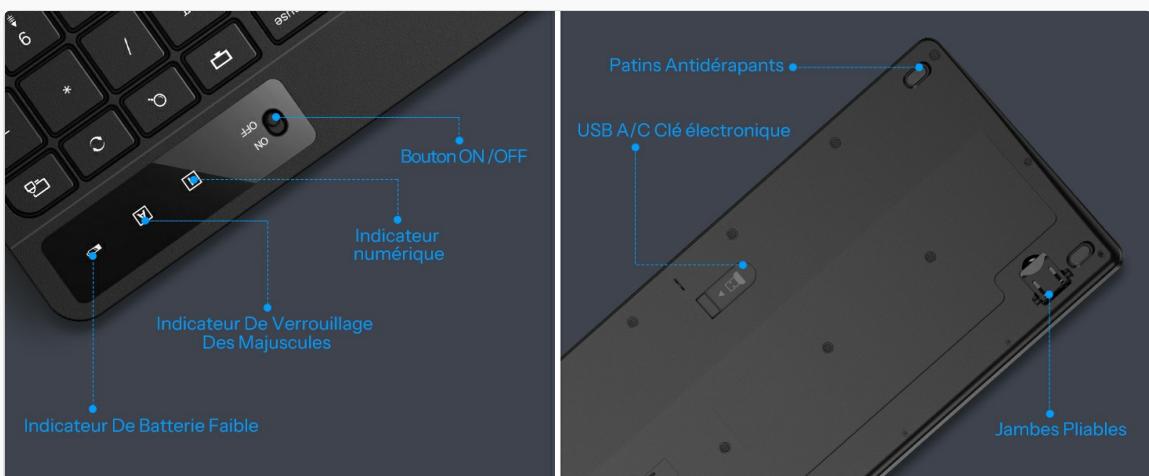


Image 4.2: Detailed view of the OMOTON keyboard's underside, showing the ON/OFF switch, indicator lights, foldable legs, anti-slip pads, and the storage slot for the USB receiver.

5. **System Recognition:** Your computer should automatically detect and install the necessary drivers. The keyboard and mouse are ready for use once recognized. This set is compatible with Windows operating systems.

5. OPERATING INSTRUCTIONS

5.1 Using the Keyboard

- **Typing:** Use the standard AZERTY layout for text input.
- **Function Keys (F1-F12):** These keys provide quick access to various functions. Some may require pressing the 'Fn' key simultaneously. Refer to the key legends for specific functions (e.g., volume control, media playback, brightness adjustment).
- **Multimedia Keys:** Dedicated keys for controlling media playback, volume, and other common functions.
- **Phone/Tablet Holder:** Place your device in the integrated slot for convenient viewing while typing.



Image 5.1: The OMOTON keyboard in use, demonstrating a tablet securely placed in the integrated holder, providing an elevated viewing angle.

Gagner du temps et de l'efficacité

12 touches multimédias

zone numérique pratique



Image 5.2: A close-up of the OMOTON keyboard, highlighting the multimedia function keys and the numeric keypad for efficient workflow.

5.2 Using the Mouse

- Movement:** Move the mouse on a flat surface to control the cursor.
- Clicking:** Left and right clicks function as standard. The scroll wheel allows for vertical scrolling.
- DPI Adjustment:** Press the DPI button (usually located near the scroll wheel) to cycle through the 800, 1200, and 1600 DPI settings. Choose the sensitivity that best suits your task.

5.3 Power Saving Mode

Both the keyboard and mouse will automatically enter a sleep mode after approximately 10 minutes of inactivity to conserve battery life. To wake them up, simply press any key on the keyboard or move/click the mouse.



Image 5.3: An illustration emphasizing the silent operation of the OMOTON keyboard and mouse, suitable for quiet environments.

6. MAINTENANCE

6.1 Battery Replacement

When the low battery indicator on the keyboard illuminates, or if the mouse becomes unresponsive, it's time to replace the batteries:

- Keyboard:** Replace the AAA battery.

- **Mouse:** Replace the AA battery.

Ensure correct polarity when inserting new batteries.

6.2 Cleaning

To clean your keyboard and mouse:

- Turn off both devices.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid excessive moisture and do not immerse the devices in liquid.
- Use compressed air to remove debris from between keyboard keys.

7. TROUBLESHOOTING

If you encounter issues with your OMOTON wireless keyboard and mouse, please refer to the following solutions:

Problem	Solution
Keyboard/Mouse not responding	<ul style="list-style-type: none"> • Ensure both devices are turned ON. • Check if batteries are correctly installed and have sufficient charge. Replace if necessary. • Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. • Move the devices closer to the USB receiver.
Lag or delayed response	<ul style="list-style-type: none"> • Reduce the distance between the devices and the USB receiver. • Avoid placing the receiver near other wireless devices (e.g., Wi-Fi routers, cordless phones) that might cause interference. • Ensure your computer's USB drivers are up to date.
Mouse cursor moves erratically or is too fast/slow	<ul style="list-style-type: none"> • Press the DPI button on the mouse to adjust sensitivity. • Ensure the mouse is used on a clean, non-reflective surface.
Keyboard keys not typing correctly	<ul style="list-style-type: none"> • Check if Caps Lock or Num Lock indicators are as expected. • Clean any debris from under the keys.

8. SPECIFICATIONS

- **Brand:** OMOTON
- **Color:** Black
- **Connectivity Technology:** 2.4G Wireless (USB Receiver)
- **Operating System Compatibility:** Windows
- **Compatible Devices:** Personal Computer

- **Keyboard Description:** AZERTY Wireless Keyboard with integrated wrist rest, 18 function keys, and foldable phone/tablet support.
- **Mouse Tracking Technology:** Optical
- **Mouse DPI Settings:** 800/1200/1600 DPI
- **Power Source:** Battery Powered (1x AAA for keyboard, 1x AA for mouse)
- **Special Features:** Wireless, Portable, Stable connection, Ergonomic, Silent operation

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This OMOTON product comes with a **2 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact OMOTON customer support through the retailer where you purchased the product or visit the official OMOTON website for contact information.