

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Sony](#) /
- › Sony X85J 65 Inch 4K Smart Google TV and UBP-X700M 4K Blu-ray Player Instruction Manual

Sony X85J, UBP-X700M

Sony X85J 65 Inch 4K Smart Google TV and UBP-X700M 4K Blu-ray Player Instruction Manual

Model: X85J (TV), UBP-X700M (Blu-ray Player)

SONY X85J 65 INCH 4K ULTRA HD LED SMART GOOGLE TV

Introduction

The Sony X85J is a 65-inch 4K Ultra HD LED Smart Google TV designed to deliver a high-quality viewing experience. Featuring a native 120Hz refresh rate and Dolby Vision HDR, this television provides smooth motion and vibrant colors. Google TV integration offers access to a wide range of streaming services and smart features.



Image: Front view of the Sony X85J 65-inch television, showcasing its slim bezels and stand.

Setup

1. **Unpacking:** Carefully remove the TV and all accessories from the packaging. Retain packaging for future transport or service.
2. **Stand Assembly:** Attach the included stand to the TV using the provided screws, following the instructions in the separate stand assembly guide. Ensure the stand is securely fastened.
3. **Power Connection:** Connect the power cord to the TV's power input and then to a wall outlet.
4. **External Device Connections:** Connect your external devices (e.g., Blu-ray player, game console) to the TV's HDMI ports using HDMI cables. Note the HDMI input numbers for easy selection.
5. **Initial Setup:** Power on the TV. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), Google account login, and channel scanning.

Operating

- **Power On/Off:** Press the power button on the remote control or on the TV itself.
- **Input Selection:** Use the 'Input' button on the remote to switch between connected devices (HDMI 1, HDMI 2, etc.) or internal TV tuners.
- **Google TV Navigation:** Use the directional pad and 'Enter' button on the remote to navigate the Google TV interface. Access apps, settings, and content recommendations.
- **Picture Settings:** Adjust picture modes (e.g., Standard, Vivid, Cinema), brightness, contrast, color, and sharpness via the 'Settings' menu to optimize your viewing experience.
- **Sound Settings:** Adjust sound modes (e.g., Standard, Music, Cinema), bass, treble, and balance via the 'Settings' menu.

Beautiful picture,
full of rich colors,
and real world detail



Image: Close-up of the Sony X1 4K HDR Processor chip, highlighting its role in image processing for rich colors and detail.

Smooth and clear motion, allowing sports and movies to be seen with lifelike clarity

Conventional TVs



120Hz
Refresh Rate

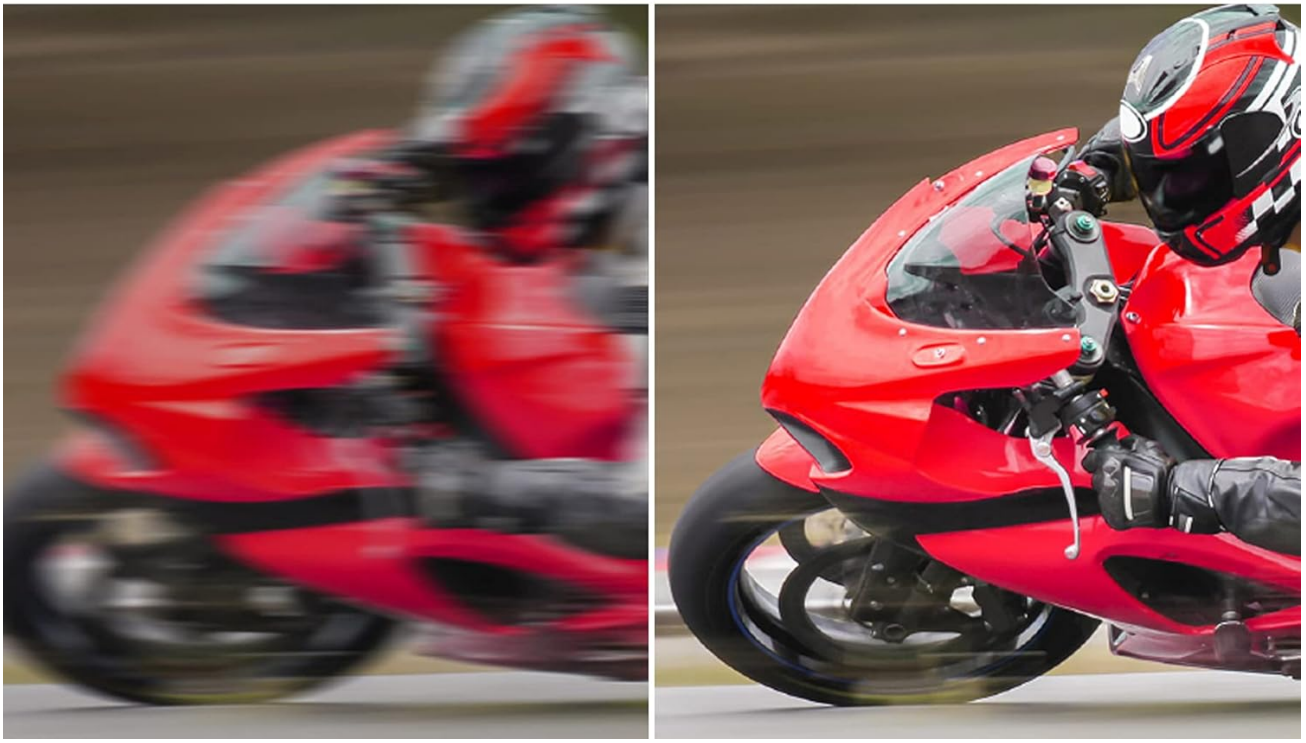


Image: Comparison showing a blurred image from a conventional TV next to a clear image from a 120Hz refresh rate TV with Motionflow XR, demonstrating smooth motion clarity.

Maintenance

- **Screen Cleaning:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. Do not spray liquid directly onto the screen.
- **Cabinet Cleaning:** Wipe the TV cabinet and stand with a soft, dry cloth. Avoid abrasive cleaners.
- **Ventilation:** Ensure the TV's ventilation openings are not blocked to prevent overheating.

Troubleshooting (TV)

Problem	Solution
No power	Check if the power cord is securely connected to both the TV and the wall outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check HDMI cable connections. Try a different HDMI port or cable.

Problem	Solution
No sound, but picture is present	Check the TV's volume level and mute status. Ensure external audio systems are properly connected and powered on.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.

Specifications (Sony X85J TV)

- **Screen Size:** 65 Inches
- **Display Technology:** LED
- **Resolution:** 4K (3840 x 2160)
- **Refresh Rate:** 120 Hz
- **Special Feature:** Flat screen, Dolby Vision HDR, Google TV
- **Connectivity Technology:** USB, Wi-Fi, HDMI
- **Aspect Ratio:** 16:9
- **Included Components:** Stand, TV, Remote Control

SONY UBP-X700M 4K ULTRA HD HOME THEATER STREAMING BLU-RAY PLAYER

Introduction

The Sony UBP-X700M is a 4K Ultra HD Blu-ray player designed to provide high-resolution disc playback and access to streaming services. It supports 4K HDR content, offering enhanced picture quality when connected to a compatible 4K HDR television.



Image: Front view of the Sony UBP-X700M 4K Ultra HD Blu-ray Player, showing its sleek black design and disc tray.

Setup

1. **Unpacking:** Remove the Blu-ray player and accessories from its packaging.
2. **Placement:** Place the player on a stable, level surface near your TV, ensuring adequate ventilation.
3. **HDMI Connection:** Connect an HDMI cable from the player's HDMI OUT port to an available HDMI IN port on your TV. For optimal 4K HDR performance, use a High-Speed HDMI cable.
4. **Power Connection:** Connect the power cord to the player and then to a wall outlet.
5. **Network Connection (Optional):** For streaming services and firmware updates, connect an Ethernet cable to the LAN port or configure Wi-Fi settings during initial setup.



Image: The Sony UBP-X700M Blu-ray Player positioned on a media console next to a television, illustrating a typical setup.

Operating

- **Power On/Off:** Press the power button on the player or its remote control.
- **Disc Playback:** Press the 'Open/Close' button to open the disc tray. Place a Blu-ray or DVD disc on the tray and close it. Playback should start automatically or can be initiated from the on-screen menu.
- **Streaming Services:** Access pre-installed streaming apps (e.g., Netflix, YouTube) from the player's home menu.
- **Remote Control:** Use the directional pad and 'Enter' button to navigate menus. Dedicated buttons are available for playback control (Play, Pause, Stop, Skip).



Image: Angled view of the Sony UBP-X700M 4K Ultra HD Blu-ray Player, with the 4K HDR Ultra HD logo visible, emphasizing its capabilities.

Maintenance

- **Cleaning:** Wipe the player's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the unit.
- **Disc Handling:** Handle discs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use.
- **Firmware Updates:** Periodically check for and install firmware updates to ensure optimal performance and compatibility.

Troubleshooting (Blu-ray Player)

Problem	Solution
No picture/sound from player	Ensure the TV input is set to the correct HDMI port. Check HDMI cable connections. Verify the player is powered on.
Disc does not play	Check if the disc is clean and free of scratches. Ensure the disc is inserted correctly. Verify the disc format is supported by the player.
Player freezes or is unresponsive	Try restarting the player by unplugging it from the power outlet for a few minutes, then plugging it back in.
Network connection issues	Check your router and internet connection. Re-enter Wi-Fi password if necessary. Try connecting via Ethernet if Wi-Fi is unstable.

Specifications (Sony UBP-X700M Blu-ray Player)

- **Supported Disc Formats:** 4K Ultra HD Blu-ray, Blu-ray, DVD, CD
- **Video Output:** HDMI (4K HDR compatible)
- **Audio Output:** HDMI, Coaxial Digital
- **Connectivity:** Wi-Fi, Ethernet, USB
- **Streaming Services:** Built-in access to popular streaming apps

Warranty and Support

For detailed warranty information and technical support, please refer to the warranty card included with your product or visit the official Sony support website. The website provides access to user manuals, software updates, and contact information for customer service.

Please retain your proof of purchase for warranty claims.