

[Manuals.plus](#) /

› [FANMIS](#) /

› FANMIS Men's Multifunction Chronograph Watch CX-972.973.976 Instruction Manual

FANMIS CX-972.973.976

FANMIS Men's Multifunction Chronograph Watch Instruction Manual

Model: CX-972.973.976

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your FANMIS Men's Multifunction Chronograph Watch, Model CX-972.973.976. Please read this manual thoroughly to ensure proper use and care of your timepiece.



Figure 1: Front view of the FANMIS Multifunction Chronograph Watch.

PRODUCT OVERVIEW

The FANMIS Multifunction Chronograph Watch features a quartz movement, chronograph sub-dials, a moonlight display, and a durable silicone strap. It is designed for daily wear with practical functions.



Figure 2: Overview of watch functions and controls.

Watch Components

- **Main Crown:** Used for setting time and date.
- **Pushers (Top & Bottom):** Control chronograph functions.
- **Hour, Minute, Second Hands:** Indicate current time.
- **Chronograph Sub-dials:** Measure elapsed time (minutes, seconds).
- **Moonlight Display:** Indicates AM/PM (daylight/night shows).
- **Date Window:** Displays the current date.
- **Silicone Strap:** Comfortable and durable band.

SETUP AND INITIAL ADJUSTMENT

1. Setting the Time

1. Pull the main crown out to the second position.

2. Turn the crown to adjust the hour and minute hands to the correct time. Observe the moonlight display to ensure AM/PM is set correctly.
3. Push the crown back into the first position to start the watch.

2. Setting the Date

1. Pull the main crown out to the first position.
2. Turn the crown to adjust the date in the date window.
3. Push the crown back into the closed position.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism. If the date needs to be adjusted during this period, first set the time outside this range, adjust the date, then reset the time.

3. Adjusting the Strap

The silicone strap features a metal buckle system for secure and comfortable wear. Adjust the strap length by moving the buckle pin to the desired hole on the strap. Ensure the watch fits snugly but comfortably on your wrist.

Silicone Watch band, buttoned

Silicone strap, strong flexibility, wear resistance,
wear comfort, with metal button system



Figure 3: Silicone strap and buckle for adjustment.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the top pusher to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph sub-dials (seconds and minutes).
3. **Reset:** After stopping the chronograph, press the bottom pusher to reset all chronograph hands to their zero positions.

Note: Ensure the chronograph is stopped before attempting to reset it.

WATER RESISTANCE GUIDELINES

Your FANMIS watch is rated for 3 ATM (30 meters) water resistance. This means it is splash-resistant and suitable for:

- Rain exposure
- Water splashes
- Hand washing
- Other occasional contact with cold water

Important Precautions:

- **DO NOT** wear the watch for swimming, diving, or bathing.
- **DO NOT** expose the watch to hot water or steam, as this can compromise the water seals.
- **DO NOT** operate the crown or pushers while the watch is wet or submerged.

THREE-DEGREE NANO SEAL WATERPROOF

Never wear it to contact hot water or steam



Wash your face, wash your hands, cold water, light rain





Figure 4: Water resistance capabilities of the watch.

MAINTENANCE AND CARE

Cleaning Your Watch

- Wipe the watch case and strap with a soft, dry cloth regularly to remove dust and dirt.
- For the silicone strap, a mild soap solution and a soft brush can be used, followed by rinsing with cold water and thorough drying.
- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or strap.

Crystal Durability

The watch features a mineral-reinforced glass mirror, offering high clarity, anti-explosion properties, scratch-resistance, and wear-resistance. While durable, avoid unnecessary impacts to prevent damage.

MINERAL-REINFORCED GLASS MIRROR

High clarity, anti-explosion, scratch-resistant and wear-resistant blue
light under the surface of the table is more clear and transparent



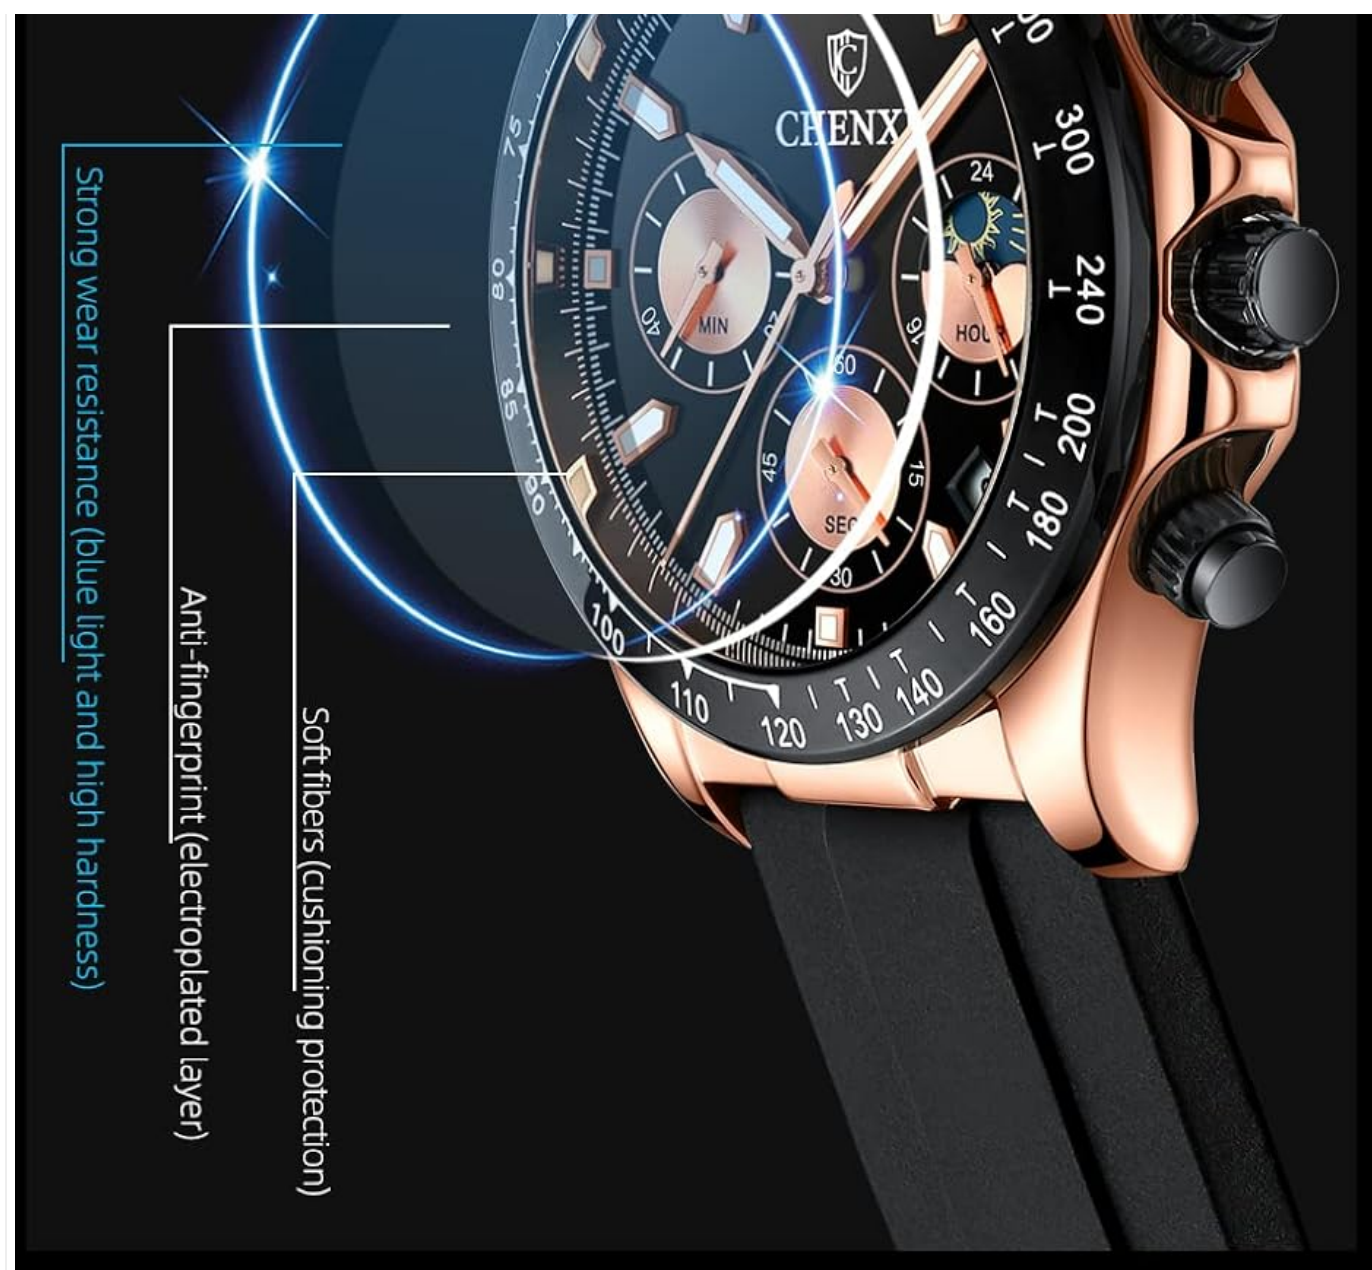


Figure 5: Mineral-reinforced glass mirror features.

Battery Replacement

This watch is powered by a battery. When the watch stops or its functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Depleted battery; Crown not pushed in.	Replace battery (professional service recommended); Ensure crown is fully pushed in.
Time/Date not setting	Crown not pulled out to correct position; Setting date during restricted hours.	Ensure crown is pulled out to the first or second position; Avoid setting date between 9 PM and 3 AM.

Problem	Possible Cause	Solution
Chronograph hands not resetting to zero	Chronograph not stopped before reset; Malfunction.	Press top pusher to stop chronograph before pressing bottom pusher to reset; If issue persists, seek professional service.
Condensation inside watch	Exposure to extreme temperature changes; Compromised water resistance.	Avoid extreme temperature changes; Seek professional service immediately to prevent damage.

SPECIFICATIONS

Model Number	CX-972.973.976
Brand	FANMIS
Movement Type	Quartz
Display Type	Analog
Case Material	Alloy
Band Material	Silicone
Crystal Type	Mineral
Case Diameter	39 mm
Case Thickness	13 mm
Band Width	20 mm
Band Length	240 mm
Water Resistance	3 ATM (30 Meters) - Splash Resistant
Power Source	Battery Powered

WARRANTY INFORMATION

Your FANMIS watch comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty card included with your purchase or contact FANMIS customer support directly.

SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact FANMIS customer support. Contact information can typically be found on the product packaging, the official FANMIS website, or through your retailer.

Manufacturer: Fanmis

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BYJHNB09>

More documents and user manuals: <https://manuals.plus/>