

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TASVAC](#) /

› [TASVAC N7 Cordless Vacuum Cleaner User Manual](#)

TASVAC N7

TASVAC N7 Cordless Vacuum Cleaner User Manual

Model: N7

1. INTRODUCTION

Thank you for choosing the TASVAC N7 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Carefully unpack your TASVAC N7 Cordless Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Motor Unit
- Foldable Extension Wand
- Motorized Brush Head with LED Lights
- Soft Roller Brush (for hard floors)
- Stiff Roller Brush (for carpets)
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter/Charger
- Cleaning Tool for Brush Rollers
- Instruction Manual
- Quick Start Guide

Spazzola per pavimenti flessibile motorizzata a LED



Image: The TASVAC N7 can be configured as a full-size stick vacuum or a compact handheld unit with different attachments for versatile cleaning.

5. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner for optimal performance and battery life.

1. Connect the power adapter to the charging port on the main motor unit.
2. Plug the adapter into a wall outlet.
3. The charging indicator lights will illuminate, showing the charging status. The battery is fully charged when all indicator lights are solid.
4. A full charge provides up to 40 minutes of runtime in low-speed mode.



Image: The TASVAC N7 main unit connected to its charger, indicating the charging process.

6. OPERATION

Operating your TASVAC N7 is straightforward. Familiarize yourself with its features for effective cleaning.

6.1 Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on. It will start in low-speed mode.
- Press the mode button to switch between low-speed (9 kPa) and high-speed (14 kPa) suction modes.
- Press the power button again to turn the vacuum cleaner off.

6.2 Using Attachments

- **Motorized Brush Head:** Ideal for floors and carpets. The integrated LED lights illuminate dust and debris in dark areas.
- **Soft Roller Brush:** Designed for delicate hard floors like wood and tile.
- **Stiff Roller Brush:** Recommended for carpets and rugs to dislodge embedded dirt.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.

- **2-in-1 Brush Tool:** Use the brush for upholstery, curtains, and car interiors, or retract the brush for wider suction.

Strumenti versatili



Spazzola per fessure



Spazzola 2 in 1



Spazzola motorizzata per pavimenti



Asta pieghevole

Image: The TASVAC N7 with its versatile tools, including the crevice tool for tight spaces, the 2-in-1 brush for surfaces, the motorized floor brush for general cleaning, and the foldable wand for reaching under furniture.

6.3 Foldable Extension Wand

The unique 180° foldable extension wand allows you to easily clean under low furniture without bending down. Simply press the release button on the wand to fold it.

⑤ Spugna ad alta densità

③ Filtrazione a ciclone

② Filtrazione a nido d'ape

④ Filtro a tampone ad alta efficienza

① Ciclone forte

A 5 stadi

Sistema di filtrazione efficiente

Image: The vacuum's LED light illuminates dirt, and its flexible design allows it to reach under beds and furniture, with the brush head rotating 180° and 90° for maneuverability.

6.4 Cleaning Performance

The TASVAC N7 is effective on various types of debris, from fine dust to larger particles like pet food and coffee beans.

Potente aspirazione per pulire Diversi tipi di rifiuti



Image: The TASVAC N7 effectively cleans different types of debris, including fine dust, hair, and larger particles like coffee beans, from various floor surfaces.

7. MAINTENANCE

Regular maintenance ensures your TASVAC N7 operates at peak performance and extends its lifespan.

7.1 Emptying the Dustbin

Empty the 0.8L dustbin after each use or when it reaches the MAX fill line.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach it from the main unit.
3. Hold the dustbin over a trash can and press the bottom release button to open the lid and empty the contents.
4. Close the dustbin lid and reattach the dustbin to the main unit until it clicks.



Image: The dustbin of the TASVAC N7 being emptied into a waste bin with a single click, demonstrating its easy-to-clean design.

7.2 Cleaning the Filtration System

The TASVAC N7 features a 5-stage fully sealed filtration system. Regular cleaning of the filters is crucial for maintaining suction power and air quality.

1. Ensure the vacuum is turned off and the dustbin is empty.
2. Twist and pull to remove the filter components from the dustbin.
3. Separate the metal filter, sponge filter, and HEPA filter.
4. Rinse all washable filter components under cold running water until the water runs clear. Do not use detergent.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
6. Reassemble the filters in reverse order and place them back into the dustbin.



Image: An exploded view of the TASVAC N7's 5-stage filtration system, showing the strong cyclone, honeycomb filtration, high-efficiency buffer filter, and high-density sponge filter.

7.3 Cleaning the Roller Brushes

Periodically check the roller brushes for tangled hair or debris and clean them using the provided cleaning tool.

1. Ensure the vacuum is turned off and disconnected from the power source.
2. Press the release button on the side of the motorized brush head to remove the roller brush.
3. Use the cleaning tool to cut and remove any tangled hair or fibers from the roller brush.
4. Wipe the roller brush and the brush head cavity with a dry cloth.
5. Reinsert the clean roller brush until it clicks into place.

TASVAC N7

Aspirapolvere senza fili

180°

Asta pieghevole

6-in-1

Aspirazione a 2 velocità

2200mAh

Batteria ricaricabile



Image: The TASVAC N7 motorized brush head with interchangeable soft roller for hard floors and stiff roller for carpets, demonstrating their V-shaped design for efficient debris collection.

8. TROUBLESHOOTING

If you encounter any issues with your TASVAC N7, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filters are clogged Brush head/wand is blocked	Empty the dustbin Clean or replace filters Check and clear any blockages in the brush head or wand

Problem	Possible Cause	Solution
Brush roller not spinning	Tangled hair/debris Brush roller not installed correctly	Remove and clean the brush roller Ensure the brush roller is securely clicked into place
Battery not charging	Charger not connected properly Faulty charger or battery	Ensure charger is securely plugged into vacuum and outlet Contact customer support for assistance

If the problem persists after trying these solutions, please contact TASVAC customer support.

9. SPECIFICATIONS

- **Brand:** TASVAC
- **Model:** N7
- **Power:** 600 Watts
- **Battery:** 2200 mAh rechargeable
- **Suction Power:** 9-14 kPa (2 modes)
- **Runtime:** Up to 40 minutes (low speed)
- **Dustbin Capacity:** 0.8 Liters
- **Filtration System:** 5-stage, fully sealed
- **Weight:** Approximately 3.35 Kilograms
- **Special Features:** 180° foldable wand, LED motorized brush, 6-in-1 versatility

10. WARRANTY AND SUPPORT

The TASVAC N7 Cordless Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or replacement parts, please contact TASVAC customer service through the retailer where you purchased the product or visit the official TASVAC website for contact information.