

Manuals.plus /

› Whirlpool /

› Whirlpool Refrigerator Shelf Front Trim Installation Guide (Model SEM135051)

Whirlpool SEM135051

Whirlpool Refrigerator Shelf Front Trim Installation Guide

Model: SEM135051

1. INTRODUCTION

This document provides comprehensive instructions for the proper installation and maintenance of the Whirlpool Refrigerator Shelf Front Trim, part number SEM135051. This component is designed to secure items on your refrigerator or freezer shelves and maintain the aesthetic integrity of your appliance. Please read all instructions carefully before proceeding with installation.

2. SAFETY INFORMATION

- Always disconnect power to the refrigerator before attempting any installation or maintenance.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Handle the trim piece carefully to avoid damage or injury.
- If you are unsure about any step, consult a qualified technician.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged:

- 1 x Whirlpool Refrigerator Shelf Front Trim (Model SEM135051)

4. COMPATIBLE MODELS

This front trim is compatible with various Whirlpool, IKEA Whirlpool, and Bauknecht refrigerator and freezer models. Please verify your appliance's model number against the following list or consult your appliance's original documentation for compatibility:

- Art495/nf/5 856449596010
- Arz009/a+/6 858600996000

- Arg947/5 858600801000
- Art 455/5 f 856445510011
- Art484/a+/5 856448496001
- Arg 737/a+/5 853473796000
- Art484/a+/5-lh 856448401061
- Art 767 856476710001
- Art859/a+ 856427229003
- Arz009/a+/6 858600996001
- Arg749/a+ 853474996000
- Art863/a+/nf 856478796010
- Arg745/a/6 853474596001
- Arg749/a+/1 853474996310
- Arg749/a+/1 853474996011
- Arg947/

5. INSTALLATION INSTRUCTIONS

Follow these steps to install the new shelf front trim:

1. **Prepare the Appliance:** Disconnect the refrigerator from the power supply. Open the refrigerator door to access the shelf where the trim will be installed.
2. **Remove the Old Trim (if applicable):** If replacing an existing trim, carefully unclip or slide out the old trim piece from the front edge of the shelf. Note how it was attached to assist with new installation.
3. **Position the New Trim:** Align the new Whirlpool Refrigerator Shelf Front Trim (SEM135051) with the front edge of the designated shelf. Ensure the orientation is correct.
4. **Secure the Trim:** Gently press or slide the trim into place until it securely clips onto the shelf. Apply even pressure along the length of the trim to ensure it is fully seated.
5. **Verify Installation:** Once installed, gently tug on the trim to ensure it is firmly attached and does not easily dislodge.
6. **Restore Power:** Reconnect the refrigerator to the power supply.



Image 1: The Whirlpool Refrigerator Shelf Front Trim (Model SEM135051). This image displays the long, slender trim piece designed to fit the front edge of a refrigerator shelf.

6. MAINTENANCE

To ensure the longevity and cleanliness of your shelf front trim:

- Clean the trim regularly with a soft cloth and mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive pads, as these can damage the surface.
- Ensure the trim is dry after cleaning to prevent water spots.

7. TROUBLESHOOTING

- **Trim does not fit:** Double-check the model number of your refrigerator against the list of compatible models. Ensure the trim is oriented correctly.
- **Trim is loose:** Ensure the trim is fully clipped into place along its entire length. If it remains loose, inspect the shelf for any damage that might prevent a secure fit.

8. SPECIFICATIONS

Manufacturer	WHIRLPOOL
Model Number	SEM135051
ASIN	B0BYK6CTFJ
Batteries Required	No
Spare Parts Availability	Information unavailable

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this replacement part is not provided. For warranty inquiries or technical support, please contact Whirlpool customer service directly or refer to your appliance's original warranty documentation.