

## Apple A2650

# iPhone 14 Pro User Manual

## APPLE IPHONE 14 PRO, 256GB, DEEP PURPLE - UNLOCKED (RENEWED PREMIUM)

Model: A2650

### 1. INTRODUCTION

---

The Apple iPhone 14 Pro is a sophisticated smartphone designed to deliver a premium mobile experience. It features a stunning Pro Motion XDR Display with a smooth 120Hz refresh rate, powered by the efficient A15 Bionic Chip for robust performance. This device excels in photography and videography with its advanced camera system, including a 48MP main sensor, Ultra Wide, and Telephoto lenses, supporting ProRAW, Night mode, and 8K video recording. Connectivity is seamless with 5G capabilities, and MagSafe offers convenient charging and accessory integration. Built with a durable Ceramic Shield and enhanced Face ID, the iPhone 14 Pro combines cutting-edge technology with a commitment to eco-friendly practices through the use of recycled materials.



Figure 1.1: Apple iPhone 14 Pro in Deep Purple.

### 2. WHAT'S IN THE BOX

---

Upon unboxing your Apple iPhone 14 Pro, you should find the following items:

- Apple iPhone 14 Pro (Deep Purple, 256GB)
- Generic Charging Cable (Mfi certified)

 


Figure 2.1: iPhone 14 Pro and included charging cable in renewed packaging.

### 3. SETUP GUIDE

---

#### 3.1 Initial Power On

To power on your iPhone, press and hold the Side button until the Apple logo appears. Follow the on-screen instructions to select your language and region.

### 3.2 Network Connectivity

Connect to a Wi-Fi network during the setup process to activate your device and download necessary updates. The iPhone 14 Pro supports 5G cellular technology for fast mobile data. This model primarily uses eSIM technology for cellular service. Consult your carrier for eSIM activation details.

### 3.3 Face ID Setup

During setup, you will be prompted to configure Face ID for secure and convenient unlocking. Follow the prompts to scan your face.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Display and Interaction

The iPhone 14 Pro features a 6.1-inch Pro Motion XDR Display with a 120Hz refresh rate, providing smooth scrolling and responsive touch interaction. The display also incorporates the Dynamic Island, an adaptive area around the front camera that displays alerts, activities, and interactions.

### 4.2 Camera System

The advanced camera system includes a 48MP main sensor, Ultra Wide, and Telephoto lenses. It supports various modes such as ProRAW for professional-grade photo editing, Night mode for low-light photography, and 8K video recording. The camera system is designed for high-quality image and video capture.

 


Figure 4.1: Detailed view of the iPhone 14 Pro camera system.

### 4.3 Performance

Powered by the A15 Bionic Chip, the iPhone 14 Pro delivers lightning-fast performance and high energy efficiency for demanding applications and multitasking.

### 4.4 MagSafe

MagSafe technology allows for effortless wireless charging and easy attachment of MagSafe accessories.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your iPhone 14 Pro, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Battery Health:** For renewed premium devices, the battery is guaranteed to exceed 90% of original capacity. To preserve battery life, avoid extreme temperatures and excessive deep discharges.
- **Protection:** The Ceramic Shield front cover provides enhanced drop resistance. Consider using a protective case and screen protector for additional durability.

- **Software Updates:** Keep your iOS updated to the latest version to benefit from performance improvements, security patches, and new features.

## 6. TROUBLESHOOTING

---

If you encounter issues with your iPhone 14 Pro, try the following basic troubleshooting steps:

- **Restart:** A simple restart can resolve many minor software glitches. Press and hold the Side button and either volume button until the power off slider appears, then drag the slider.
- **Check for Updates:** Ensure your iOS is up to date. Go to Settings > General > Software Update.
- **Network Issues:** If experiencing connectivity problems, try toggling Wi-Fi or Cellular Data off and on. You can also reset network settings (Settings > General > Transfer or Reset iPhone > Reset > Reset Network Settings).
- **Factory Reset:** As a last resort, you can perform a factory reset (Settings > General > Transfer or Reset iPhone > Erase All Content and Settings). **Warning: This will erase all data on your device. Back up your iPhone before proceeding.**

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	Apple
Model Name	iPhone 14 Pro
Item Model Number	A2650
Operating System	iOS 16
Screen Size	6.1 Inches
Memory Storage Capacity	256 GB
RAM Memory Installed Size	8 GB
CPU Model	A-Series
CPU Speed	3.46 GHz
Main Camera	48 MP (from specifications)
Battery Power Rating	3600 Milliamp Hours
Wireless Carrier	Unlocked for All Carriers
Cellular Technology	5G
Connectivity Technologies	Wi-Fi
Special Features	Built-In GPS, Touchscreen
Color	Deep Purple
Product Dimensions	10 x 2 x 2.7 inches
Item Weight	14 ounces

Date First Available	March 15, 2023
----------------------	----------------

## 8. WARRANTY AND SUPPORT

---

Your Apple iPhone 14 Pro (Renewed Premium) comes with a 365-day refund/replacement policy, ensuring peace of mind with your purchase.

For more detailed information and comprehensive support, please refer to the official user guide available as a PDF document:

[Download User Manual  
\(PDF\)](#)