



Manuals.plus /

› Apple /

› Apple iPhone 14 Pro User Manual

Apple iPhone 14 Pro (A2650)

Apple iPhone 14 Pro User Manual

Model: iPhone 14 Pro (A2650) | Brand: Apple

PRODUCT OVERVIEW

The Apple iPhone 14 Pro offers cutting-edge technology with its Pro Motion XDR Display, providing vibrant colors and a smooth 120Hz refresh rate. It is powered by an A16 Bionic Chip, ensuring lightning-fast performance and efficiency. The advanced camera system, featuring a 108MP main sensor, Ultra Wide, and Telephoto lenses, allows for professional-grade photography and videography, including ProRAW, Night mode, and 8K video capabilities. Connectivity is enhanced with 5G support, and MagSafe provides effortless charging and accessory attachment. The device is built with a Ceramic Shield for improved drop resistance and features Face ID for secure authentication. This model is also designed with eco-friendly principles, utilizing recycled materials to reduce its carbon footprint.



Figure 1: Front and back view of the iPhone 14 Pro in Space Black.

SETUP

1. Initial Charging

Before first use, ensure your iPhone 14 Pro is adequately charged. Connect the provided generic charging cable to the iPhone's charging port and a compatible power adapter. For optimal charging, use a MagSafe compatible charger or a certified MFi (Made for iPhone) charging cable. The device is guaranteed to come with a battery exceeding 90% of its original capacity.

2. Powering On/Off

- To power on: Press and hold the Side button until the Apple logo appears.
- To power off: Simultaneously press and hold the Side button and either Volume button until the power off slider appears. Drag the slider to power off.

3. Initial Configuration

Upon first power-on, follow the on-screen instructions to set up your iPhone. This includes selecting your language and region, connecting to Wi-Fi, setting up Face ID for secure authentication, and restoring data from a backup or setting up as a new iPhone. This model supports e-SIM only; there is no physical SIM card slot.

OPERATING INSTRUCTIONS

1. Dynamic Island

The Dynamic Island is an interactive area at the top of your display that adapts in real-time to show important alerts, notifications, and activities. It can expand and contract to display information such as incoming calls, Face ID authentication, timer alerts, and more, allowing for seamless multitasking and quick access to relevant information.

2. Camera System

The iPhone 14 Pro features an advanced triple-camera system on the rear, including a 108MP main sensor, an Ultra Wide lens, and a Telephoto lens. These cameras support various modes such as ProRAW for professional photo editing, Night mode for low-light conditions, and 8K video recording. The front camera is also optimized for high-quality selfies and video calls.



Figure 2: Detailed view of the iPhone 14 Pro's advanced camera system.

3. Display and Performance

The 6.1-inch Super Retina XDR display with ProMotion technology offers an adaptive refresh rate up to 120Hz, providing incredibly smooth scrolling and responsiveness. The Always-On display feature keeps essential information visible without needing to tap the screen. Powered by the Apple A16 Bionic chip, the iPhone 14 Pro delivers exceptional speed and efficiency for all tasks, from gaming to professional applications.



Figure 3: Side profile of the iPhone 14 Pro, showcasing its design and camera array.

MAINTENANCE

1. Battery Health

To maintain optimal battery performance, avoid extreme temperatures and prolonged exposure to direct sunlight. For renewed devices, the battery health is guaranteed to be at least 90% of its original capacity. Regularly check battery health in Settings > Battery > Battery Health & Charging.

2. Cleaning Your Device

Use a soft, lint-free cloth to clean the iPhone's screen and body. Avoid abrasive materials or harsh cleaning agents. For stubborn smudges, slightly dampen the cloth with water. Do not submerge the device in liquid.

3. Software Updates

Regularly update your iPhone's iOS software to ensure you have the latest features, security enhancements, and bug fixes. Updates can be found in Settings > General > Software Update. Ensure your device is connected to Wi-Fi and has sufficient battery life before initiating an update.

TROUBLESHOOTING

This section addresses common issues you might encounter with your iPhone 14 Pro. For more detailed

troubleshooting, refer to the official user manual linked in the Support section.

1. Device Not Turning On

If your iPhone does not turn on, ensure it is charged. Connect it to a power source for at least 30 minutes. If it still doesn't turn on, perform a force restart: Quickly press and release the Volume Up button, then quickly press and release the Volume Down button, then press and hold the Side button until the Apple logo appears.

2. Software Glitches or Freezing

If applications are freezing or the device is unresponsive, try closing the problematic app and reopening it. If the issue persists, perform a force restart as described above. Ensure your iOS is up to date, as software updates often resolve such issues.

3. Carrier Connectivity Issues (e-SIM)

Since the iPhone 14 Pro uses e-SIM, ensure your carrier has properly activated your e-SIM profile. Check your cellular settings in Settings > Cellular. If issues persist, contact your mobile carrier's support for assistance with e-SIM activation or network problems.

SPECIFICATIONS

| Feature | Detail |
|---------------------------|---------------------------------|
| Product Dimensions | 0.31 x 2.81 x 5.81 inches |
| Item Weight | 13.7 ounces |
| Model Number | A2650 |
| Operating System | iOS 16 |
| Memory Storage Capacity | 128 GB |
| RAM Memory Installed Size | 8 GB |
| Screen Size | 6.1 Inches |
| Resolution | 1179 X 2556 |
| Refresh Rate | 120 Hz |
| CPU Model | Apple A16 Bionic |
| CPU Speed | 3.46 GHz |
| Color | Space Black |
| Battery Power Rating | 3200 Milliamp Hours |
| What's in the box | Apple iPhone and Charging Cable |

WARRANTY AND SUPPORT

1. Amazon Renewed Guarantee

This Apple iPhone 14 Pro (Renewed Premium) is backed by the Amazon Renewed Guarantee, offering a 1-year refund or replacement policy. This ensures that the device functions like new and has minimal cosmetic damage

not noticeable when held at arm's length.

2. Official User Manual

For comprehensive information, detailed instructions, and advanced features, please refer to the official user manual available in PDF format:

[Download Official User Manual \(PDF\)](#)

3. Additional Support

For further assistance, visit the [Amazon Renewed Store](#) or contact Amazon customer service.