

Missyou MS1

Missyou 3D Hologram Fan Projector User Manual

Brand: Missyou | **Model:** MS1

1. PRODUCT OVERVIEW

The Missyou 3D Hologram Fan Projector is an innovative holographic display device designed to create stunning 3D visual effects. Utilizing 128 high-brightness LED beads, it projects vibrant and lifelike animations that appear to float in mid-air. This device is ideal for various applications, including advertising, event displays, and exhibitions, offering an engaging visual experience.

The projector supports seamless content management via a user-friendly mobile application, compatible with both iOS and Android devices, allowing for easy video uploads and customization. It comes with a vast library of over 700 pre-loaded video materials to enhance your display options.



Figure 1.1: The Missyou 3D Hologram Fan Projector in operation, displaying a dynamic 3D dragon image.

2. SETUP GUIDE

2.1 Package Contents

Before beginning the setup, please ensure all components are present in the package:

- Missyou 3D Hologram Fan Projector Unit
- TF Card (MicroSD card)
- Power Adaptor
- User Manual (this document)

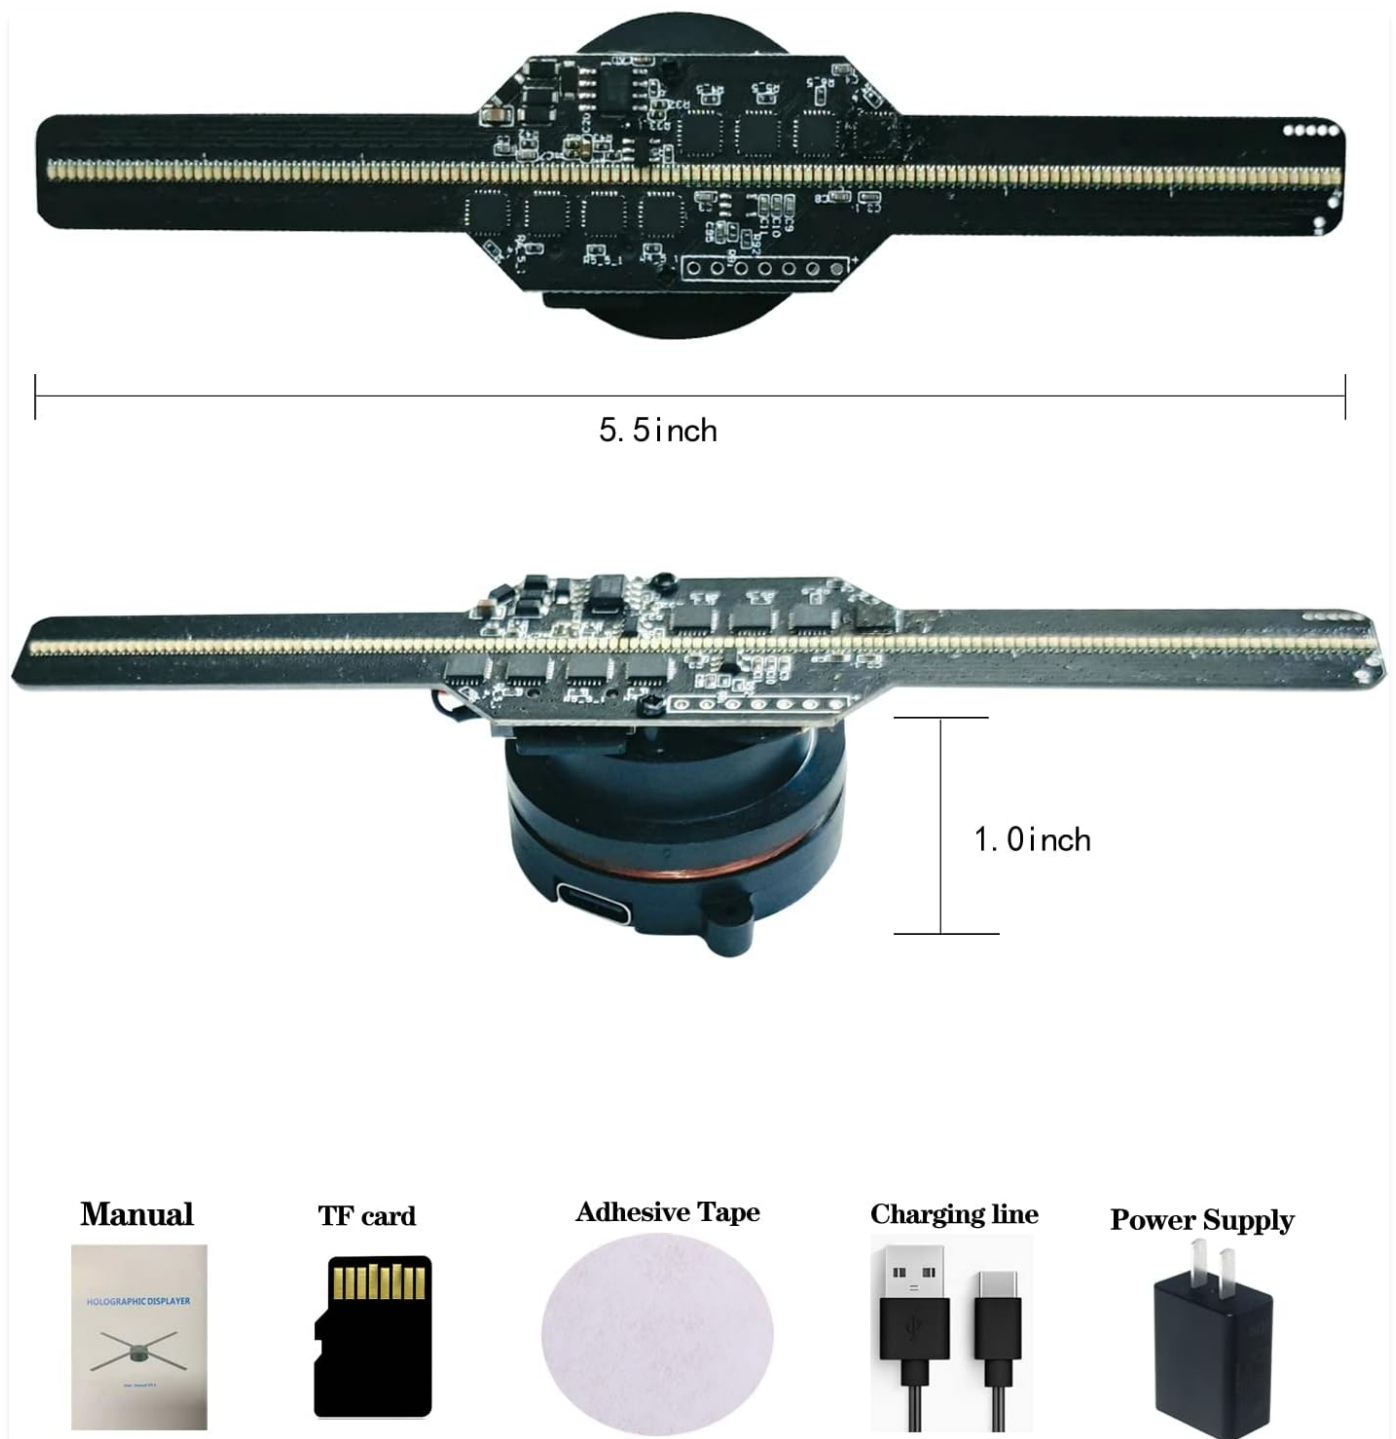


Figure 2.1: Included components: Manual, TF card, Adhesive Tape, Charging line, and Power Supply.

2.2 Initial Power-Up and Placement

1. **Insert TF Card:** Locate the TF card slot on the device base and gently insert the provided TF card until it clicks into place.
2. **Connect Power:** Connect the power adaptor to the Type-C charging port on the device and plug it into a standard electrical outlet. The device will power on automatically.
3. **Placement:** Position the projector in a location where its rotating blades will not be obstructed and where the holographic display can be viewed clearly. Ensure there is adequate space around the device for safe operation.

Support material format



Figure 2.2: Detailed view of the TF card slot and Type-C charging port on the projector base.

3. OPERATING INSTRUCTIONS

3.1 App Control and Wi-Fi Connection

The Missyou 3D Hologram Fan Projector is primarily controlled via a dedicated mobile application. This app allows for seamless content management and device settings adjustments.

1. **Download App:** Search for the official Missyou Hologram Fan app on your device's app store (iOS or Android).
2. **Connect via Wi-Fi:** Turn on the projector. On your smartphone or computer, go to Wi-Fi settings and connect to the projector's Wi-Fi network. The network name and password can typically be found in the quick start guide or on a sticker on the device.
3. **Launch App:** Open the Missyou app. The app should automatically detect and connect to your projector.



Figure 3.1: Mobile app interface demonstrating one-button control and Wi-Fi direct transmission for content upload.

3.2 Content Management

The app provides an intuitive interface for managing the holographic content displayed on the projector.

- **Upload Content:** Use the app to effortlessly upload new video or image files from your device to the projector. The app supports various formats for playback.
- **Change Display:** Easily switch between different video materials or create playlists for continuous playback.
- **Content Library:** Access the extensive library of over 700 pre-loaded video materials directly from the app to diversify your displays.

Mobile APP one-button control

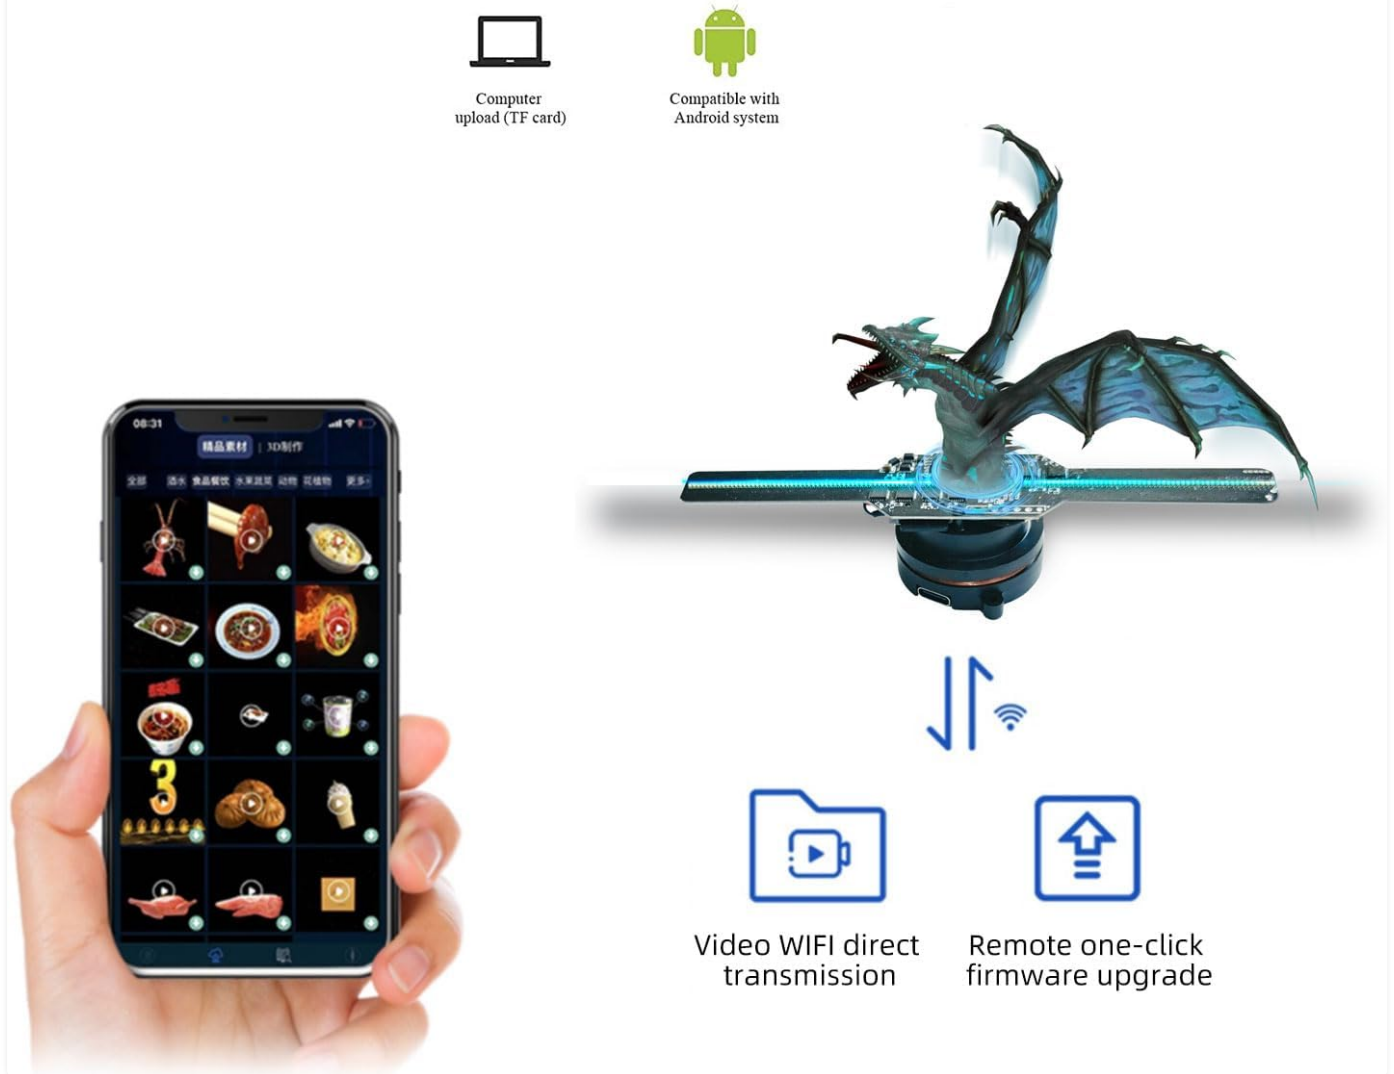


Figure 3.2: Supported media formats include AVI, PNG, JPG, MP4, MKV, GIF, and RMVB, with support for 450*224 Ultra HD playback.



Figure 3.3: The 700+ material library includes categories such as Planet, Animal, Drink, Building, Holiday, Science Fiction, Christmas, and Food materials.

3.3 Demonstrational Videos

The following videos demonstrate the operation and visual capabilities of the Missyou 3D Hologram Fan Projector:

Your browser does not support the video tag.

Video 3.1: A demonstration of the 14cm 3D hologram fan in action, showcasing its visual effects.

Your browser does not support the video tag.

Video 3.2: Another view of the MISSYOU 14cm 3D hologram fan, highlighting its display quality.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Missyou 3D Hologram Fan Projector, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the surface of the device and blades with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the LEDs or electronic components.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handle with Care:** Avoid dropping the device or subjecting it to strong impacts, which can damage the delicate internal mechanisms and LED blades.
- **Avoid Obstructions:** Ensure no objects interfere with the rotation of the fan blades during operation.

5. TROUBLESHOOTING

If you encounter issues with your Missyou 3D Hologram Fan Projector, please refer to the following common troubleshooting steps:

- **Device Not Powering On:**
 - Ensure the power adaptor is securely connected to both the device and a working electrical outlet.
 - Verify that the power outlet is functional by testing it with another device.
- **No Image Displayed / Abnormal Display:**
 - Check if the TF card is properly inserted.
 - Ensure the video or image files on the TF card are in a supported format (AVI, PNG, JPG, MP4, MKV, GIF, RMVB) and meet the recommended resolution (450*224 for Ultra HD playback).
 - Restart the device by unplugging and re-plugging the power cable.
- **App Connection Issues:**
 - Confirm your mobile device is connected to the projector's Wi-Fi network.
 - Ensure the projector is powered on and within range of your mobile device.
 - Try restarting both the projector and your mobile device.
 - Update the app to the latest version.
- **Fan Not Spinning:**
 - Check for any physical obstructions preventing the blades from rotating.
 - Ensure the device is receiving adequate power.

If these steps do not resolve the issue, please contact our professional support team for further assistance.

6. SPECIFICATIONS

Detailed technical specifications for the Missyou 3D Hologram Fan Projector:

- **Brand:** Missyou
- **Model Number:** MS1
- **Display Type:** LED Holographic Display
- **LED Beads:** 128 High-Brightness LED Beads
- **Display Resolution:** 1600*128
- **Product Dimensions:** 5.5 x 5.5 x 1.2 inches (approx. 14 x 14 x 3 cm)
- **Item Weight:** 2.11 ounces (approx. 60 grams)
- **Color:** Black
- **Connectivity Technology:** Wireless, Wi-Fi
- **Supported Media Formats:** AVI, PNG, JPG, MP4, MKV, GIF, RMVB
- **Special Features:** 3D Built-In, 3D-Ready
- **Country of Origin:** China
- **First Available Date:** March 26, 2023

7. WARRANTY AND SUPPORT

The Misseyou 3D Hologram Fan Projector comes with a **one-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For any questions, technical assistance, or warranty inquiries, our dedicated customer support team is available to help. You can reach us through the contact information provided on our official website or through the support section of the mobile application.

© 2024 Misseyou. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Is there an API available for the Misseyou MS1 3D Hologram Fan Projector?

Based on the available documentation for the Misseyou MS1 3D Hologram Fan Projector, there is no mention of a public API or developer documentation for direct integration. The device is designed to be controlled...
[Read full answer](#)