

[Manuals.plus](#) /

› [DarkWalker](#) /

› DarkWalker ShotPad Gaming Controller Instruction Manual

DarkWalker ShotPad

DarkWalker ShotPad Gaming Controller Instruction Manual

Model: ShotPad

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DarkWalker ShotPad Gaming Controller. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your gaming experience. The ShotPad combines traditional controller ergonomics with the precision of a mouse touchpad, designed for enhanced control in various gaming environments.

PACKAGE CONTENTS

Verify that all items are present in the package:

- DarkWalker ShotPad Gaming Controller
- USB Connection Cable
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your ShotPad controller.



Figure 1: Front view of the DarkWalker ShotPad Gaming Controller, showcasing the left joystick, D-pad, various buttons, and the large central touchpad.

Key Features:

- **Left Side:** Analog joystick for movement, D-pad, and various programmable buttons (e.g., Tab, Shift, Ctrl, Alt, Space, Esc, G, B, V, F).
- **Right Side:** Large touchpad for precise aiming, mouse wheel, and additional buttons (e.g., C, R, F, X, N, Z).
- **Shoulder Buttons:** Multiple shoulder buttons and triggers for various in-game actions.
- **Back Buttons:** Three programmable back buttons for quick access to functions.
- **Function (Fn) Key:** Expands the functionality of certain keys, allowing up to 42 key inputs.

OPTIMIZED BUTTONS LAYOUT TO FIT WITH GAMERS HAND.



*部分键值搭配Fn键触发

Figure 2: Illustration of the ShotPad's ergonomic design and humanized button layout, showing both front and back views for a comprehensive understanding of button placement.

FASTER AND MORE ACCURATE AIMING

Aim with touchpad instead of joystick. Destroy the enemy in the fastest, most comfortable and accurate way!

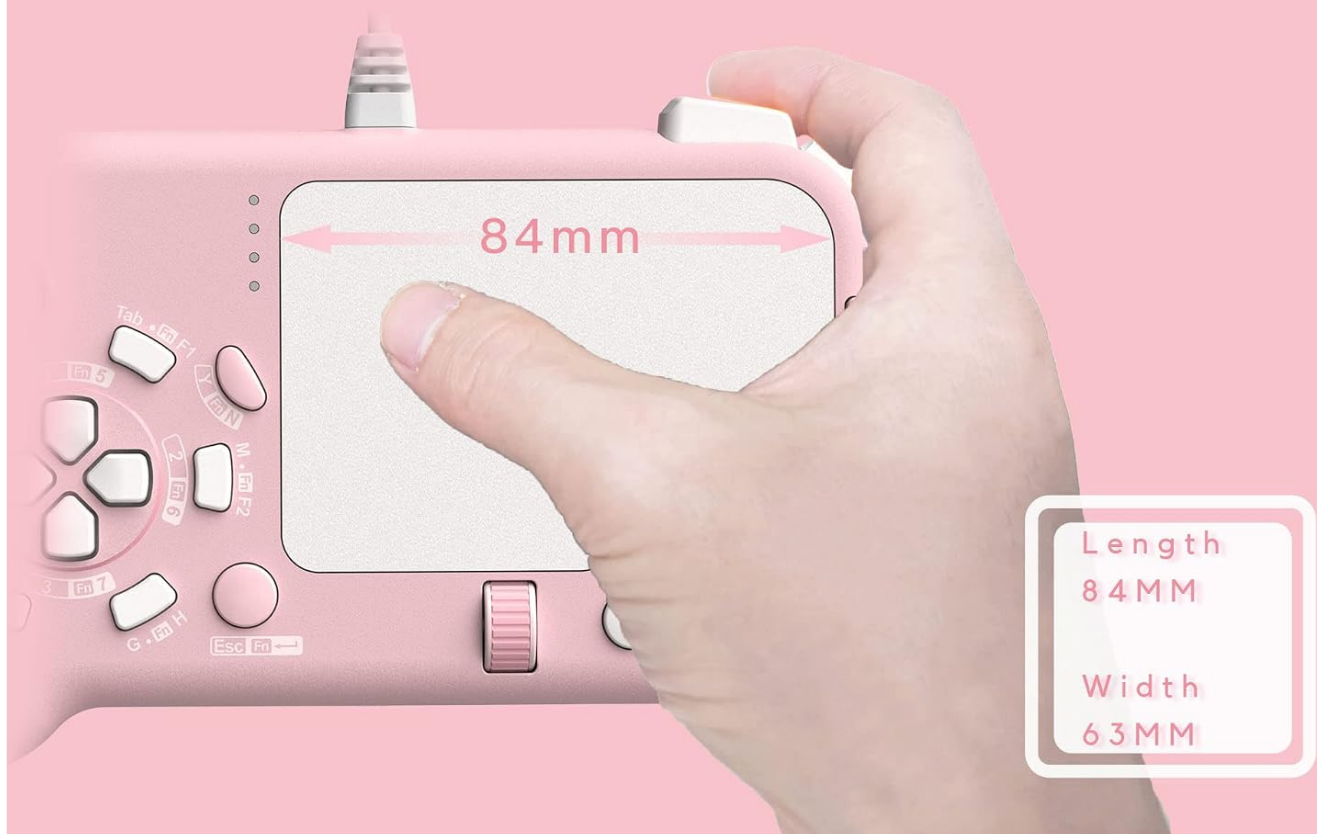


Figure 3: Close-up view of the three programmable back buttons located on the underside of the ShotPad, designed for easy access during gameplay.

SUPER LARGE TOUCH AREA

Super large touch area provides better play. Whether it is a close shot or long range shot. No deadzone. No drifting.



Figure 4: Detail of the integrated mouse wheel and the layout of keys that can be combined with the Function (Fn) key for expanded input options, such as number keys 5-8.

MICRO SWITCH. MOUSE CLICK FEEL

Use the micro switch provides mouse click feel. Short key travel. Fast response.



Figure 5: Demonstrates the large touch area of the ShotPad's touchpad, measuring 84mm in length and 63mm in width, providing ample space for precise aiming and control.

MULTI-PLATFORM SUPPORTED

Compatible with all PS4/PS5/Xbox One/Xbox Series/PC games that have keyboard&mouse support.



Figure 6: Illustrates the micro switch technology used in the ShotPad's buttons, providing a tactile mouse-click feel with short key travel and fast response times.

SETUP

Connecting to Your Device:

The DarkWalker ShotPad connects via a USB cable. It is recognized as a standard keyboard and mouse input device.

1. Connect one end of the USB cable to the ShotPad controller.
2. Connect the other end of the USB cable to an available USB port on your PC, PlayStation console (PS4/PS5), or Xbox console (Xbox One/Series).
3. The device should be automatically recognized by your system. No additional drivers are typically required for basic functionality.



Figure 7: The DarkWalker ShotPad connected via its USB cable, ready for use with various gaming platforms.

OPERATING INSTRUCTIONS

Basic Controls:

- **Left Joystick:** Controls character movement (e.g., WASD input).
- **Touchpad:** Functions as a mouse for aiming and camera control. Swipe across the surface to move the cursor.
- **Touchpad Click:** The touchpad itself can be clicked for an additional input (often Mouse 4).
- **Mouse Wheel:** Located on the right side, functions as a scroll wheel (e.g., weapon switching) and can be clicked (often Mouse 3).
- **Shoulder Buttons/Triggers:** Perform actions such as firing, aiming down sights, or other in-game commands.
- **Back Buttons:** These three buttons on the rear of the controller are programmable for custom functions. Refer to your game's settings for remapping options.

Advanced Functions (Fn Key):

The ShotPad features a Function (Fn) key to expand the number of available inputs. When the Fn key is held down, certain buttons will perform an alternative action.

- For example, holding Fn and pressing the '1' button might register as '5', '2' as '6', and so on, providing access to number keys 5-8.
- Consult the markings on your controller for specific Fn key combinations.

Customization:

Many games allow for in-game key remapping. It is recommended to customize button assignments within your game's settings to suit your playstyle. The ShotPad is recognized as a standard keyboard and mouse, allowing for flexible configuration.

COMPATIBILITY

The DarkWalker ShotPad is designed for broad compatibility with gaming platforms that support keyboard and mouse input.

- **PC:** Fully compatible with Windows PCs.
- **PlayStation:** Compatible with PS4 and PS5 consoles.
- **Xbox:** Compatible with Xbox One and Xbox Series X|S consoles.

Note: Game compatibility may vary. Ensure the game you intend to play supports keyboard and mouse input on your chosen platform.



Figure 8: The DarkWalker ShotPad demonstrating multi-platform support, including PC, PlayStation, and Xbox consoles.

MAINTENANCE

To ensure the longevity and optimal performance of your ShotPad controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the controller to liquids. Spills can cause internal damage.
- **Handle with Care:** Avoid dropping the controller or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your DarkWalker ShotPad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Controller not recognized by device.	Loose USB connection, faulty USB port, or system driver issue.	◦ Ensure the USB cable is securely connected to both the ShotPad and your device. ◦ Try a different USB port on your device. ◦ Restart your PC or console. ◦ Test the ShotPad on another compatible device if possible.
Touchpad aiming is inconsistent or imprecise.	Incorrect in-game sensitivity settings, dirty touchpad surface, or user adaptation period.	◦ Adjust the mouse sensitivity settings within your game. ◦ Clean the touchpad surface with a soft, dry cloth. ◦ Practice using the touchpad to develop muscle memory for precise movements. ◦ Consider using finger sleeves for improved glide and accuracy if desired.
Buttons are not responding or are incorrectly mapped.	In-game keybinding conflicts or specific game limitations.	◦ Check and reconfigure keybindings within your game's settings. ◦ Ensure you are not accidentally holding the Fn key if unexpected inputs occur. ◦ Verify that the game supports keyboard and mouse input for all desired actions.

SPECIFICATIONS

Feature	Detail
Model	ShotPad
Brand	DarkWalker
Connectivity	Wired (USB)
Input Type	Keyboard and Mouse Emulation
Touchpad Dimensions	84mm (Length) x 63mm (Width)
Key Travel (Micro Switch)	0.3mm
Button Lifespan	5,000,000+ service life (for micro switches)
Supported Platforms	PC, PS4, PS5, Xbox One, Xbox Series X S
ASIN	B0BYNCXZMQ

Feature	Detail
Manufacturer	FREE ONE Limited
Date First Available	March 16, 2023

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official DarkWalker website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question