

[Manuals.plus](#) /

> [le-idea](#) /

> le-idea IDEA13 Beginner RC Drone Instruction Manual

le-idea IDEA13

le-idea IDEA13 Beginner RC Drone Instruction Manual

Model: IDEA13

INTRODUCTION

This manual provides detailed instructions for the safe operation and maintenance of your le-idea IDEA13 RC Drone. The IDEA13 is designed for beginners, featuring durable EPP material, integrated propeller guards, and user-friendly flight modes. Please read this manual thoroughly before operating the drone.



Image: The IDEA13 drone constructed from EPP foam, emphasizing its lightweight and impact-resistant design for enhanced durability.

PACKAGE CONTENTS

Verify that all items listed below are present in your package. If any items are missing or damaged, please contact customer support.

- IDEA13 Drone x 1
- Remote Control x 1
- Charging Cable x 1
- Modular Battery x 2
- Spare Propellers x 4

- Instruction Manual x 1



Image: A visual representation of the IDEA13 drone's complete package contents, including the drone, remote control, two modular batteries, charging cable, spare propellers, and the instruction manual.

SETUP

1. Battery Charging and Installation

The IDEA13 drone comes with two modular Lithium-polymer batteries.

- Connect the charging cable to the battery and a USB power source (e.g., computer USB port, USB wall adapter).
- The charging indicator will show the charging status. Ensure batteries are fully charged before first use.
- To install, slide the charged modular battery into the designated compartment on the drone until it clicks securely into place.



Image: The IDEA13 drone with its modular batteries, demonstrating how to insert them into the drone's compartment for power.

2. Remote Control Setup

Insert 3 AAA batteries (not included) into the remote control. Ensure correct polarity.

3. Pairing the Drone and Remote

1. Place the drone on a flat, level surface.
2. Turn on the drone's power switch. The drone's LED lights will flash.
3. Turn on the remote control.
4. Push the left joystick up and then pull it down. The drone's LED lights will stop flashing and remain solid, indicating successful pairing.

OPERATING INSTRUCTIONS

Basic Flight Controls

- **One-Key Take-off/Landing:** Press the one-key take-off/landing button on the remote control to automatically launch or land the drone.
- **Altitude Hold:** The drone maintains its current altitude, simplifying flight control.



Image: The IDEA13 drone demonstrating its one-key take-off and landing capability, simplifying initial flight and descent.

Special Flight Modes

- **Headless Mode:** In Headless Mode, the drone's orientation is relative to the pilot, eliminating the need to adjust the drone's direction. Press the Headless Mode button to activate/deactivate.
- **3 Speed Modes:** The drone offers 3 adjustable speed settings (Low, Medium, High) to suit different skill levels and environments. Press the speed button to cycle through modes.
- **360° Flip:** To perform a 360° flip, fly the drone to a sufficient height, then press the flip button and move the right joystick in the desired flip direction.
- **One-Key Return:** Press the one-key return button, and the drone will attempt to fly back towards the take-off point. Note that this feature is an assistance tool and not a precise GPS return.



Image: Three IDEA13 drones depicted in flight, demonstrating the distinct visual differences between High, Medium, and Low speed modes.



Image: The IDEA13 drone executing a 360-degree flip, showcasing its acrobatic capability during flight.

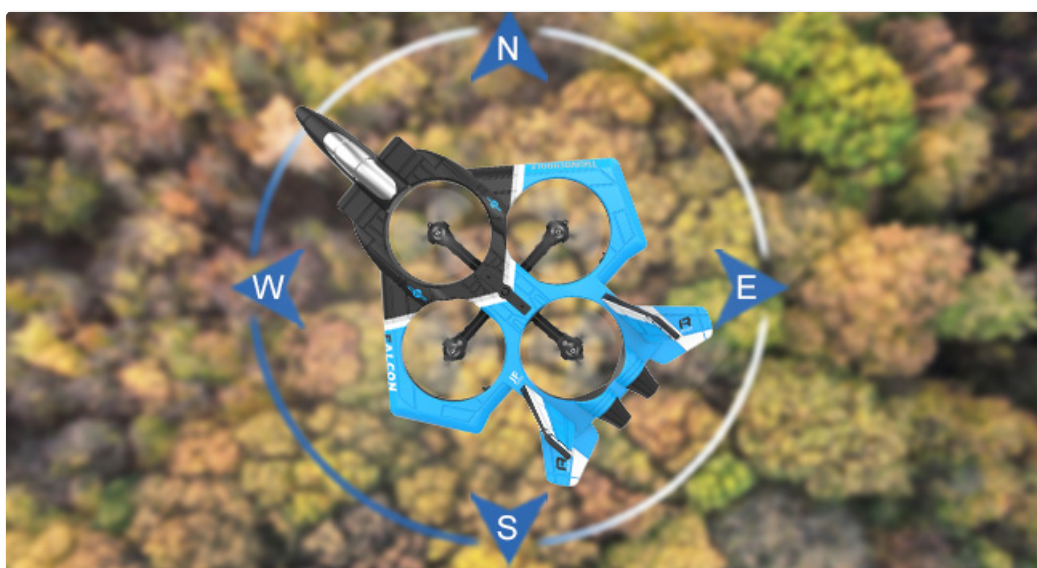


Image: The IDEA13 drone in flight with a compass graphic, illustrating the functionality of Headless Mode for simplified directional control.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the drone and remote control. Do not use water or solvents.
- **Propeller Replacement:** If propellers are damaged, replace them with the provided spare propellers. Ensure correct propeller (A or B) is installed on the corresponding motor.
- **Battery Care:** Store batteries in a cool, dry place. Do not overcharge or over-discharge. Remove batteries from the drone and remote if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drone does not respond to remote.	Not paired; low battery in drone or remote.	Re-pair the drone and remote; charge drone battery; replace remote batteries.
Drone flies erratically or drifts.	Not calibrated; damaged propeller.	Perform gyroscope calibration (refer to remote control instructions); replace damaged propellers.

Problem	Possible Cause	Solution
Short flight time.	Battery not fully charged; old battery.	Ensure battery is fully charged; consider replacing old batteries.
LED lights flashing continuously.	Drone not paired or low battery.	Pair the drone; charge the battery.

SPECIFICATIONS

Feature	Detail
Brand	le-idea
Model Name	IDEA13
Model Number	idea13-EU-0
Product Dimensions (L x W x H)	32.8 x 25 x 6.7 cm
Item Weight	100 Grams
Color	Blue
Batteries	2 Lithium-polymer (included)
Battery Capacity	500 mAh
Flight Time	Approx. 7 minutes per battery (14 minutes total with 2 batteries)
Charging Time	Approx. 2-3 hours per battery
Connectivity Technology	2.4 GHz (Remote Control)
Remote Control Included	Yes
Material	EPP Foam

WARRANTY AND SUPPORT

Warranty Information

le-idea provides a three-month product replacement service for non-human-induced damage. This warranty covers manufacturing defects and malfunctions under normal use.

Customer Support

If you encounter any issues with your IDEA13 drone or have questions regarding its use, please do not hesitate to contact our after-sales team. We are committed to providing personalized customer service. Contact information can typically be found on the product packaging or through your purchase platform.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BYNT98R3>

More documents and user manuals: <https://manuals.plus/>