

Joie H1901BALGN000

Joie Snacker 2 in 1 Highchair to Table Chair Instruction Manual

Model: H1901BALGN000 | Brand: Joie

INTRODUCTION

The Joie Snacker 2 in 1 Highchair to Table Chair is designed for versatility and convenience, suitable for children from 6 months up to 15 kg. This chair transitions seamlessly from a highchair to a table chair, adapting to your child's growth with its adjustable features. It offers 3 recline options, 5 height adjustments, and a 3-depth adjustable tray to ensure a perfect fit for various activities and stages.

Crafted for comfort and ease of use, it features a soft padded, wipeable, and stain-resistant seat cover. Its lightweight design and one-hand compact fold make storage and portability effortless. Safety is paramount, with a sturdy aluminum frame, non-skid foot pads, and a SoftTouch 5-point harness with a built-in T-bar tray.

IMPORTANT SAFETY INFORMATION

WARNING: Always ensure your child is securely fastened in the harness. Never leave your child unattended in the highchair.

- Always use the restraint system.
- Ensure the highchair is fully erected and all locking mechanisms are engaged before placing a child in it.
- Do not use the highchair if any part is broken, torn, or missing.
- Keep children away from the highchair during folding and unfolding to prevent injury.
- Do not place the highchair near open fires or other sources of strong heat.
- Do not use the highchair on an elevated surface.
- The highchair is intended for children able to sit up unaided and up to 15 kg (approximately 3 years).
- Always check the stability of the highchair before use.

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your Joie Snacker 2 in 1 Highchair:

- Main Frame (Aluminum with non-skid foot pads)
- Seat Unit (Padded, wipeable fabric)
- Tray (Removable, 3-depth adjustable, with cupholder)
- 5-Point Harness with T-bar
- Footrest (Stationary)
- Storage Basket
- Recline Adjustment Mechanism
- Height Adjustment Mechanism
- Folding Mechanism



Figure 1: Front view of the Joie Snacker 2 in 1 Highchair, showing the seat, tray, and frame.



Figure 2: Dimensions of the Joie Snacker 2 in 1 Highchair (98.8cm H x 78.8cm W x 56.8cm D).

SETUP AND ASSEMBLY

The Joie Snacker 2 in 1 Highchair is designed for quick and easy setup.

1. Unfolding the Highchair:

Place the folded highchair on a flat surface. Release the folding latch (if engaged). Gently pull the legs apart until the frame locks into place. Ensure all four legs are firmly on the ground and the chair is stable. Listen for a "click" sound indicating the frame is locked.

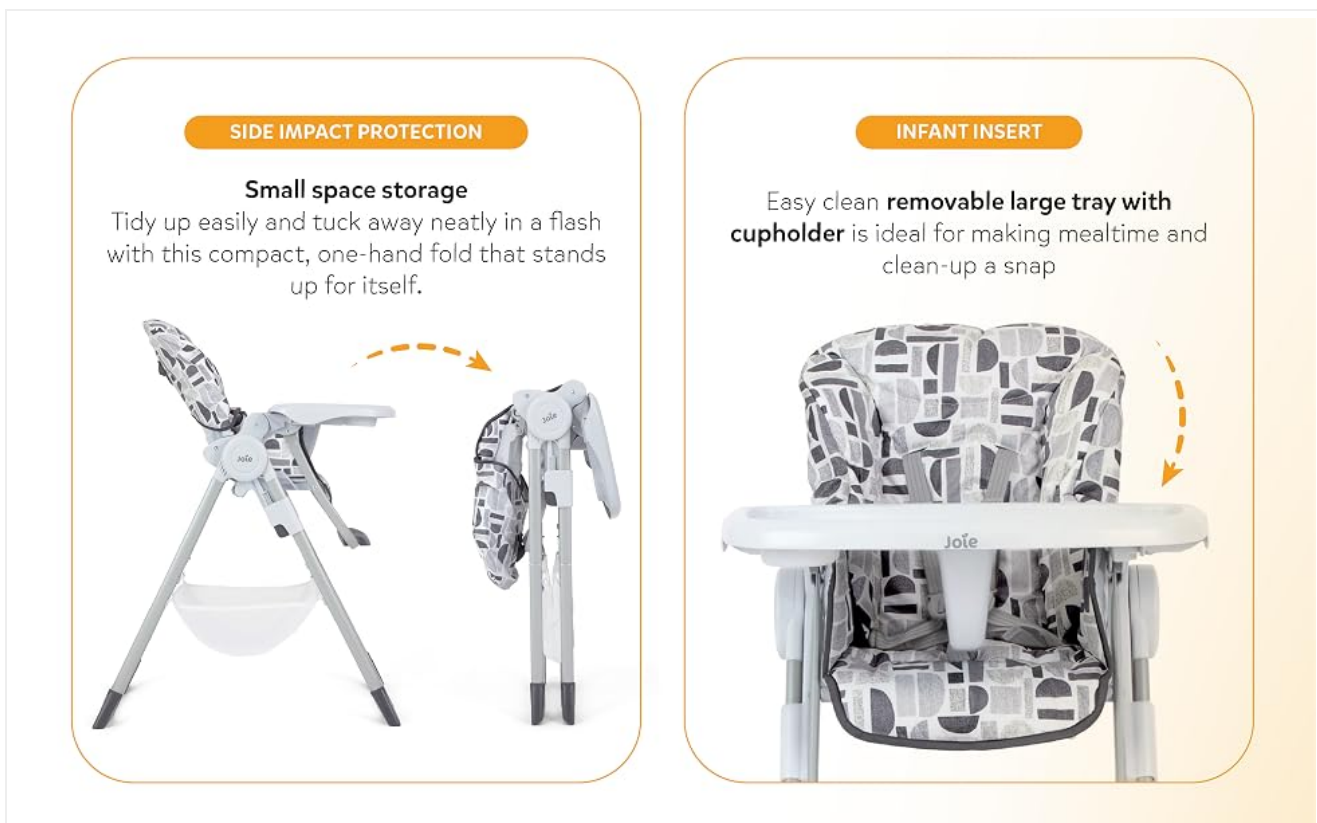


Figure 3: Visual representation of the compact one-hand fold mechanism.

2. Attaching the Tray:

Align the tray with the slots on the armrests. Push the tray firmly until it clicks into position. The tray has 3 depth adjustments; push the release buttons on the sides of the tray to slide it to the desired depth.

3. Checking the Harness:

Ensure the 5-point harness is correctly threaded through the seat pad and is not twisted. The T-bar is integrated with the tray for added security.

OPERATING INSTRUCTIONS

Adjusting Seat Recline

The highchair offers 3 recline positions for your child's comfort, whether they are eating, playing, or resting.

- Locate the recline adjustment lever, typically at the back of the seat.
- Press the lever and gently push or pull the seat to the desired recline position.
- Release the lever and ensure the seat is securely locked in place before use.

Adjusting Highchair Height

The highchair features 5 height adjustments to match various table heights or for comfortable feeding.

- Locate the height adjustment buttons on the side of the frame.
- Press the buttons simultaneously and slide the seat unit up or down to the desired height.
- Release the buttons and ensure the seat unit is securely locked in place.



Figure 4: The 5 height positions allow for easy adjustment to fit various table heights.

Using the Tray

The large tray with a cupholder is removable and has 3 depth adjustments.

- **To Attach:** Slide the tray onto the armrests until it clicks.
- **To Adjust Depth:** Press the release buttons on both sides of the tray and slide it forward or backward.
- **To Remove:** Press the release buttons on both sides of the tray and pull it away from the highchair.

Securing Your Child with the Harness

Always use the SoftTouch 5-point harness to secure your child.

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.
3. Insert the buckle tongues into the buckle housing until they click.
4. Adjust the straps to ensure a snug but comfortable fit.

Folding for Storage

The highchair features a convenient one-hand compact fold for easy storage.

- Remove the tray.
- Locate the folding mechanism (usually a button or lever on the frame).
- Engage the mechanism and push the seat forward while bringing the legs together.
- Ensure the highchair is fully folded and stands upright for compact storage.



Figure 5: The highchair in its compact folded state, ideal for storage.

CARE AND MAINTENANCE

- **Seat Pad:** The soft padded seat cover is wipeable and stain-resistant. For cleaning, wipe with a damp cloth and mild soap. Drip dry the washed seat pad. **DO NOT put in dryer.**
- **Tray:** The tray can be wiped clean with a damp cloth or washed with warm soapy water.
- **Frame:** Wipe the aluminum frame and plastic components with a damp cloth. Do not use abrasive cleaners.
- **Storage Basket:** The storage basket can be removed and hand-washed if necessary.
- **General:** Regularly check all parts for wear and tear, loose fasteners, or damaged stitching. Replace worn parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Highchair does not fold smoothly.	Folding mechanism might be stiff or obstructed.	Ensure the tray is removed. Check for any obstructions. Apply a small amount of silicone spray to moving parts if necessary (avoid contact with fabric).
Tray is difficult to attach or remove.	Release buttons not fully pressed, or alignment issues.	Ensure both release buttons are fully depressed. Align the tray carefully with the slots before pushing/pulling.
Seat recline or height adjustment is stuck.	Mechanism might be jammed or not fully disengaged.	Ensure the adjustment lever/buttons are fully pressed. Wiggle the seat gently while adjusting. Do not force.
Harness is difficult to buckle/unbuckle.	Buckle tongues or housing might be dirty or misaligned.	Clean the buckle components. Ensure the tongues are inserted straight into the housing.

SPECIFICATIONS

- **Model Number:** H1901BALGN000
- **Suitable Age:** 6 months - 3 years
- **Maximum Weight Recommendation:** 15 kg
- **Product Dimensions (Open):** 56.8 cm (W) x 78.8 cm (D) x 91.5-98.8 cm (H)
- **Product Dimensions (Folded):** 56.8 cm (W) x 38 cm (D) x 87.5 cm (H)
- **Item Weight:** 6.9 kg
- **Material:** Foam, Aluminum, Plastic, Metal (Seat pad: Metal, Polyester)
- **Recline Options:** 3 positions
- **Height Adjustments:** 5 positions
- **Tray Adjustments:** 3 depth positions
- **Harness:** SoftTouch 5-point harness with T-bar
- **Portability:** Yes, with one-hand compact fold
- **Assembly Required:** Yes (minimal)

WARRANTY AND SUPPORT

Your Joie Snacker 2 in 1 Highchair comes with a **24 Months Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For any questions, concerns, or to report a defect, please contact Joie customer support. You can find contact information on the official Joie website or through your retailer.

Joie Official Website: www.joiebaby.com (Please note: This is a general link and may not be specific to your region. Refer to your product packaging or local retailer for specific support contacts.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question