

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ENCHEN](#) /

› [ENCHEN X7 Shaver User Manual](#)

## ENCHEN X7

# ENCHEN X7 Shaver User Manual

Model: X7

## 1. INTRODUCTION

---

Thank you for choosing the ENCHEN X7 Shaver. This manual provides essential information for the safe and effective use, maintenance, and care of your new electric shaver. Please read these instructions thoroughly before first use and retain them for future reference.

### 1.1 Safety Information

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the shaver in water or use it in the shower if it is not explicitly stated as waterproof. Refer to the specifications for water resistance.
- Keep the charging cable away from heated surfaces.
- Do not use the shaver if the blades or foil are damaged, as this may cause injury.
- Only use the charger supplied with the appliance.
- Unplug the shaver before cleaning.

## 2. PRODUCT OVERVIEW

---

The ENCHEN X7 Shaver is designed for efficient and comfortable shaving. It features a sleek design and rotary blade system.



Image 1: Front view of the ENCHEN X7 Shaver, showcasing its ergonomic body and rotary shaving head.

## 2.1 Components

- **Rotary Shaving Head:** Equipped with three independent floating blades for a close shave.
- **Power Button:** Located on the front for easy operation.
- **Shaver Body:** Ergonomically designed for comfortable grip.
- **Charging Port:** USB-C port located at the bottom for convenient charging.



Image 2: Close-up view of the three rotary shaving blades, designed for flexible contour following.



Image 3: Bottom view of the shaver, highlighting the USB-C charging port for universal compatibility.

## 3. SETUP

---

### 3.1 Charging the Shaver

1. Ensure the shaver is turned off before charging.
2. Insert the USB-C end of the charging cable into the charging port at the bottom of the shaver.
3. Connect the USB-A end of the cable to a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate to show that the shaver is charging.
5. A full charge typically takes approximately 1.5 to 2 hours. The indicator light will change or turn off once charging is complete.

**Note:** For optimal battery life, it is recommended to fully charge the shaver before its first use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

- To turn on the shaver, press the power button once.
- To turn off the shaver, press the power button again.

## 4.2 Shaving Technique

1. Ensure your face is clean and dry for a dry shave, or apply shaving foam/gel for a wet shave (if the model is waterproof).
2. Hold the shaver at a right angle to your skin.
3. Move the shaver in small, circular motions against the direction of hair growth.
4. Apply gentle pressure; excessive pressure is not necessary and may cause irritation.
5. Stretch your skin with your free hand to help lift hairs and achieve a closer shave, especially in difficult areas like the neck.
6. After shaving, turn off the shaver and clean it as described in the Maintenance section.

## 5. MAINTENANCE

---

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your ENCHEN X7 Shaver.

### 5.1 Cleaning the Shaver Head

1. Turn off the shaver and unplug it from any charging source.
2. Gently twist or press the release button (if present) to open the shaving head assembly.
3. Tap out any accumulated hair clippings.
4. Use the small cleaning brush (if included) to remove fine hair particles from the blades and inner chamber.
5. If the shaver is waterproof, you may rinse the shaving head under running water. Ensure the shaver is completely dry before reassembling or charging.
6. Close the shaving head assembly securely.

### 5.2 Blade Replacement

The shaving blades are precision components that can wear down over time. For best shaving results, it is recommended to replace the shaving head assembly every 12-18 months, depending on usage. Replacement parts can be purchased from authorized ENCHEN retailers.

## 6. TROUBLESHOOTING

---

If you encounter issues with your ENCHEN X7 Shaver, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.

Problem	Possible Cause	Solution
Poor shaving performance.	Blades are dull or clogged with hair.	Clean the shaving head thoroughly. Consider replacing the shaving head if performance does not improve.
Shaver makes unusual noise.	Hair or debris caught in the motor/blades.	Clean the shaving head. If the noise persists, contact customer support.
Charging indicator not working.	Faulty cable or power adapter.	Try a different USB-C cable and power adapter. Ensure connections are secure.

## 7. SPECIFICATIONS


Feature	Detail
Model Number	ENCHEN X7
Brand	ENCHEN
Dimensions (L x W x H)	13.6 x 6 x 3 cm
Weight	1 kilogram (approximate)
Charging Port	USB-C
Shaving System	3D Floating Rotary Blades

## 8. WARRANTY AND SUPPORT

The ENCHEN X7 Shaver comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact ENCHEN customer service through the contact information provided on the product packaging or the official ENCHEN website.

### Related Documents - X7

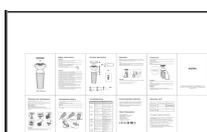

#### [ENCHEN X7 Electric Shaver User Manual: Operation, Cleaning, and Troubleshooting](#)

Comprehensive guide for the ENCHEN X7 Electric Shaver, detailing safety instructions, usage, maintenance, troubleshooting tips, and warranty information. Learn how to effectively use and care for your ENCHEN X7 shaver.

	<p><a href="#">ENCHEN Blackstone 3 Rotary Shaver User Manual</a></p> <p>Comprehensive user manual for the ENCHEN Blackstone 3 Rotary Shaver, covering important precautions, product description, usage instructions, display content, cleaning and maintenance, troubleshooting, and product parameters.</p>
	<p><a href="#">ENCHEN Beardo 2 Trimmer User Manual and Instructions</a></p> <p>Official user manual for the ENCHEN Beardo 2 trimmer, providing detailed instructions on operation, charging, cleaning, maintenance, safety precautions, and specifications. Learn how to use and care for your grooming tool.</p>
	<p><a href="#">ENCHEN Mint 3 Portable Water Flosser User Manual</a></p> <p>Comprehensive user manual for the ENCHEN Mint 3 Portable Water Flosser, covering product introduction, usage instructions, important safety notes, care and maintenance, warranty information, and troubleshooting.</p>
	<p><a href="#">Maszynka do strzyżenia Enchen Boost 2 (czarny) - Specyfikacja Techniczna</a></p> <p>Szczegółowy opis i specyfikacja techniczna maszynki do strzyżenia Enchen Boost 2 w kolorze czarnym. Poznaj kluczowe cechy, parametry techniczne, zasilanie, czas pracy i wyposażenie.</p>
	<p><a href="#">ENCHEN X7 Electric Shaver User Manual: Operation, Cleaning, and Troubleshooting</a></p> <p>Comprehensive guide for the ENCHEN X7 Electric Shaver, detailing safety instructions, usage, maintenance, troubleshooting tips, and warranty information. Learn how to effectively use and care for your ENCHEN X7 shaver.</p>