

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ENCHEN](#) /

› [ENCHEN Aurora T3 Sonic Toothbrush User Manual](#)

ENCHEN Aurora T3

ENCHEN Aurora T3 Sonic Toothbrush User Manual

Model: Aurora T3

1. INTRODUCTION

Thank you for choosing the ENCHEN Aurora T3 Sonic Toothbrush. This manual provides essential information for the safe and effective use of your new sonic toothbrush. Please read these instructions carefully before first use and keep them for future reference. Proper use will help you achieve optimal oral hygiene and extend the life of your device.

2. IMPORTANT SAFETY INFORMATION

- Do not use this product for any purpose other than oral cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the charging base away from water. Do not immerse the handle, charging base, or power adapter in water or other liquids.
- If the product is damaged in any way (brush head, handle, charging base), discontinue use immediately and contact customer support.
- Do not attempt to modify or repair the product yourself.
- Consult your dentist before using this product if you have had oral surgery or gum disease in the past two months.
- Replace brush heads every 3 months or sooner if the bristles become splayed or worn.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- ENCHEN Aurora T3 Sonic Toothbrush Handle
- Standard Brush Head (1 or 2, depending on package)
- USB Charging Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your ENCHEN Aurora T3 Sonic Toothbrush:

1. **Brush Head:** Replaceable head with bristles for cleaning.
2. **Power Button/Mode Selector:** Turns the device on/off and cycles through brushing modes.
3. **Mode Indicator Lights:** Display the currently selected brushing mode.
4. **Charging Indicator Light:** Shows battery status and charging progress.
5. **Handle:** Ergonomic grip for comfortable use.
6. **Charging Port:** Located at the bottom of the handle for USB charging.



Figure 2: Components of the ENCHEN Aurora T3 Sonic Toothbrush.

5. CHARGING YOUR TOOTHBRUSH

Before first use, fully charge your toothbrush for approximately 4-6 hours. A full charge typically provides several weeks of regular use.

1. Ensure the toothbrush handle is dry before charging.
2. Insert the small end of the USB charging cable into the charging port at the bottom of the toothbrush handle.
3. Connect the larger end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate to show charging is in progress. It will change color or turn off when fully charged. Refer to the specific light behavior in your product's quick start guide if available.



Figure 3: Connecting the ENCHEN Aurora T3 to its USB charging cable.

6. INITIAL SETUP

1. **Attach Brush Head:** Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached.
2. **Wet Bristles:** Wet the bristles of the brush head and apply a small amount of toothpaste.



Figure 4: Attaching the brush head to the ENCHEN Aurora T3 handle.

7. OPERATING INSTRUCTIONS

7.1 Power On/Off and Mode Selection

- **Power On:** Press the Power Button once to turn on the toothbrush. It will start in the last used mode or a default mode.
- **Change Mode:** While the toothbrush is on, press the Power Button repeatedly to cycle through the available brushing modes (e.g., Clean, White, Sensitive, Polish, Massage). The corresponding indicator light will illuminate.
- **Power Off:** Press and hold the Power Button for 2-3 seconds to turn off the toothbrush. Alternatively, if left in one mode for more than 5 seconds, a single press will turn it off.

7.2 Brushing Technique

For optimal cleaning, follow these steps:

1. Place the brush head against your teeth at a slight angle towards the gumline.
2. Gently move the brush head slowly from tooth to tooth, allowing the sonic vibrations to do the work. Do not scrub vigorously.
3. Brush each quadrant of your mouth (upper right, upper left, lower right, lower left) for 30 seconds. The toothbrush may have a built-in timer that pauses briefly every 30 seconds to signal you to move to the next quadrant, and automatically shuts off after 2 minutes.
4. Brush all surfaces of your teeth: outer, inner, and chewing surfaces.
5. After brushing, rinse your mouth and the brush head thoroughly.



Figure 5: Recommended brushing technique.

8. MAINTENANCE AND CLEANING

8.1 Cleaning the Brush Head

- After each use, rinse the brush head thoroughly under running water.
- Remove the brush head from the handle periodically and rinse both parts separately to remove any toothpaste residue.

8.2 Cleaning the Handle

- Wipe the handle with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Ensure the charging port cover is securely closed if present, to prevent water ingress.

8.3 Storage

- Store the toothbrush in a dry place, away from direct sunlight.
- Ensure the brush head is dry before storing to prevent bacterial growth.

8.4 Replacing the Brush Head

Dentists recommend replacing your brush head every 3 months, or sooner if the bristles are splayed or worn. To replace, simply pull the old brush head off the handle and push a new one on until it clicks.



Figure 6: Replacing the brush head.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Charge the toothbrush fully.
Vibrations are weak.	Low battery. / Brush head is worn.	Charge the toothbrush. / Replace the brush head.
Toothbrush stops during use.	Battery is depleted. / Automatic timer shut-off.	Charge the toothbrush. / This is normal operation for the 2-minute timer.
Water or toothpaste residue accumulates around the brush head base.	Insufficient cleaning.	Remove the brush head and rinse both the head and the top of the handle thoroughly after each use.

10. SPECIFICATIONS

Model:	Aurora T3
Brand:	ENCHEN
Dimensions (L x W x H):	2.6 x 2.6 x 25 cm (26 x 26 x 250 mm)
Weight:	Approximately 1 kg
Power Source:	Rechargeable via USB
Target Audience:	Unisex-Adults

Note: Specifications are subject to change without notice.

11. WARRANTY AND SUPPORT

The ENCHEN Aurora T3 Sonic Toothbrush comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official ENCHEN website. If you encounter any issues or require technical assistance, please contact ENCHEN customer support through their official channels or the retailer from whom you purchased the product.

For further assistance, please visit: www.enchen.com



© 2023 ENCHEN. All rights reserved.

This manual is for informational purposes only. ENCHEN is not responsible for any direct or indirect damages resulting from the use of this product.