

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EVOCHEF](#) /

› [EVOCHEF EC Flip Automatic Dosa Maker Instruction Manual](#)

## EVOCHEF EC Flip

# EVOCHEF EC Flip Automatic Dosa Maker Instruction Manual

MODEL: EC FLIP

## 1. Introduction and Overview

---

Thank you for choosing the EVOCHEF EC Flip Automatic Dosa Maker. This appliance is designed to simplify dosa preparation, offering convenience and consistent results. Please read this manual thoroughly before operating the device to ensure safe and efficient use. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.

Your browser does not support the video tag.

Video: Overview of the EVOCHEF EC Flip Automatic Dosa Maker's features and operation.

## 2. Important Safety Instructions

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface during operation.

- The appliance features an automatic safety cut-off after 3 minutes of idle time.

### 3. Product Components

---

Familiarize yourself with the main components of your EVOCHEF EC Flip Dosa Maker:

- **Main Unit:** Houses the heating elements and control panel.
- **360° Food-Grade Coated Roller:** The non-stick surface where the dosa is cooked.
- **Detachable Batter Tank:** Holds up to 700ml of batter.
- **Control Panel:** Features touch controls for cooking time, thickness, and power.
- **Dosa Collecting Tray:** Catches the cooked dosa.
- **Batter Separators:** Optional inserts for making multiple flavored dosas.



Image: The EVOCHEF EC Flip Automatic Dosa Maker, showcasing its compact design.



Image: Internal view of the dosa maker, highlighting the 360° food-grade coated roller and the detachable batter tank.

700 ml Detachable  
Batter Tank



Food-grade Certified  
Cooking Roller



**A4**  
Size Dosa

Image: A close-up of the EC Touch Controls, showing options for cooking time, dosa count, and thickness control.

## 4. Setup Instructions

---

Follow these steps to set up your Dosa Maker for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the detachable batter tank, batter separators, collecting tray, and blade with mild soap and water. Wipe the main unit and roller with a damp cloth. Ensure all parts are dry before assembly.
3. **Assemble:** Insert the clean batter tank and collecting tray into their designated slots. Ensure the blade is correctly positioned.
4. **Place:** Position the Dosa Maker on a stable, flat, and heat-resistant surface.
5. **Connect Power:** Plug the power cord into a suitable 220V electrical outlet.
6. **Prepare Batter:** Ensure your dosa batter has a smooth, pourable consistency.
7. **Load Batter:** Pour the prepared dosa batter into the detachable batter tank. Do not exceed the 'MAX' fill line. If making multiple flavors, use the batter separators.

Your browser does not support the video tag.

Video: A quick demonstration of loading batter and preparing the Dosa Maker for use.

## 5. Operating Instructions

---

Operating the EVOCHEF EC Flip is straightforward:

1. **Power On:** Press the power button on the control panel. The indicator light will illuminate.
2. **Select Cooking Time:** Use the 'Cooking Time' touch control to adjust the desired cooking duration (e.g., 60-110 seconds).
3. **Adjust Thickness:** Use the 'Thickness' touch control to select your preferred dosa thickness.
4. **Start Cooking:** Press the 'Rotate & Press' button to begin the dosa making process. The roller will rotate, spreading the batter evenly.
5. **Dosa Ready:** Once cooked, the dosa will automatically detach and fall into the collecting tray.
6. **Repeat:** To make more dosas, simply press the 'Rotate & Press' button again.



Image: A dosa cooking on the 360° food-grade coated roller, showing the even spread of batter.

## As easy as **Load Click Eat**

**Load** the tank  
with batter



**Click** and set the  
desired thickness



**Eat** and savour  
authentic, crispy dosas



Image: A perfectly cooked dosa, ready to be served, demonstrating the appliance's output.

## 6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your Dosa Maker:

1. **Power Off and Unplug:** Always turn off the appliance and unplug it from the power outlet before cleaning.
2. **Cool Down:** Allow the appliance to cool completely before handling any parts.
3. **Remove Detachable Parts:** Carefully remove the batter tank, batter separators, collecting tray, and blade.
4. **Wash Detachable Parts:** Wash these parts with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
5. **Clean Roller:** Wipe the 360° food-grade coated roller with a soft, damp cloth. For stubborn residue, use a non-abrasive sponge. Do not use harsh chemicals or abrasive cleaners.
6. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
7. **Reassemble:** Once all parts are clean and dry, reassemble them into the main unit.



Image: Detachable components of the Dosa Maker, illustrating ease of cleaning.

Your browser does not support the video tag.

Video: Demonstration of disassembling and cleaning the detachable parts of the Dosa Maker.

## 7. Troubleshooting

Refer to this table for common issues and their solutions:

Problem	Possible Cause	Solution
Dosa not cooking evenly	Batter consistency is too thick or too thin; roller not clean.	Adjust batter consistency. Ensure the roller is clean and free of residue.
Dosa sticking to the roller	Roller not properly seasoned or cleaned; incorrect cooking time/temperature.	Ensure the roller is clean. Adjust cooking time or thickness settings.
Appliance not turning on	Power cord not properly plugged in; power outage.	Check power connection. Ensure the outlet is functional.
Dosa too thick/thin	Incorrect thickness setting selected.	Adjust the thickness control on the panel.

## 8. Specifications

Key technical specifications for the EVOCHEF EC Flip Automatic Dosa Maker:

Feature	Detail
Brand	EVOCHEF
Model Number	EC Flip
Wattage	1600 Watts
Voltage	220 Volts
Item Weight	6 Kilograms

Feature	Detail
Material	Stainless Steel
Special Feature	Lightweight
Number of Settings	2 (Cooking Time, Thickness)
Country of Origin	India

## 9. Warranty and Support

---

The EVOCHEF EC Flip Automatic Dosa Maker comes with a **1-year limited warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt as proof of warranty.

For technical support, service, or warranty claims, please contact EVOCHEF customer service. Refer to the contact information provided with your product packaging or visit the official EVOCHEF website for assistance.

Do not attempt to repair the appliance yourself. Unauthorized repairs will void the warranty.