

AEG LR8E75490

AEG Series 8000 LR8E75490 WiFi Washing Machine User Manual

Model: LR8E75490

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AEG Series 8000 LR8E75490 WiFi Washing Machine. Please read these instructions carefully before using the appliance for the first time and keep them for future reference.

Key Features:

- **PowerCare Technology:** Effectively mixes detergent and fabric softener with water, distributing them evenly for superior cleaning results, even at 30°C in less than 1 hour.
- **My AEG Care App:** Allows remote control of the machine and assists in selecting appropriate programs for various textiles and stains. Monitor wash progress directly from your smartphone.
- **Universal Drawer:** Designed to dissolve detergent pods and caps 60% faster than traditional methods, enhancing cleaning performance in short and low-temperature programs.
- **ProSteam Function:** Refreshes clothes in just 25 minutes, neutralizing odors and reducing wrinkles with minimal water consumption (approx. 2 liters).
- **Hygiene Program:** A Swisstatest certified program combining wash and steam cycles at over 60°C to remove over 99.99% of bacteria and viruses, also reducing allergens.



Image showing the front view of the AEG Series 8000 LR8E75490 WiFi Washing Machine, highlighting its modern design and control panel.

2. SAFETY INFORMATION

For your safety and to ensure correct use, always observe the following precautions:

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Keep pets away from the appliance.
- Do not open the detergent dispenser or door during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not install the appliance in areas where the temperature may fall below 0°C.
- Use only detergents and additives suitable for automatic washing machines.
- In case of malfunction, switch off the appliance and disconnect it from the power supply. Do not attempt to repair it yourself. Contact authorized service personnel.

3. SETUP AND INSTALLATION

Unpacking:

Carefully remove all packaging materials and transport bolts before installation. Keep packaging materials out of reach of children.

What's in the Box:

- AEG Series 8000 LR8E75490 WiFi Washing Machine
- Drain hose
- Inlet hose
- User Manual (this document)

Placement:

Install the washing machine on a firm, level floor. Adjust the feet to ensure stability and prevent vibrations during operation. Ensure adequate ventilation around the appliance.

Water Connection:

1. Connect the supplied inlet hose to the cold water tap and to the water inlet valve on the back of the machine.
2. Ensure all connections are tight to prevent leaks.

Drain Connection:

1. Securely attach the drain hose to a standpipe or over the edge of a sink, ensuring it is not kinked or submerged in water.
2. The drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

Electrical Connection:

Plug the power cord into a properly earthed electrical outlet. Ensure the voltage matches the specifications of the appliance (230 Volts).

4. OPERATING INSTRUCTIONS

Control Panel Overview:

The control panel features a program selector dial, a display screen, and various touch buttons for options such as temperature, spin speed, delay start, and special functions.

Loading Laundry:

Open the door and load laundry into the drum. Do not overload the machine; refer to program guidelines for maximum load capacity (9 kg).

Adding Detergent and Additives:

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. For pods or caps, place them directly into the Universal Drawer.

Program Selection:

Turn the program selector dial to choose the desired wash program. The display will show the default temperature, spin speed, and program duration. Adjust these settings using the corresponding buttons if needed.

Using Special Functions:

- **PowerCare:** This technology is integrated into many programs to optimize detergent mixing.
- **ProSteam:** Select a steam program for refreshing clothes or reducing wrinkles.
- **Refill Function:** If you forget an item, press the 'Pause' button to add more laundry during the initial stages of a cycle.
- **My AEG Care App:** Download the app to your smartphone, connect it to your washing machine via WiFi, and follow the in-app instructions for remote control and program assistance.

Starting a Program:

Press the 'Start/Pause' button to begin the selected wash program.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Exterior:

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser:

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing of the drawer with a brush.

Cleaning the Drum:

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) every few months to prevent odor and residue buildup.

Cleaning the Drain Filter:

Locate the drain filter at the bottom front of the machine. Place a shallow container underneath to catch any water. Unscrew the filter slowly, clean it of lint and debris, then screw it back in tightly.

Aqua Control System:

The machine is equipped with an Aqua Control System for full water protection. Regularly check the inlet hose for any signs of damage or leaks.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected; 'Start/Pause' not pressed.	Check power connection; ensure door is latched; select a program; press 'Start/Pause'.
No water entering machine	Water tap closed; inlet hose kinked; water supply interrupted.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten drain hose; clean drain filter.
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Adjust feet to level machine; ensure transport bolts are removed; redistribute laundry.
Error code on display	Specific malfunction detected.	Refer to the full manual for specific error code meanings or contact service.

7. SPECIFICATIONS

Feature	Detail
Brand	AEG
Model Number	LR8E75490
Capacity	9 Kilograms
Max Spin Speed	1400 RPM
Energy Efficiency Class	A
Annual Energy Consumption	49 Kilowatt Hours Per Year
Noise Level (Spin)	75 Decibels
Product Dimensions (W x D x H)	25.98 x 23.5 x 33.35 inches
Item Weight	74.5 Kilograms (163.9 pounds)
Installation Type	Freestanding

Feature	Detail
Access Location	Front Load
Voltage	230 Volts
Control Type	Push Button
Special Features	Aqua Control System with Alarm, Automatic volume, Eco inverter motor, PowerClean program, Voice control via Google Assistant
Included Components	Drain and inlet hose

8. WARRANTY AND SUPPORT

Warranty Information:

Your AEG Series 8000 LR8E75490 Washing Machine comes with a standard manufacturer's warranty. Additionally, the Eco inverter motor is covered by a 10-year warranty upon registration. Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, spare parts, or service requests, please contact AEG customer support. Refer to the official AEG website or your purchase documentation for contact details specific to your region.