

ARCADE1UP PAC-A-302111

Arcade1Up PAC-MAN Deluxe Arcade Machine User Manual

Model: PAC-A-302111

INTRODUCTION

The Arcade1Up PAC-MAN Deluxe Arcade Machine brings classic arcade gaming into your home. This full-size, stand-up cabinet features a 17-inch screen and includes 14 iconic games, offering an authentic retro gaming experience with modern enhancements like Wi-Fi connectivity for leaderboards and a companion app.

Relive the golden era of arcade gaming with original licensed artwork, real-feel joysticks, and responsive buttons. The machine is designed for both solo play and competitive fun with friends and family.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembling and operating this product. Keep this manual for future reference.

- **WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.
- Ensure the machine is placed on a stable, level surface to prevent tipping.
- Keep away from water or excessive moisture.
- Do not attempt to modify or repair the machine yourself. Refer all servicing to qualified personnel.
- Unplug the machine from the power outlet before cleaning or when not in use for extended periods.

PACKAGE CONTENTS

Carefully unpack all components and verify that you have received the following items:

- Arcade Cabinet Panels (various pieces for assembly)
- 17-inch LCD Monitor
- Control Panel Assembly (with joystick and buttons)
- Light-up Marquee
- Power Adapter
- Hardware Pack (screws, cam locks, dowels, etc.)
- Instruction Manual



Image: The product packaging, showing the main box and an upright view of the assembled machine on the box.

ASSEMBLY INSTRUCTIONS

Assembly is required for this arcade machine. It is recommended to have at least two people for assembly due to the size and weight of some components. A Phillips head screwdriver is required (not included).

1. **Prepare Workspace:** Clear a spacious area for assembly. Lay out all panels and hardware, organizing them by type.
2. **Assemble Base:** Follow the detailed diagrams in the included instruction manual to connect the base panels using the provided hardware. Ensure all connections are secure.
3. **Install Side Panels:** Attach the main side panels, featuring the iconic PAC-MAN artwork, to the base. Pay close attention to orientation as indicated in the manual.
4. **Mount Monitor:** Carefully install the 17-inch LCD monitor into the designated slot. Connect all necessary cables as per the instructions.
5. **Attach Control Panel:** Secure the control panel assembly to the front of the machine. Ensure the joystick and

buttons are properly aligned and connected.

6. **Install Marquee:** Place the light-up marquee at the top of the cabinet and connect its power.
7. **Final Checks:** Double-check all screws and connections to ensure the cabinet is stable and all components are securely fastened.



Image: A fully assembled Arcade1Up PAC-MAN Deluxe Arcade Machine, showcasing its vibrant yellow cabinet and classic arcade design.

SETUP

1. **Power Connection:** Plug the provided power adapter into the machine's power input, then into a standard wall outlet.
2. **Initial Power On:** Locate the power switch (often on the control panel or rear of the machine) and turn the unit ON. The screen should illuminate, and the main game selection menu will appear.
3. **Wi-Fi Setup (Optional):**
 - Navigate to the "Settings" or "Network" option on the main menu using the joystick and buttons.

- Select your Wi-Fi network from the list of available networks.
- Enter your Wi-Fi password using the on-screen keyboard and control panel.
- Once connected, you can access online leaderboards and potential firmware updates.

4. **Companion App (Optional):** Download the Arcade1Up Companion App from your device's app store to connect with other gamers and track your scores.

OPERATING INSTRUCTIONS

Game Selection

From the main menu, use the joystick to navigate through the list of available games. Press the "Start Game" button (Player 1 or Player 2) to select and launch a game.

Controls



Image: A close-up view of the control panel, showing the red joystick, yellow "Live" button, white "Start Game" buttons, and other control buttons.

- **Joystick:** Used for character movement and menu navigation.
- **Start Game Buttons (Player 1 / Player 2):** Initiates a game for the respective player.
- **Action Buttons:** Used for in-game actions such as shooting, jumping, or other specific game functions.
- **OFF/ON Switch:** Powers the machine on or off.
- **Volume Control (-VOL+):** Adjusts the audio volume.
- **Return to Menu:** To exit a game and return to the main game selection menu, press and hold the Player 1 Start button for a few seconds.

Included Games

The PAC-MAN Deluxe Arcade Machine includes the following 14 classic titles:



Image: A visual representation of the 14 classic game titles included with the Arcade1Up PAC-MAN Deluxe Arcade Machine, such as PAC-MAN, Galaga, Dig Dug, and more.

- PAC-MAN
- PAC-MAN Plus

- PAC-Mania
- PAC-LAND
- Super PAC-MAN
- PAC & PAL
- Galaga
- Galaga '88
- Galaxian
- Dig Dug
- Dig Dug II
- Mappy
- Rompers
- Rolling Thunder

MAINTENANCE

To ensure the longevity and optimal performance of your arcade machine, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. For stubborn marks, a slightly damp cloth with mild, non-abrasive cleaner can be used, but avoid spraying directly onto the machine.
- **Dusting:** Regularly dust the control panel and screen to prevent buildup that could affect button responsiveness or screen clarity.
- **Storage:** If storing the machine for an extended period, unplug it and cover it to protect from dust and moisture.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading of the artwork and damage to electronic components.

TROUBLESHOOTING

If you encounter issues with your Arcade1Up machine, refer to the following common solutions:

Problem	Possible Cause	Solution
Machine does not power on.	Power cable not connected; outlet not working.	Ensure power cable is securely plugged into the machine and a working outlet. Check the power switch.
No image on screen.	Monitor cable loose; screen brightness too low.	Check monitor connections inside the cabinet. Adjust brightness settings if accessible.
No sound.	Volume too low; speaker connection loose.	Increase volume using the -VOL+ buttons. Check speaker connections.
Joystick or buttons unresponsive.	Loose connections; debris under buttons.	Ensure control panel connections are secure. Gently clean around buttons.
Cannot connect to Wi-Fi.	Incorrect password; network interference.	Double-check Wi-Fi password. Try moving the machine closer to the router or restarting the router.

If problems persist, please contact Arcade1Up Customer Support.

SPECIFICATIONS

Feature	Detail
Model Number	PAC-A-302111
Assembled Dimensions (D x W x H)	22.44" x 18.82" x 61" (approx. 57cm x 48cm x 155cm)
Weight	81 lbs (approx. 36.7 kg)
Screen Size	17-inch LCD
Number of Games	14 Classic Titles
Connectivity	Wi-Fi (for leaderboards and app)
Audio	Integrated Dual Speakers
Marquee	Light-up



Image: The Arcade1Up PAC-MAN Deluxe Arcade Machine shown with a person for scale, highlighting its 61-inch height and base

dimensions of 22.4 inches deep by 18.8 inches wide.

WARRANTY AND SUPPORT





Arcade1Up products are designed for quality and durability. For warranty information, product registration, or technical assistance, please visit the official Arcade1Up website or contact their customer support team.

Customer Support: For assistance, please refer to the contact information provided on the Arcade1Up website or within your product packaging.

Returns: This product may be eligible for 30-day easy returns. Please check with your retailer for specific return policies.

© 2025 ARCADE1UP. All rights reserved. PAC-MAN™ & © BANDAI NAMCO Entertainment Inc.

Related Documents - PAC-A-302111

	<p>Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>
	<p>Arcade1Up Legacy Edition Owner's Manual - Safety, Controls, and Troubleshooting</p> <p>Official owner's manual for the Arcade1Up Legacy Edition home arcade machine. Provides essential safety precautions, game control explanations, troubleshooting tips, installation guidelines, and technical specifications.</p>
	<p>Arcade1Up Time Crisis Deluxe Owner's Manual: Setup, Controls, and Safety Guide</p> <p>Comprehensive owner's manual for the Arcade1Up Time Crisis Deluxe arcade machine. Learn about safety precautions, installation, game controls for Time Crisis, Point Blank, and Steel Gunner, troubleshooting tips, and product specifications.</p>
	<p>Arcade1Up Pac-Man 40th Edition 12-in-1 Head-to-Head Owners Manual</p> <p>Owners manual for the Arcade1Up Pac-Man 40th Edition 12-in-1 Head-to-Head arcade machine. Includes safety warnings, game settings, and control descriptions.</p>



Arcade1Up-PacMan
User Manual • Owner's manual •
Gebrauchsanleitung • Handleiding •
Bedienungsanleitung

[Arcade1Up Pac-Man Jr. User Manual](#)

User manual for the Arcade1Up Pac-Man Jr. arcade machine, covering setup, safety precautions, game modes, controls, and anti-tip device installation.



[Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting](#)

Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.