

EUR7651110, EUR7651120, EUR76280030

Generic Replacement Remote Control User Manual

For Panasonic TV/Audio/Projector Models: EUR7651110, EUR7651120, EUR76280030

INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed to operate various Panasonic TV, Audio, and Projector models, including EUR7651110, EUR7651120, and EUR76280030. This remote control offers essential functions for daily use. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be supported.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

No programming or setup is required for this replacement remote control; it is ready for use once batteries are installed.



Image: Back view of the remote control, illustrating the location of the battery compartment. The design features a contoured grip.

OPERATING INSTRUCTIONS

This remote control provides standard functions for your Panasonic device. Point the remote directly at the device's infrared receiver for optimal performance.



Image: Front view of the replacement remote control, displaying its array of buttons for power, input, navigation, channel, volume, and playback controls.

Key Functions:

- **Power Button (●):** Turns the device on or off.
- **Input/AV Button:** Selects the input source (e.g., HDMI 1, AV, Component).
- **Channel Buttons (CH +/-):** Changes channels up or down.
- **Volume Buttons (VOL +/-):** Adjusts the volume level.
- **Mute Button:** Silences the audio.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Menu Button:** Accesses the device's main menu.
- **Guide Button:** Displays the electronic program guide (if supported by the device).
- **Return/Exit Button:** Goes back to the previous screen or exits a menu.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For controlling media playback on compatible devices.

Note: As a replacement remote, certain advanced or specific functions present on your original remote (e.g., specific smart TV features, advanced picture settings) may not be fully functional or available. This is not indicative of a defect.

MAINTENANCE

- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are installed correctly with the correct polarity.
- Replace old batteries with new ones.
- Make sure there are no obstructions between the remote control and the device's infrared sensor.
- Point the remote directly at the device.

- **Some functions do not work:**

- This is a replacement remote control. Some advanced or specific functions of your original device's remote may not be supported. This is expected behavior and not a defect.
- Verify that the function you are trying to use is a standard function typically found on universal remotes.

- **Intermittent operation:**

- Check battery levels; replace if low.
- Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

Model Compatibility	Panasonic EUR7651110, EUR7651120, EUR76280030 (and similar models)
Wireless Communication	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Material	ABS/Plastic
Color	Black or White (color may vary)
Special Feature	Ergonomic design
Compatible Devices	TV, Audio/Video Players, Projectors, Home Theater, Set Top Box, Stereo System

SUPPORT

For further assistance or inquiries regarding this replacement remote control, please contact the seller or manufacturer directly. Providing your original remote's part number or your device's model number may help in resolving specific compatibility questions.

© 2023 Generic. All rights reserved.