

AVH-P5000DVD, AVH-P5100DVD, AVH-P5150DVD, AVH-P5200DVD

Generic Replacement Remote Control Instruction Manual

For Pioneer AVH-P5000DVD, AVH-P5100DVD, AVH-P5150DVD, AVH-P5200DVD

1. INTRODUCTION

This manual provides instructions for the use and care of your new generic replacement remote control. This remote is designed to operate various functions of compatible Pioneer AVH-P series car audio/video receivers, specifically models AVH-P5000DVD, AVH-P5100DVD, AVH-P5150DVD, and AVH-P5200DVD. Please read this manual thoroughly before use to ensure proper operation.

Note: As a replacement remote, some advanced or specific functions of your original unit's remote may not be supported or may operate differently. This is not indicative of a product defect.

2. PRODUCT OVERVIEW

The remote control features a compact and ergonomic design for comfortable handling. It includes essential buttons for controlling your compatible Pioneer car audio/video receiver.



Image 2.1: Front view of the generic replacement remote control. The remote is dark gray with light gray button labels. Key buttons include Volume, Band/ESC, ATT, Disc/P.CH, Track/Seek, Select, Function, Audio, SRC, Disp, and SCAL. The bottom of the remote has 'MADE IN CHINA' and 'REMOTE CONTROLLER' printed on it.

Button Functions:

- **VOLUME +/-:** Adjusts the audio output level.
- **BAND/ESC:** Changes radio bands or exits a menu/function.
- **ATT (Attenuate):** Mutes or reduces audio volume temporarily.
- **DISC/P.CH:** Selects disc or program channel.
- **TRACK/SEEK (◀▶):** Skips tracks/chapters or seeks radio stations.
- **SELECT (Up/Down/Left/Right/Center):** Navigates through menus and confirms selections.
- **FUNCTION:** Accesses various function settings.
- **AUDIO:** Accesses audio settings.
- **SRC (Source):** Changes the input source (e.g., Radio, CD, USB).
- **DISP (Display):** Changes display information or mode.
- **SCAL (Scroll):** Scrolls through lists or text.

3. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Important: Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

4. OPERATING INSTRUCTIONS

To operate your Pioneer AVH-P series receiver with this remote control, point the remote directly at the infrared sensor on your receiver. Ensure there are no obstructions between the remote and the receiver.

Basic Operations:

- **Power On/Off:** The remote typically does not have a dedicated power button for the main unit. Use the power button on your Pioneer receiver to turn it on or off.
- **Volume Control:** Press **VOLUME +** to increase volume, and **VOLUME -** to decrease volume.
- **Source Selection:** Press the **SRC** button to cycle through available input sources (e.g., Radio, CD, DVD, USB, AUX).
- **Track/Chapter Navigation:** When playing media, use the **TRACK/SEEK** ◀ or ▶ buttons to skip to the previous or next track/chapter.
- **Radio Tuning:** In radio mode, use **TRACK/SEEK** ◀ or ▶ to seek for stations. Use **BAND/ESC** to change radio bands (FM1, FM2, AM).
- **Menu Navigation:** Use the **SELECT** directional arrows (Up, Down, Left, Right) to navigate through on-screen menus. Press the center **SELECT** button to confirm a selection.
- **Mute/Attenuate:** Press the **ATT** button to temporarily mute or reduce the audio volume. Press it again to restore.
- **Display Information:** Press the **DISP** button to change the information shown on the receiver's display.

5. MAINTENANCE

Cleaning:

Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or labels.

Battery Care:

Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time. Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Check for any obstructions between the remote and the receiver's IR sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the receiver.

- **Some functions do not work:**

- This is a generic replacement remote. It may not support all functions of your original Pioneer remote. This is normal for replacement units.
- Verify that the function you are trying to use is available on your specific Pioneer AVH-P model.

7. SPECIFICATIONS

| | |
|--|--|
| Brand | Generic |
| Manufacturer | e-remotecontrol |
| Compatible Pioneer Models | AVH-P5000DVD, AVH-P5100DVD, AVH-P5150DVD, AVH-P5200DVD |
| Compatible Devices | DVD/Blu-ray Player, Home Theater, Set Top Box, Stereo System, Television (when connected to compatible Pioneer unit) |
| Batteries Required | 2 x AAA batteries |
| Special Feature | Ergonomic design |
| Color | Black or white (color may vary) |
| Max Number of Supported Devices | 1 (the specific Pioneer unit) |

8. WARRANTY AND SUPPORT

As a generic replacement product, this remote control typically does not come with a separate manufacturer's warranty. For any issues or returns, please refer to the retailer's return policy where the product was purchased. For purchases made on Amazon, a 30-day return policy is generally applicable.

For further assistance regarding your Pioneer AVH-P series receiver, please consult the original manual for your specific unit or contact Pioneer customer support.