

Lovskoo ccc-092

Lovskoo Digital Camera Model ccc-092 Instruction Manual

Model: ccc-092

INTRODUCTION

Thank you for choosing the Lovskoo Digital Camera, Model ccc-092. This compact and versatile camera is designed for ease of use, offering 18-megapixel photos and 1080p video recording with an 8X digital zoom. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using your camera.

WHAT'S IN THE BOX

Upon unpacking, please verify that all items listed below are included:

- 1 × Lovskoo Digital Camera
- 1 × Charging/Data Cable
- 1 × Instruction Manual

PRODUCT OVERVIEW



Figure 1: Front view of the Lovskoo Digital Camera. This image displays the camera's lens, built-in flash, and overall compact design. The dimensions are approximately 3.82 inches wide, 2.32 inches high, and 0.79 inches deep.

18 megapixel, digital camera

20 kinds of filters/8x zoom/2.7-inch color screen



Figure 2: Back view of the camera. This image highlights the 2.7-inch TFT LCD screen for viewing photos and videos, along with the navigation and function buttons for camera operation.

Support connecting computer for printing



Figure 3: Side view of the camera. This image shows the USB port, which is used for charging the camera and connecting it to a computer for data transfer or printing.



Figure 4: Selfie mirror detail. A small mirror is located on the front of the camera, adjacent to the lens, to assist with framing self-portraits.

SETUP

1. Charging the Battery

Connect the camera to a power source using the provided USB charging cable. The charging indicator light will illuminate during charging and turn off when the battery is fully charged. Ensure the camera is fully charged before first use.

2. Inserting a Memory Card

This camera supports SD cards up to 32GB (not included). Locate the memory card slot, typically on the side or bottom of the camera. Insert the SD card with the metal contacts facing the correct direction until it clicks into place. To remove, press the card gently until it springs out.

3. Initial Power On

Press and hold the power button to turn on the camera. The LCD screen will display the startup sequence. You may be prompted to set the date and time upon first use. Follow the on-screen instructions to configure these settings.

OPERATING INSTRUCTIONS

1. Taking Photos

1. **Power On:** Turn on the camera by pressing the power button.
2. **Select Mode:** Use the mode dial or menu to select photo mode.
3. **Frame Your Shot:** Use the 2.7-inch LCD screen to compose your image.
4. **Zoom:** Use the zoom controls (W/T) to adjust the 8X digital zoom.
5. **Capture:** Press the shutter button halfway to focus, then press fully to take the picture.
6. **Selfie Function:** The camera features a selfie mirror. Activate the self-timer (2 or 10 seconds) for self-portraits.

2. Recording Videos

1. **Select Mode:** Switch the camera to video recording mode.
2. **Start Recording:** Press the record button (often marked with a red dot) to begin recording.
3. **Stop Recording:** Press the record button again to stop.

3. Playback

In playback mode, you can view your captured photos and videos on the LCD screen. Use the navigation buttons to scroll through your media. Press the 'OK' or 'Play' button to view videos.

4. Connecting to a Computer

Connect the camera to your computer using the USB cable. The camera will appear as a removable disk. You can then transfer photos and videos to your computer for storage, editing, or printing.

MAINTENANCE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for optical surfaces. Avoid using harsh chemicals.
- **Battery Care:** Store the camera with a partially charged battery if not used for extended periods. Avoid extreme temperatures.
- **Storage:** Keep the camera in a dry, dust-free environment away from direct sunlight.
- **Memory Card:** Format the memory card periodically to maintain optimal performance and free up space. Back up all important data before formatting.

TROUBLESHOOTING

Problem	Possible Solution
Camera does not turn on.	Ensure the battery is fully charged. Check if the battery is inserted correctly.
Cannot take photos/videos.	Check if a memory card is inserted and has sufficient free space. Ensure the camera is in the correct mode.
Images are blurry.	Ensure the lens is clean. Hold the camera steady. Check lighting conditions.
Camera not recognized by computer.	Ensure the USB cable is securely connected. Try a different USB port or cable. Restart both camera and computer.

SPECIFICATIONS

Feature	Detail
Brand	Lovskoo
Model Number	ccc-092
Image Sensor	5M CMOS Sensor
Effective Still Resolution	18 MP
Video Resolution	1920×1080P FHD, 1280X720P HD
Digital Zoom	8X
LCD Display	2.7 Inch TFT LCD
Lens	F3.0 f=7.45 Wide Angle
External Memory	SD Card (up to 32GB, excluded)
File Format (Still Image)	JPEG
File Format (Video)	AVI
Self Timer	2 Seconds, 10 Seconds
Shooting Modes	Automatic, Portrait, Timelapse
Connectivity	USB
Item Weight	0.25 Kilograms
Dimensions (D x W x H)	0.79"D x 3.82"W x 2.32"H

WARRANTY AND SUPPORT

For warranty information, please refer to the product packaging or contact the retailer where the product was purchased. If you encounter any issues or require technical assistance, please visit the official Lovskoo website or contact their customer support. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question