

Keebar XH-W081-BW

Gooseneck Electric Kettle

MODEL: XH-W081-BW

Brand: Keebar

INTRODUCTION

Thank you for choosing the Keebar Gooseneck Electric Kettle. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This 0.8L capacity electric kettle is crafted from high-quality stainless steel, ensuring durability and a pure water taste. With 1000W quick heating, it rapidly prepares water for your coffee or tea. Key features include an automatic shut-off for safety and a precise gooseneck spout for controlled pouring, making it an ideal companion for pour-over coffee enthusiasts.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.
- Do not overfill the kettle beyond the maximum fill line to prevent boiling water from overflowing.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Keebar Gooseneck Electric Kettle:



Figure 1: Keebar Gooseneck Electric Kettle (Matte Black)



Figure 2: Key Components - Stainless Steel Lid,

Stainless Steel Spout, and Stainless Steel Interior.

- **Gooseneck Spout:** Designed for precise and controlled pouring, ideal for pour-over coffee.
- **Kettle Body:** Made from 100% food-grade SUS 304 stainless steel with a matte black finish and wood-like grain handle.
- **Lid:** Secure, removable lid for easy filling and cleaning.
- **Power Base:** Provides power to the kettle and features a power switch.
- **Handle:** Ergonomically designed with a wood-like grain finish for comfortable grip.

SPECIFICATIONS

Feature	Description
Brand	Keebar
Model Name	XH-W081-BW
Capacity	0.8 Liters (0.8 Quarts)
Power	1000W
Material	100% Stainless Steel (SUS 304)
Special Features	Boil Dry Protection, Auto Shut-Off, Rapid Boil, Wood-like Grain Finish Handle
Product Dimensions	8.38"L x 5.12"W x 10.53"H
Item Weight	2.2 pounds
Care Instructions	Hand Wash

SETUP

Before First Use:

1. Unpack the kettle and all accessories. Remove any packaging materials, stickers, or labels.
2. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle body or power base in water.
3. Fill the kettle with clean water up to the MAX fill line.
4. Boil the water (refer to Operating Instructions).
5. Discard the boiled water. Repeat this process 2-3 times to remove any manufacturing residues and ensure a clean taste.

Placement:

- Place the power base on a dry, flat, stable, and heat-resistant surface.
- Ensure the kettle is placed away from the edge of the counter to prevent accidental tipping.
- Keep the kettle and power cord away from water sources, heat sources, and direct sunlight.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Remove the lid and fill the kettle with fresh, cold water. Do not fill below the MIN mark or above the MAX mark (0.8L). Ensure the lid is securely placed back on the kettle.
2. **Place on Base:** Place the kettle firmly onto the power base.
3. **Connect Power:** Plug the power cord into a standard electrical outlet.
4. **Start Boiling:** Press the power switch located on the side of the kettle. The indicator light will illuminate, indicating that the kettle is heating.
5. **Automatic Shut-Off:** The kettle will automatically turn off once the water reaches a rolling boil. The indicator light will extinguish, and the power switch will pop up.
6. **Pouring:** Carefully lift the kettle from the base. The gooseneck spout allows for a slow and steady water flow, providing optimal control for pour-over coffee or tea.
7. **Re-boiling:** If you need to re-boil water, wait a few moments for the kettle to cool slightly before pressing the power switch again.



Figure 3: Precise pouring with the gooseneck spout.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

Daily Cleaning:

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- The kettle interior should be hand washed. Rinse the interior with clean water after each use.
- Do not immerse the kettle body or the power base in water or any other liquid.

Descaling:

Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or as needed).

1. Fill the kettle with a solution of equal parts white vinegar and water, or use a commercial descaling solution according to its instructions.

2. Let the solution soak in the kettle for at least 30 minutes, or boil it if the scale is severe.
3. After soaking/boiling, discard the solution and rinse the kettle thoroughly with fresh water several times to remove any residue and vinegar smell.
4. For stubborn deposits, gently scrub the interior with a soft brush or sponge.



Figure 4: Internal steam collector for auto shut-off and steam reduction.

The kettle features a food-grade silicone steam collector inside, which helps detect water vapor for the auto shut-off function and reduces steam release.

TROUBLESHOOTING

If you encounter issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; Power switch not pressed; Kettle not properly seated on base; No power at outlet.	Ensure plug is firmly in outlet; Press the power switch; Re-seat kettle on base; Check household circuit breaker or try another outlet.
Kettle turns off before boiling.	Kettle has limescale buildup; Kettle was lifted from base during operation.	Descale the kettle as per Maintenance section; Ensure kettle remains on base until boiling is complete.
Water tastes strange or has residue.	First use residues; Limescale buildup.	Perform initial cleaning and boiling cycles; Descale the kettle.
Kettle leaks.	Lid not properly closed; Overfilled.	Ensure lid is securely closed; Do not fill above the MAX line.

If the problem persists after trying these solutions, please contact Keebar customer support.

WARRANTY AND SUPPORT

Keebar is committed to providing high-quality products and excellent customer service. Your Keebar Gooseneck Electric Kettle is covered by a **1-year warranty** from the date of purchase.

This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

For any questions, concerns, or support needs regarding your product, please do not hesitate to contact

Keebar customer service. We offer 24/7 after-sales support to assist you.

Contact Information: Please refer to the contact details provided on the product packaging or visit the official Keebar website for the most up-to-date support information.

© 2025 Keebar. All rights reserved.