

[manuals.plus](#) /› [DreamSky](#) /› [DreamSky DS2201 Wooden Digital Alarm Clock User Manual](#)

## DreamSky DS2201

# DreamSky DS2201 Wooden Digital Alarm Clock User Manual

Model: DS2201 | Brand: DreamSky

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DreamSky DS2201 Wooden Digital Alarm Clock. Designed for bedrooms, this electric desk clock features large, easy-to-read numbers, a convenient USB charging port, and adjustable settings for alarm volume and display brightness. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your device.

## 2. KEY FEATURES

- Large Digital Display:** Features 1.8-inch large numbers for clear visibility from a distance.
- Adjustable Brightness:** Offers 5 levels of display brightness, including an 'OFF' option, to suit various lighting conditions.
- Battery Backup:** Requires 2 AAA alkaline batteries (not included) to maintain alarm function during power outages. The display will not illuminate when operating on battery power alone.
- Customizable Alarm:** Provides 5 levels of adjustable alarm volume, suitable for both light and heavy sleepers. The alarm sounds for 2 minutes.
- Snooze Function:** A dedicated snooze button on the top allows for an additional 9 minutes of sleep.
- USB Charging Port:** Includes a convenient USB port for charging smart devices and other gadgets.
- Daylight Saving Time (DST):** Equipped with a manual DST button for easy time adjustments.
- Wood Décor Design:** A sleek wooden finish integrates well with various room aesthetics.

## 3. PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- DreamSky DS2201 Wooden Digital Alarm Clock
- 5V/1A Power Adapter
- User Manual (this document)

## Packing Include



Figure 3.1: Package contents including the alarm clock, power adapter, and user manual.

## 4. SETUP

### 4.1 Power Connection

1. Connect the provided 5V/1A power adapter to the DC 5V port on the back of the alarm clock.
2. Plug the power adapter into a standard electrical outlet. The clock display will illuminate.

## Runs on Electricity for Normal Time Display

an extra USB port helps you charge your electric device



Figure 4.1: Powering the clock and using the USB charging port.

### 4.2 Battery Installation (Backup)

For alarm backup during power outages, install 2 AAA alkaline batteries (not included) into the battery compartment on the back of the clock. The display will not be active when running on battery power alone; only the alarm function is maintained.

# Backup Battery Triggers the Alarm During Power Outage

take no risk of missing your vital schedule!



Figure 4.2: Battery compartment for alarm backup.

## 5. OPERATING INSTRUCTIONS

### 5.1 Time Setting

1. Press the **TIME SET** button on the back of the clock. The hour digits will flash.
2. Use the + and - buttons to adjust the hour.
3. Press **TIME SET** again to set the minutes. The minute digits will flash.
4. Use the + and - buttons to adjust the minutes.
5. Press **TIME SET** a third time to confirm and exit time setting mode.
6. To switch between 12-hour and 24-hour format, press the **12/24HR** button.

### 5.2 Alarm Setting

1. Press the **ALARM SET** button. The alarm hour digits will flash.

2. Use the + and - buttons to adjust the alarm hour.
3. Press **ALARM SET** again to set the alarm minutes. The minute digits will flash.
4. Use the + and - buttons to adjust the alarm minutes.
5. Press **ALARM SET** a third time to confirm and exit alarm setting mode.
6. To turn the alarm ON or OFF, press the **ON/OFF** button. An alarm icon will appear on the display when the alarm is active.

### 5.3 Snooze Function

When the alarm sounds, press the **SNOOZE** button located on the top of the clock to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes. To turn off the alarm for the day, press any button on the back of the clock.



Figure 5.1: Snooze button and alarm volume control.

### 5.4 Brightness Adjustment

Press the **DIMMER** button on the back of the clock to cycle through 5 levels of brightness (L01 to L05) and an 'OFF' option for the display.



Figure 5.2: Display brightness levels.

### 5.5 Volume Adjustment

Use the **VOL+** and **VOL-** buttons on the back of the clock to adjust the alarm volume across 5 available levels.

### 5.6 Daylight Saving Time (DST)

To activate or deactivate Daylight Saving Time, press the **DST ON/OFF** button. When activated, the time will advance by one hour, and 'DST' will appear on the display. Press again to revert to standard time.

### 5.7 USB Charging Port

The USB port on the back of the clock can be used to charge compatible smart devices. Simply connect your device's USB charging cable to the port.

## 6. MAINTENANCE

- Clean the clock's surface with a soft, dry cloth.

- Avoid using abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or dim.	Power adapter not connected; brightness set to OFF or lowest level; running on battery backup.	Ensure the power adapter is securely plugged in. Press the <b>DIMMER</b> button to adjust brightness. Remember, the display does not light up when on battery backup.
Alarm does not sound.	Alarm is not activated; alarm volume is too low.	Press the <b>ON/OFF</b> button to activate the alarm (check for alarm icon on display). Adjust volume using <b>VOL+</b> .
Time is incorrect.	Time not set correctly; DST setting incorrect.	Follow instructions in section 5.1 to set the time. Check DST setting using the <b>DST ON/OFF</b> button.
USB charging not working.	Device not compatible; cable faulty; clock not powered.	Ensure your device is compatible with USB charging. Try a different USB cable. Verify the clock is connected to AC power.

## 8. SPECIFICATIONS

- **Brand:** DreamSky
- **Model:** DS2201
- **Display Type:** Digital
- **Power Source:** Corded Electric
- **Product Dimensions:** 5.96"W x 2.7"H
- **Material:** Wood
- **Item Weight:** 11.1 ounces
- **Batteries:** 2 AAA batteries required (not included, for alarm backup only)
- **Connectivity:** USB

## 9. WARRANTY AND SUPPORT

Your DreamSky DS2201 Wooden Digital Alarm Clock comes with a **1-year replacement warranty**.

For customer support or inquiries, please contact:

Email: [info@dreamsky4u.com](mailto:info@dreamsky4u.com)



### Related Documents - DS2201

	<p><a href="#"><b>Dreamsky DS2203 Wireless Charging Alarm Clock Instruction Manual</b></a>  User manual for the Dreamsky DS2203 Wireless Charging Alarm Clock, detailing setup, time and alarm settings, DST, wireless charging, and button functions.</p>
	<p><a href="#"><b>DreamSky QL-955 Portable AM/FM Radio User Manual</b></a>  Comprehensive user manual for the DreamSky QL-955 portable AM/FM radio, detailing setup, operation, specifications, troubleshooting, battery safety, warranty, and FCC compliance.</p>
	<p><a href="#"><b>DreamSky DS226 FM-AM Radio with Bluetooth - Instruction Manual</b></a>  Instruction manual for the DreamSky DS226 FM-AM Radio with Bluetooth. Learn how to operate, set up, and troubleshoot this portable radio, including safety precautions and specifications.</p>
	<p><a href="#"><b>DS Accelerator Pedal Position Sensor (APP) - Technical Guide and Installation</b></a>  Technical newsletter and installation guide for the DS Accelerator Pedal Position Sensor (APP), covering principles, testing procedures, and installation for automotive applications.</p>