



Manuals.plus /

› FITNMORE /

› PARKSIDE® 20V Cordless Pruner PAAS 20-Li Instruction Manual

FITNMORE PAAS20LI

PARKSIDE® 20V Cordless Pruner PAAS 20-Li Instruction Manual

Model: PAAS20LI

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your PARKSIDE® 20V Cordless Pruner PAAS 20-Li. Please read these instructions carefully before using the device and keep them for future reference. This product is designed for cutting branches up to 28 mm in soft wood and 15 mm in hard wood.

Important Safety Notice: Always refer to the original manufacturer's safety and operating instructions provided with the product for comprehensive safety guidelines.

PACKAGE CONTENTS

Upon unpacking, ensure all items listed below are present and undamaged. If any parts are missing or damaged, contact your retailer.

- 1x PARKSIDE® 20V Cordless Pruner PAAS 20-Li
- 1x Replaceable Bypass Blade
- 1x Storage Case
- 1x Blade Protection Cover
- 1x Allen Key with Phillips Screwdriver
- 1x Flat Wrench
- 1x FITNMORE Keychain (Bottle Opener)

Note: Battery and charger are NOT included. A 20V battery is required for operation.



Image: The PARKSIDE 20V Cordless Pruner PAAS 20-Li, showing its ergonomic design and cutting blade.



Image: A black FITNMORE branded keychain which also functions as a bottle opener, included as an accessory.

SETUP

1. Battery Installation:

Ensure the pruner is switched off. Insert a fully charged 20V battery (not included) into the battery compartment until it clicks into place. To remove, press the release button and slide the battery out.

2. Blade Protection Cover:

Remove the blade protection cover before use. Always reattach it when the pruner is not in use or during storage.

3. Initial Inspection:

Before first use, inspect the blade for any damage or dullness. Ensure all screws are tight and the device is free from obstructions.

OPERATING INSTRUCTIONS

1. **Powering On:**

Press and hold the safety switch, then press the ON/OFF switch. The two-color LED indicator will illuminate, indicating readiness for operation.

2. **Pruning Technique:**

Position the branch to be cut between the bypass blades. Ensure the branch fits completely within the blade opening. Press the trigger to close the blades and make a clean cut. For optimal plant health, make clean cuts close to the main stem or branch collar.

- Maximum cutting capacity: 28 mm for soft wood, 15 mm for hard wood.

3. **Powering Off:**

Release the ON/OFF switch. The LED indicator will turn off. Always engage the safety switch and attach the blade protection cover after use.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pruner.

- **Blade Cleaning:**

After each use, clean the blades with a damp cloth to remove sap and debris. For stubborn residue, use a suitable blade cleaner. Ensure the blades are dry before storage.

- **Blade Sharpening:**

Periodically sharpen the bypass blade to maintain cutting efficiency. Use a fine-grit sharpening stone or file, following the original blade angle. Alternatively, replace the blade with a genuine PARKSIDE® replacement blade.

- **Lubrication:**

Apply a light machine oil to the pivot points and blade surfaces regularly to ensure smooth operation and prevent rust.

- **Storage:**

Store the pruner in its storage case with the blade protection cover attached, in a dry, secure place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pruner does not turn on.	Battery not inserted correctly or discharged. Safety switch not engaged.	Ensure battery is fully charged and correctly inserted. Press and hold the safety switch before pressing the ON/OFF switch.
Poor cutting performance.	Dull or dirty blade. Cutting branches exceeding capacity.	Clean and sharpen or replace the blade. Do not attempt to cut branches thicker than specified limits.
Blades jam during cutting.	Branch too thick or material too hard.	Release the trigger, remove the branch, and try cutting a smaller section or use a different tool for thicker branches.

SPECIFICATIONS

Feature	Detail
Model Number	PAAS20LI
Operating Type	Battery-powered
Battery Voltage	Approx. 20 V
Cutting Capacity (Soft Wood)	Up to 28 mm
Cutting Capacity (Hard Wood)	Up to 15 mm
Materials	Steel, Plastic (Softgrip handle)
Product Dimensions (L x W x H)	29 x 11.5 x 0.1 cm
Item Weight	957 Grams
Blade Type	Bypass
Hand Orientation	Ambidextrous

WARRANTY AND SUPPORT

This product is supplied by FITNMORE. The device itself is an original product of the Parkside brand. There is no cooperation, license, or other links between FITNMORE and the Parkside brand.

For warranty claims or technical support, please contact your retailer or the FITNMORE customer service directly. Keep your proof of purchase for any warranty inquiries.

Information regarding spare parts availability is currently unavailable.