

[Manuals.plus](#) /

› [OLEVS](#) /

› OLEVS OL-S-2875J-MH Men's Quartz Chronograph Watch User Manual

OLEVS OL-S-2875J-MH

OLEVS OL-S-2875J-MH Men's Quartz Chronograph Watch User Manual

Model: OL-S-2875J-MH

PRODUCT OVERVIEW

The OLEVS OL-S-2875J-MH is an analog quartz watch designed for men, featuring a multifunction chronograph, moon phase display, and luminous hands. It is equipped with a durable silicone band and is water-resistant for daily use.



Front view of the OLEVS OL-S-2875J-MH watch in rose-black, showcasing the dial, subdials, and silicone band.

COMPONENTS AND CONTROLS

Familiarize yourself with the watch's components and controls before operation.

- **Crown (A):** Used for setting time and date.
- **Pusher (B):** Activates/stops the chronograph.
- **Pusher (C):** Resets the chronograph.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Subdials:** Chronograph minute, chronograph second, and 24-hour/moon phase display.
- **Date Window:** Displays the current date.
- **Silicone Band:** Comfortable and durable strap.

Tribute to Classic Series

Fashionable Men's Watches



Illustration of the watch's crown and pushers, indicating their functions for time, date, and chronograph adjustments.

SETUP INSTRUCTIONS

1. Setting the Time

1. Pull the crown (A) out to position 2.
2. Turn the crown (A) to move the hour and minute hands to the desired time. Ensure the 24-hour subdial (if applicable) is correctly aligned for AM/PM.
3. Push the crown (A) back to position 0 to start the watch.

2. Setting the Date

1. Pull the crown (A) out to position 1.
2. Turn the crown (A) clockwise or counter-clockwise (depending on the model) to adjust the date in the date window.
3. Once the correct date is set, push the crown (A) back to position 0.
4. **Important:** Avoid setting the date between 9:00 PM and 3:00 AM, as this can interfere with the automatic date change mechanism. If you need to set the date during this period, first set the time outside this range, adjust the date, then reset the time.

OPERATING INSTRUCTIONS

1. Using the Chronograph (Stopwatch)

1. To start the chronograph: Press pusher (B). The chronograph second hand will begin to move.
2. To stop the chronograph: Press pusher (B) again. The elapsed time will be displayed on the chronograph subdials.
3. To reset the chronograph: After stopping, press pusher (C). All chronograph hands will return to their zero positions.

2. Moon Phase Display

The watch features a 24-hour subdial that also indicates the moon phase. This subdial operates in conjunction with the main time setting. Ensure the main time is set correctly (AM/PM) for an accurate moon phase display.

3. Luminous Function

The hands and hour markers are coated with luminous material. Exposure to light (natural or artificial) will charge this material, allowing the time to be read in low-light conditions. The duration and intensity of luminescence depend on the exposure time and light source.

MAINTENANCE

- **Cleaning:** Wipe the watch case and band regularly with a soft, dry cloth. For the silicone band, a mild soap solution and water can be used, followed by thorough drying.
- **Water Resistance:** This watch is water-resistant to 30 meters (3ATM). This means it is suitable for daily use, splashes, and brief immersion in water. **Do not wear the watch while showering, bathing, or swimming in hot water, as steam and hot water can compromise the seals. Do not operate the crown or pushers while the watch is wet.**
- **Battery Replacement:** The watch uses a quartz movement powered by a battery. When the watch stops or the second hand moves erratically, the battery may need replacement. This should be performed by a qualified watch technician to ensure proper sealing and function.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes, as this can affect accuracy and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, which can affect the quartz movement's accuracy.

Your browser does not support the video tag.

Official OLEVS video demonstrating the watch's water resistance and luminous features.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery by a professional watch technician.
Time is incorrect.	Time not set correctly; exposure to strong magnetic fields.	Reset the time according to the "Setting the Time" instructions. Keep the watch away from magnets.
Date does not change or changes at the wrong time.	Date set during restricted hours (9 PM - 3 AM); incorrect time setting (AM/PM).	Adjust the date outside the restricted hours. Ensure the time is set correctly for AM/PM.
Chronograph hands do not reset to zero.	Requires calibration.	Consult a watch technician for calibration.
Moisture inside the watch.	Water resistance compromised (e.g., crown/pushers operated underwater, exposure to hot water/steam).	Immediately take the watch to a professional watch technician. Do not attempt to open it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	OL-S-2875J-MH
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	42 millimeters
Case Thickness	10 millimeters

Feature	Detail
Band Material	Silicone
Band Width	20 millimeters
Water Resistance Depth	30 meters (3ATM)
Crystal Type	Hardlex
Special Features	Chronograph, Moon Phase, Luminous Hands, Date Display

WARRANTY AND SUPPORT

This OLEVS watch is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact OLEVS customer support. For technical assistance or service, please reach out to the retailer or an authorized service center.

Your browser does not support the video tag.

Official OLEVS video showcasing the watch's design and features.

© 2024 OLEVS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

